

Particle Size Analyzers

Types :

990 ref : 1061075, 1061076 & 1061077

1090 ref : 1061078, 1061079 & 1061080

1190 ref : 1061081, 1061082 & 1061083

Versions L, D and LD



User manual



Code: NT-1061083-41

Copyright © 2008 by CILAS

First edition, French-language version.

All rights reserved. Reproduction of all or part of this document by any means whatsoever is forbidden without written permission from CILAS.

The information in this manual is correct to our knowledge.

Because research and development is undertaken on a continual basis, the specifications of this product may be modified at any time without notice.

Microsoft and *Windows* are registered trademarks of *Microsoft Corporation* in the United States and in other countries.

CILAS – particle size analysis after-sales service

8 Avenue Buffon,

B. P. 6319,

Z.I. La Source,

45063 ORLEANS CEDEX

FRANCE

Tel.: + 33 (0)2 38 64 59 00

Fax: + 33 (0)2 38 76 59 07

E-Mail: info.particle@cilas.com

Updates

This page presents the Background history of the *installation manual* for the *CILAS* particle size analyzer.

This version is published in September 2001 under the reference NT-1053192-41.

The following table lists updates to each version:

Version no.	Date	Purpose
1	2001	Creation.
2	September 2004	Complete update.
4	March 2007	Update of software <i>Size expert</i> .
5	September 2008	Complete update and reference NT-1061083-40

A new version number is assigned each time there is an update, and the following information items are listed in this section:

- new version number;
- modification date;
- list of modifications.

Accordingly, users are kept informed of all modifications that *CILAS* makes to this manual.

Updates to the manual NT-1061083-41

Revision no.	Date	Purpose
0000	September 2008	Complete update and reference NT-1061083-41
0001		
0002		
0003		

General information

About this user manual

This *user manual* covers the use and the first-level maintenance of a CILAS particle size analyzer, models 990, 1090 and 1190 (corresponding references are stated on the cover page); it does not cover optional attachments.

This manual is intended for technicians who are familiar with the instruments used in laboratories for the physical and chemical characterization of materials. It is also available on the user CD-ROM supplied with the particle size analyzer, in the “MANUALS” folder. The manual is provided in PDF format, and can be printed if necessary.

This particle size analyzer *user manual* describes how to use a particle size analyzer. It forms part of a set of manuals describing all the features of our particle size analyzers; details about features can also be found in the other manuals available on the user CD-ROM. Users are only authorized to perform preventive maintenance operations.

This *user manual* should be read in its entirety before you use the particle size analyzer and its attachments.

CILAS only drafted this manual for the purpose of providing users with simple and precise information. CILAS may not be held liable for any incorrect interpretation subsequent to reading the manual.

Every effort has been made to ensure this manual is accurate and correct; updates and/or changes may be made to the product at any time, even if the manual itself is not revised. If you have any doubts, please contact CILAS for more information.

This *user manual* and its content are the inalienable property of CILAS. This document may not be copied, disclosed or transferred without written permission from CILAS.

Suggestions concerning this manual

If you would like to make any suggestions concerning this manual, please feel free to contact us by the following means:

CILAS – particle size analysis after-sales service,
8, Avenue Buffon,
B. P. 6319,
Z.I. La Source,
45063 ORLEANS CEDEX,
FRANCE
Tel.: + 33 (0)2 38 64 59 00
Fax: + 33 (0)2 38 76 59 07
E-mail: info.particle@cilas.com

The application software

Neither CILAS nor any linked company may be held liable under any circumstances for any damage – including, without limitations, damages for loss of production, disruption of production, loss of information, defects in the application, tangible damage, loss of time, financial or material loss, or any direct or indirect consequence of losses arising from the use or inability to make use of this product, even if CILAS has been advised of such losses or damages.

Translation

The document used as the source for the translation of this manual was drafted in the French language.

In the event of a conflict between the French-language version and any version translated into another language, the French-language edition will prevail and will be the authoritative version for any question concerning relations between the parties.

Any translation of this manual into any foreign language is provided only for reasons of convenience and as a reference work.

Table of contents

Updates	III
General information	V
1. Standards, safety, warranty and disposal.....	1
1.1 Declaration of compliance with standards.....	1
1.2 Information concerning symbols and safety	1
1.3 User safety	4
1.4 Guarantee.....	5
1.5 Disposal of your analyzer.....	5
2. General description.....	7
2.1 Purpose of your particle size analyzer	7
2.2 Comparison between the different models.....	7
2.3 Diagram of operation	8
2.4 Unpacking, installation, movement and storage.....	9
2.5 Key technical data	9
2.6 Location of external parts.....	11
2.7 Location of internal parts.....	13
2.8 Attachments and software	16
3. The <i>Size Expert</i> software	19
3.1 Launching the software.....	19
3.2 Menus and icons.....	20
3.3 Qualification after installation (IQ).....	23
3.4 Periodic validation.....	23
4. Preparation of the sample.....	25
4.1 Reducing measurement errors.....	25
4.2 Extraction and preparation.....	26
4.3 Choosing the dispersal method.....	26
5. Usage and measurements	29
5.1 Checking on connections	29
5.2 Powering-on devices.....	30

5.3 Launching the application software.....	31
5.4 Changing user	32
5.5 Locking your session	32
5.6 Exiting the application.....	32
5.7 Managing measurement waste	32
6. Usage in liquid mode	35
6.1 Prerequisites.....	35
6.2 On-screen display	35
6.3 Choosing the carrier liquid and the dispersal agent	36
6.4 Checks on signals before Background measurements	38
6.5 Preparatory measurement	38
6.6 Actual measurement.....	40
7. Usage in dry mode	49
7.1 Prerequisites.....	49
7.2 On-screen display	49
7.3 Choice of carrier liquid and dispersal agent	50
7.4 Preliminary test.....	51
7.5 Actual measurement.....	51
7.6 Free-fall mode.....	60
8. Using results	63
8.1 General.....	63
8.2 Measurement selection.....	63
8.3 Information displayed in individual mode	67
8.4 Information displayed in superimposed mode.....	69
8.5 Managing results files	71
8.6 Recalculating results.....	72
8.7 Calculation wizard.....	73
8.8 Quality control.....	74
9. Application configuration	77
9.1 Purpose of configuration.....	77
9.2 Managing the tools	77
9.3 Database management.....	85
9.4 Security level management.....	87
10. Maintenance	89
10.1 Safety requirements.....	89
10.2 Preventive maintenance	89
10.3 Proventive maintenance procedures.....	94

10.4 Maintenance for resellers and authorized personnel.....	103
10.5 Answers to frequently-asked questions about maintenance	103
10.6 Spare parts	103
11. Technical data	106
12. Appendix 1.....	108
12.1 Laser diffraction theory	108
12.2 Terminology	108
13. Appendix 2 – Maintenance mode.....	113
13.1 Access to maintenance.....	113
13.2 Exiting maintenance mode.....	113
13.3 Calibration in maintenance	113
13.4 Edit settings	114
14. Index	115

1. Standards, safety, warranty and disposal

1.1 Declaration of compliance with standards

Compliance certificates for CILAS particle size analyzers are provided on the CD-ROM supplied with the particle size analyzer. Below is a list of the compliance declarations and certificates contained on the CD-ROM.

- Enterprise certification:
 - ISO 9001 certificate..
- Standard specific to particle size analyzers
 - Compliance with CFR 21 Part 11.
- EU standards:
 - ECM (ElectroMagnetic Compatibility): compliance with NF-EN-61326-1, as per EU directive 2004-108/EEC.
 - LV (Low Voltage): compliant with NF-EN-61010-1, as per EU directive 72-23/EEC.
- Safety certification:
 - Laser safety certificate
 - Safety data sheet for reference powders (MSDS)
- ISO 13320 compliance declaration.

Please contact CILAS if you need more information concerning the above.

1.2 Information concerning symbols and safety

This paragraph provides details of the safety symbols as well as basic recommendations intended to endure the safety of users and maintenance technicians.



WARNING!

Every person using or working on a CILAS particle size analyzer must comply with these safety recommendations. Maintenance technicians should have the skills and information needed to understand the working of an electromechanical appliance. All users should apply the safety rules and policies of their enterprise.

1.2.1 Symbols

Laser and electrical safety symbols are affixed to the exterior and interior of the instrument. If one of the symbols is missing, it must be replaced immediately with an identical new label.

Laser symbols

The rear of the instrument bears two labels in French and English specifying the class of the laser source (1) and its certification of compliance with standard NF EN 60825-1/A2 dated January 2006 (CEI 60825-1 1993/A2 : 2001).



Labels with a yellow Background and black border on the front of the optics unit state the laser radiation hazard, the maximum power of the laser diode (3 mW), the wavelength (830 nm) and the class of the appliance (3B) when the safety system of the hood is deactivated. A yellow triangle with a black border, bearing the laser hazard symbol, is affixed to the laser barrels of the optics unit.

There will be 1, 2 or 3 of these symbols, according to the type of appliance.

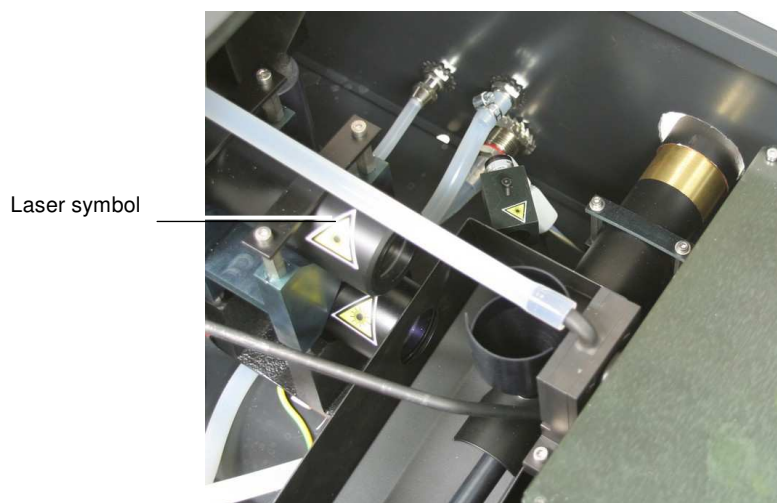


Figure 1: laser hazard symbol.

Electrical symbols



Six triangles with a yellow Background and black border, bearing electrical hazard symbols, are affixed to items with which there is an electrocution hazard. The locations of these symbols are as follows:

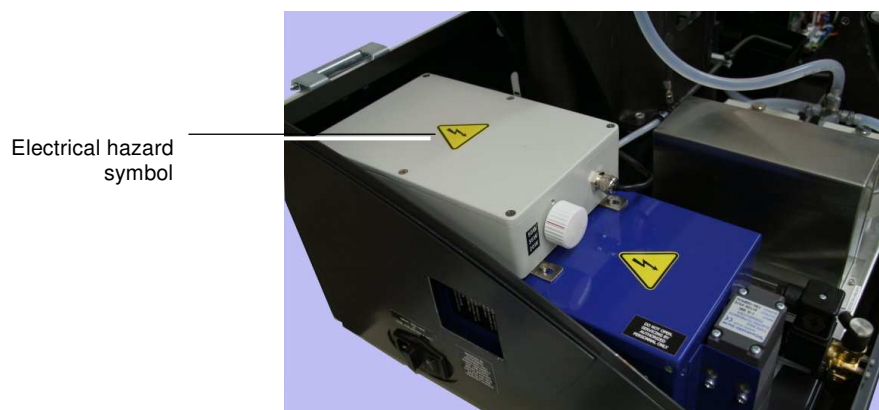


Figure 2: Electrical hazard symbol.

- Actuator control unit
- Ultrasonics card unit
- AC power filters
- Rear servo control bracket (vacuum cleaner system sockets).

If one of these symbols is missing, it must be replaced with another sticker, which can be procured from CILAS on request.

Non-specific hazard symbols



There is a non-specific hazard symbol on the right-hand side of the appliance.

This signifies that there is a physical injury hazard from the moving parts (pumps) that are exposed after opening the hood.

1.2.2 Safety rules

The CILAS particle size analyzer is compliant with the IEC 825 safety standard.

Laser safety

Once closed, the hood protects the operator from the laser beam; consequently, no additional protection is necessary. This laser product belongs to Category 1 according to standards NF EN 60825-1/A2 dated January 2006 (CEI 60825-1 1993/A2 : 2001).

When the hood is open, no radiation is accessible, because of the safety lock. However, if the safety lock has to be deactivated during maintenance operations, harmful radiation is emitted from the ends of the optical fibers or optical barrels.

When the safety barrel of the hood is deactivated, users should be careful because the lasers are category 3B according to standards NF EN 60825-1/A2 dated January 2006 (CEI 60825-1 1993/A2 : 2001).

The general rules for laser safety are as follows:

- Never disconnect an optical fiber when the laser safety system has been neutralized.
- Never look at the beam from in front of the source, or with the naked eye, or using an optical instrument.
- Never place a reflective surface in the trajectory of the beam.
- Always wear laser safety glasses that are correct for the wavelength during maintenance operations: 635 and 830 nm



WARNING!

Failure to comply with the general rules can give rise to emission of potentially harmful laser radiation that can cause permanent eye and skin injuries. Always wear safety glasses when the hood is open and the safety system has been neutralized.

Electrical safety

The appliance described in this manual operates with potentially lethal voltages. A 110 V can cause death. Always apply the following safety measures at all times:

- Make sure that the appliance's AC power supplies incorporate a safety system to protect humans (30 mA differential switch).
- Never open the hood and never replace a component of the system without first having powered-off and disconnected the **two power electrical sources** (10 A, 110/230 V AC on the left-hand side, and 16 A, 110/230 V AC at the rear).
- Check safety systems such as the breaker switches, racks and doors. Start by checking the operation of the safety systems. Before working on any part inside the appliance, disconnect all electrical power sources.
- In certain cases, dangerous voltages can continue to be present once the appliance has been powered off, due to the presence of charged capacitors. These capacitors should be discharged before undertaking any work on the appliance. Wait several minutes to be sure that the capacitors are fully discharged.
- NEVER OPEN A COMPARTMENT WITHOUT THE PRESENCE OF AN ACCOMPANYING PERSON WHEN INSPECTING OR REPAIRING AN APPLIANCE WITH WHICH THERE IS A POTENTIAL HAZARD.



WARNING!

If you do not comply with the general rules, you will expose yourself to a risk of electrocution.

1.3 User safety

Safety recommendations should be followed for every measurement taken with a CILAS particle size analyzer. Every user should comply with the rules of his/her company. Every measurement taken is under the responsibility of the user and his/her company.

The particle size analyzer must be installed in a ventilated area with a temperature regulated to ambient temperature (20°C +/- 5°C). The ventilation system should limit the inhalation of effluent in *liquid mode*. The said system should also limit the inhalation of particles of small size in dry mode.

In both operating modes, it is possible that particles may be disseminated in the air around the appliance; the use of products that are harmful or toxic for people or the environment is under the user's entire responsibility, and the said user should ensure that all safety measures are taken.

Users should wear safety equipment designed for operators working in a laboratory (safety glasses, blouse, rubber gloves, etc.).

Before taking the measurement, users should read the safety data sheet for the sample, so as to be informed of all possible hazards linked to the product. The user should check that all the products used (sample, solvent, etc.) are compatible with a CILAS particle size analyzer. You should do this before each analysis.

After each measurement, you should clean the particle size analyzer. This is particularly necessary if the measurement is performed on many different products. These products can have properties that may have

chemical behaviors that are incompatibles or dangerous in relation to each other.



WARNING!

Every user working with a CILAS particle size analyzer must comply with all safety rules and instructions. You should take measurements in accordance with rules and under the responsibility of your company.

Before starting a measurement, users should read the user manual, particularly section 2.2 – *Instructions pertaining to symbols and safety 1.2*, on page 1, describing the symbols and stating safety rules.

1.4 Guarantee

The warranty covering the particle size analyzer only applies if the product is installed in compliance with this manual and is used in accordance with the user manual provided with the appliance. It does not cover consumables such as tubes, O-rings, measurement cells, etc. For more information, consult the user manual on the CD-ROM. During installation of the system, the warranty will be void in the following cases:

- connection to improper supply lines (electrical power, and water and air connections);
- use, maintenance or repair by an unapproved person;
- use of spare parts and attachments not approved by CILAS.



IMPORTANT!

To take proper measurements after installation, the manual should be read in its entirety.

1.5 Disposal of your analyzer

If you intend to dispose of the particle size analyzer in its entirety, please consign it to a special disposal facility for electronic waste.

2. General description

2.1 Purpose of your particle size analyzer

A CILAS particle size analyzer is designed to measure the size of particles ranging from 0.04 μm to 2,500 μm , depending on the model, without having to replace optics or calibrate the appliance.

The measurement principle is based on the diffraction of a light source by the sample. The results are processed by a PC-compatible computer running a Windows® operating system. Optional attachments (alcohol regenerator, CCD camera, etc.) can be used to extend the capabilities of the particle size analyzer (refer to the *Attachments* section on page 16).

2.2 Comparison between the different models

2.2.1 Measurement ranges

The following diagram shows the measurement ranges of the various models of particle size analyzer.

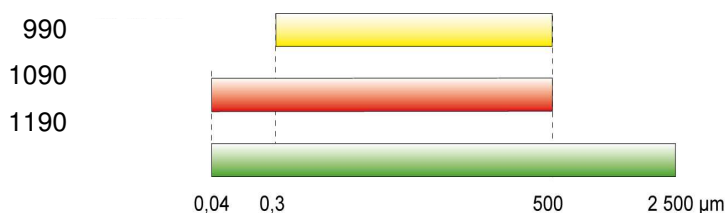


Figure 3: particle size analyzers from the CILAS range.

2.2.2 Table of technical data

A comparison of the technical data from the various models of particle size analyzers is provided in section 11.

2.3 Diagram of operation

2.3.1 Liquid mode

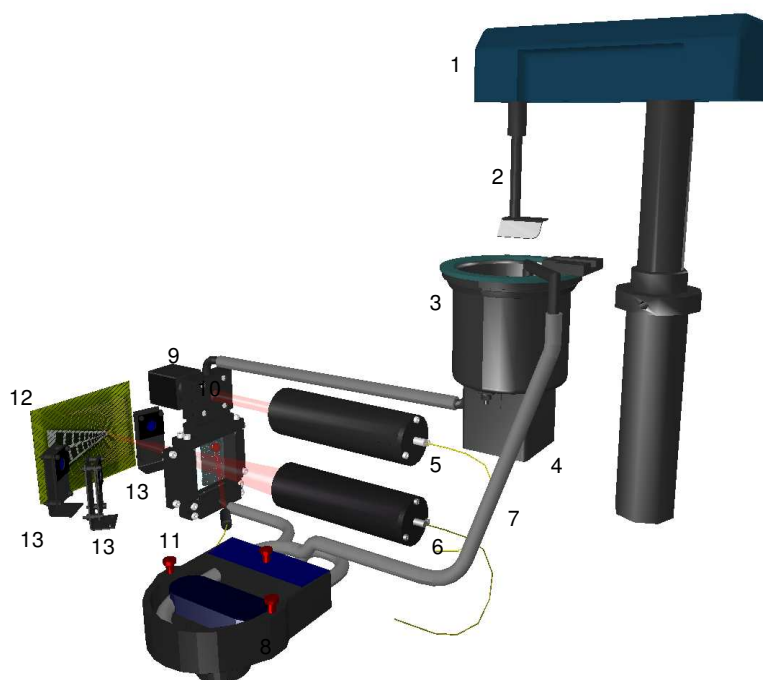


Figure 4: general principal of liquid mode

Ref.	Parts
1	Agitator unit (motor)
2	Agitator
3	Ultrasound unit
4	Ultrasound transducer
5	Laser 3 sight (camera lighting)
6	Laser 1 sight (main)
7	Liquid circulation pipe

8	Peristaltic circulation pump
9	Video camera
10	Chamber inlet
11	Measurement chamber
12	Main sensor
13	Additional units

Water supply	(If liquid mode is used) Standard union. Connection via braided 10x16 mm pipe Recommended pressure: 1 bar Maximum pressure: 2 bars
Air supply	(If dry mode is used) High-speed union. Connection via braided 10x16 mm pipe Minimum 6 bars Maximum admissible 8 bars Clean, dry and oil-free air
Air intake	Product vacuum cleaner: by external vacuum cleaner system Exit via diameter 40 mm pipe
Weight	Model 990L: 55 kg. Model 990D: 48 kg. Model 990LD: 61 kg. Model 1090L : 55 kg. Model 1090D : 48 kg. Model 1090LD : 61 kg. Model 1190L : 57 kg. Model 1190D : 50 kg. Model 1190LD : 63 kg
Overall dimension	See Figure 106 on page 107

2.6 Location of external parts

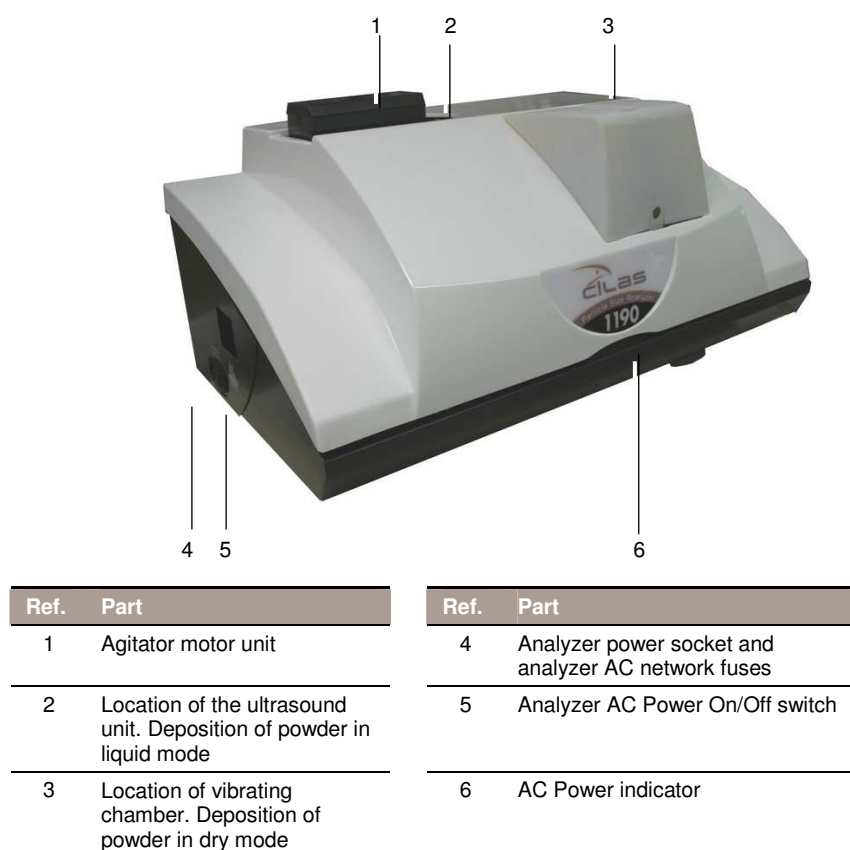


Figure 6: overview (On/Off switch, AC power socket and AC Power indicator).

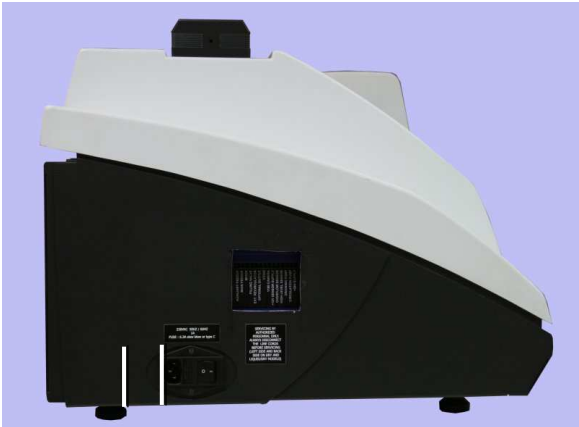


Figure 7: rear view (see detailed diagram in next illustration).



Part	Ref. Part
1 Evacuation outlet (<i>dry mode</i>) to vacuum cleaner system	6 Video camera output connector
2 Connector OVERFLOW / Trop plein: overflow outlet	7 DB9 serial link connector (RS232)
3 Connector DRAIN OUT / Vidange laden liquid exit point	8 AC power input for vacuum cleaner system
4 Liquid dispersal system entry connector	9 Vacuum cleaner system circuit breaker
5 Dry dispersal system air inlet connector	10 Power connector to vacuum cleaner system

Figure 8: rear view of particle size analyzer




1 2

Ref. Item	Ref. Item
1 Analyzer AC power input socket	2 Analyzer On/Off switch
1 Analyzer AC power fuses	

Figure 9: illustration of left side of particle size analyzer

2.7 Location of internal parts


2.7.1 View of right-hand side

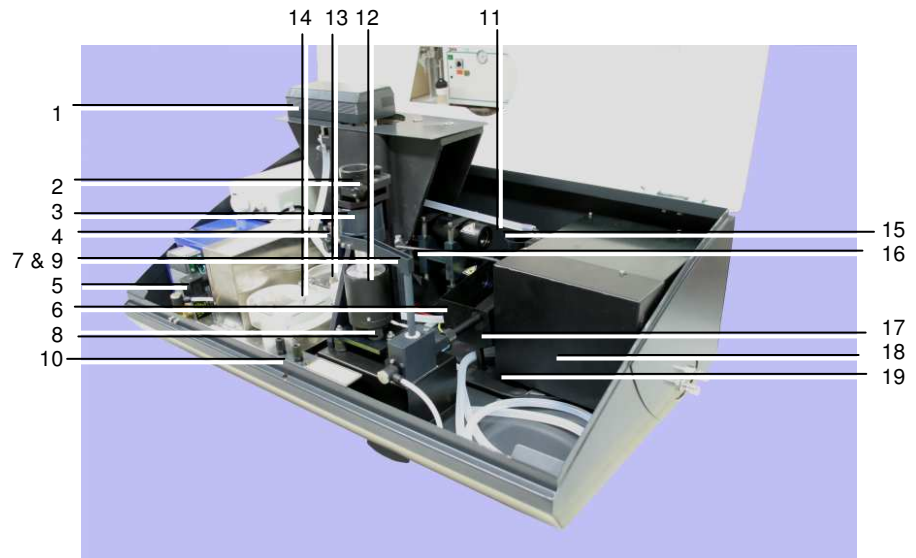

Item	
1	Agitator unit
2	Mass distributor
3	Vibrating bowl
4	Blower throughput adjustment
5	funnel blown air pressure regulation electrovalve
6	Laser #1.
7	Manifold
8	Vibrator
9	Manifold and pipe
10	funnel
11	Laser #3.
12	Drainage pump
13	Circulation pump
14	Location of pump motors (drainage and circulation)
15	Laser #2
16	Blower
17	Optics unit
18	CPU card
19	Laser diodes

Figure 10: illustration of right-hand side of interior


2.7.2 View of left-hand side

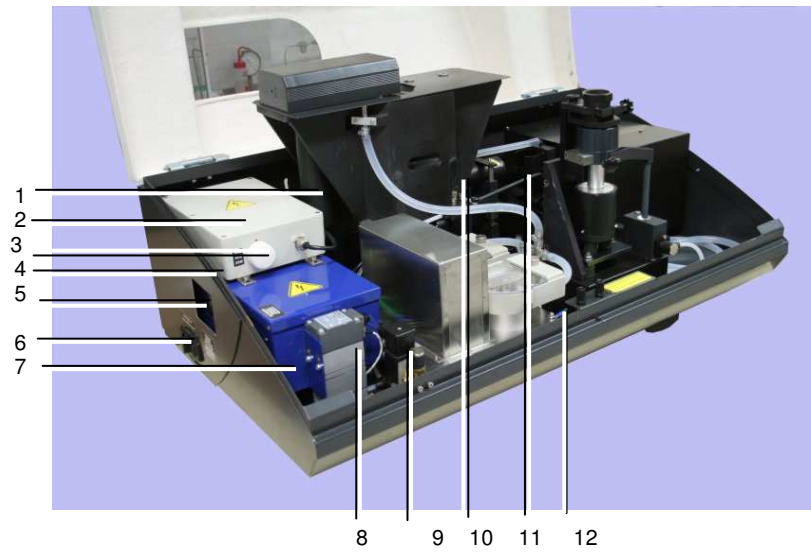

Item	
1	Inlet electrovalve (not visible).
2	Ultrasound unit power block.
3	Ultrasound unit power adjustment
4	Ultrasound unit fuse
5	Voltages indicators
6	Analyzer AC power input socket
7	Activator command block.
8	Funnel blown air pressure regulation electrovalve
9	Blower electrovalve.
10	Blower flow adjustment.
11	Cleaning blower.
12	Safety interlock laser. If interlock defeated : lasers actives

Figure 11: view of left-hand side of interior


2.7.3 View of dry mode unit

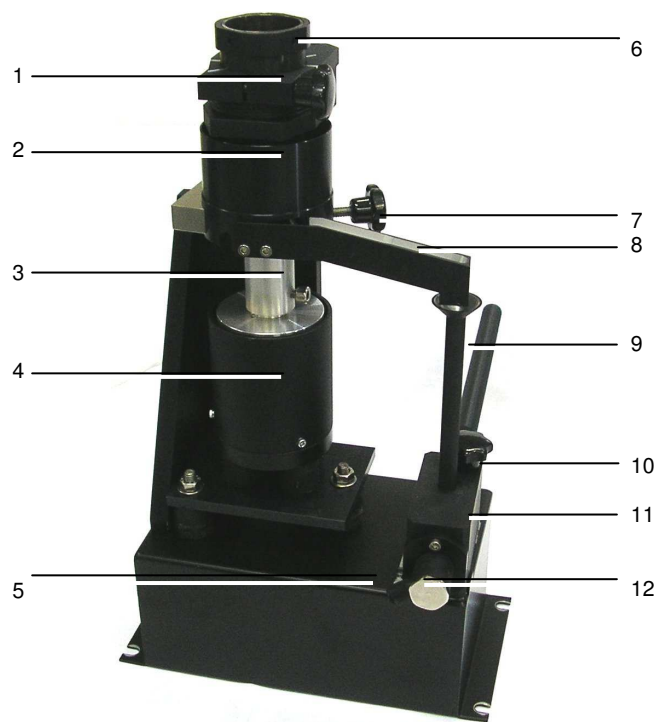

Item	
1	Mass distributor
2	Vibrating bowl
3	Connecting column
4	Vibrator
5	Funnel air inlet
6	Mass distributor locking knob
7	Vibrator bowl locking knob
8	Manifold
9	Manifold vertical tube
10	Outlet channeling air and product to measurement chamber
11	Funnel
12	Access to funnel

Figure 12: view of dry mode unit (DJD, or Dry Jet Dispersal).

2.7.4 View of liquid mode chamber

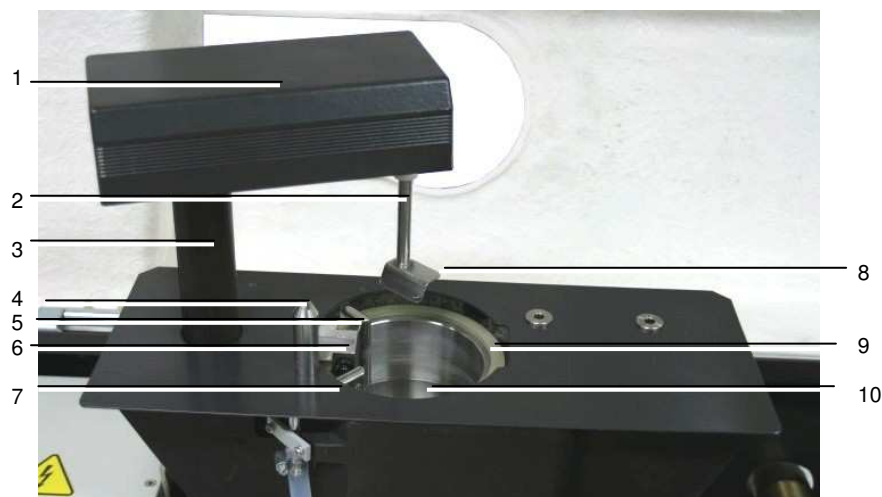

	Item
1	Agitator unit
2	Agitator shaft
3	Agitator removal slide
4	Agitator positioning and safety release lever
5	Circulation return nozzle
6	Level sensors
7	Chamber filling nozzle
8	Agitator blade
9	Damping and absorption seal
10	Ultrasound chamber

Figure 13: view of chamber (liquid mode)

2.8 Attachments and software

2.8.1 Attachments

Optional attachments can extend the capabilities of your particle size analyzer. These attachments, which are specially designed for CILAS particle size analyzers, are intended for special measurement needs. They can resolve certain problems and enhance measurements. The attachments available are as follows:

- small-volume unit: a device that reduces the quantity of sample and solvents necessary for making a measurement;
- microscope: enables users to view the form and dispersal of the sample;
- alcohol regenerator: reduces the quantity of solvent needed for the analysis, thereby reducing waste.

For more information about these appliances, contact your local CILAS distributor, or contact CILAS directly. Information is also available from our Web site (www.particle-size-analyser.com).

2.8.2 Application software

The Size Expert software application controls all CILAS attachments. For more information about these attachments, consult the user manual available on the user CD-ROM.

Certain optional software applications can also be supplied for your CILAS particle size analyzer. They provide additional information to the data provided by the particle size analyzer:

- The *Expert Grab* application grabs images of the sample.
- The *Expert Shape* application analyzes the size and shape of samples.
- The *Expert Report* application lets you personalize the reports obtained from a CILAS particle size analyzer.


For more information about using them, check the user manual and/or the tutorial available on the user CD-ROM in the documentation folder.

3. The *Size Expert* software

3.1 Launching the software

Proceed as follows:

Note: when you run the application for the first time, jump directly to step #2.

1. Start the software by clicking on its shortcut  .
2. If you opt not to apply security levels (refer to the *Managing security levels* section on page 86), skip ahead to step #3.
If the *CFR 21 part 11* or *Multilevel security* options were selected while installing the software (refer to the *installation manual*), the following dialog box will be displayed:

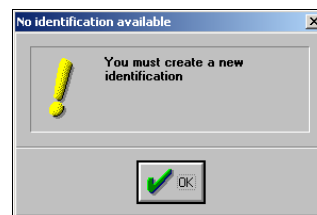


Figure 14: dialog box warning you that no password has been entered

2. Click OK to display the user ID creation dialog box:

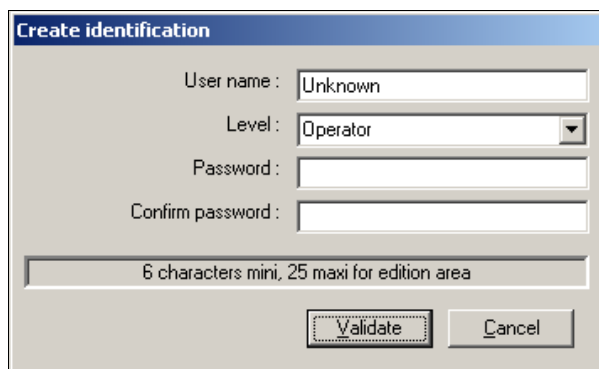


Figure 15: user login dialog box (*CFR 21 part 11* or *Multilevel security* options)

In the dialog box, enter a user name and the associated level and password. Enter the password a second time to confirm it before clicking the *Validate* button.

3. The mimic panel then displays:

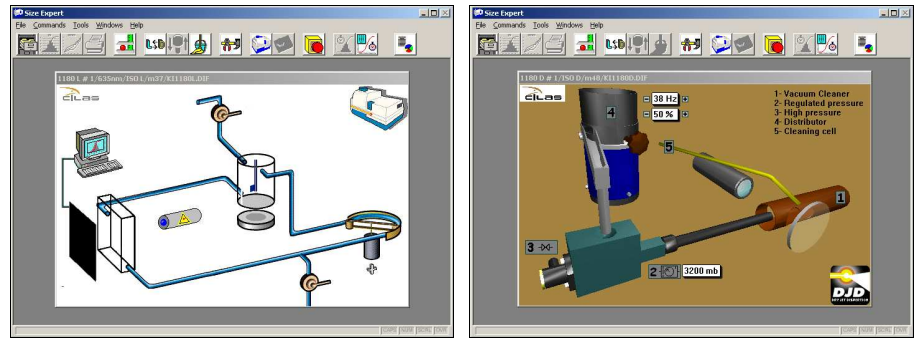


Figure 16: the mimic panel for *liquid mode* (left) and *dry mode* (right)

3.2 Menus and icons

This section only covers the top part of the main window, namely the menus and icons.



Figure 17: the top part of the window contains menus and icons



Note

By default, the application's menus are displayed in English. To choose another language, click *Tools > Options > Languages* and select the desired language. Then click *OK* to close the various open windows.

3.2.1 Menus

File

Item	Purpose	See §
Results	Lets you select files to view	8.3
Printer settings	Opens the standard Windows ® printer settings dialog box	-
Exit	Exits the application	-

Commands

Item	Purpose	See §
Measurement	Opens the measurement settings dialog box	6.6.2
Real-time		6.6.5
Real-time measurement	Opens the real-time analysis settings dialog box	6.5
Real-time signals	Opens the signal values window for each channel	6.4 and 6.5.1
Real-time analysis	Displays the changes in certain parameters (laser value, obscuring rates) over time	-
Computation wizard	Once the measurement has been completed and stored in the database, lets you adjust computation settings in real time (smoothing constant, grain index)	8.7
Monitoring	Displays an options dialog box that lets you remotely observe measurements in progress via a remote database	-
Quality control	Unchecked: quality control is disabled. Checked: displays min/max curves superimposed over the current measurement curve	8.8
Liquid mode	Manual controls for the <i>Liquid mode</i> window	6.2

Stop	Stops all commands in progress	-
Ultrasound	Actuates the ultrasound generator in the chamber	-
Pump slow	Sets the peristaltic pump to slow operation	-
Pump fast	Sets the peristaltic pump to fast operation	-
Agitator	Starts the agitator	-
Rinse	Performs several drainage and filling sequences, ending with a chamber filling	-
Force rinse	Drains the chamber	-
Fill	Fills the analysis circuit	-
Dry mode	Manual controls for the <i>Dry mode</i> window	
Stop	Stops all commands in progress	7.2
Vacuum cleaner	Starts the external vacuum cleaner system	
Low pressure	If the vacuum cleaner system is operating, applies a user-defined pressure setting at the entry to the funnel (see Figure 36, ref. #2)	7.2
High pressure	If the vacuum cleaner system is operating, applies maximum pressure at the <i>In</i> entry to the particle size analyzer (system cleaning)	-
Vibrator	Enables distribution of the sample after selecting the frequency and cyclic ratio (see Figure 36, ref. #4)	7.2
Liquid/dry	Opens the corresponding window	6.2 or 7.4
Microchamber	Microchamber settings. See the special documentation	-

Tools

Item	Purpose	See §
Options	Opens the system options selection dialog box	9.2
Calibration		
Create calibration method	Enabled in maintenance mode. Reserved for CILAS	13
Manage methods	Enabled in maintenance mode. Reserved for CILAS	13
Calibrate now	Enabled in maintenance mode	13.3.3 13.3.4
Manage calibrations	Enabled in maintenance mode	13.3.4
Import calibration	Import calibration factors from the database	
Export calibration	Transfers calibration factors to a database	
Database	Database management	9.3
Change serial n°	Lets you enter a new serial number (reserved for CILAS)	-
Login		
Select	Enabled in Multilevel mode only. Selects a login name	9.4
Create new	Enabled in Multilevel mode only. Creates a new login name	9.4
Delete	Enabled in Multilevel mode only. Deletes a login name	9.4
Audit trail	Enabled when CFR 21 Part 11 has been selected. This feature is selected when the application is installed. Refer to the <i>installation manual</i>	-

Windows


 









Item	Purpose	See §
Cascade	Positions windows in cascading arrangement	-
Tile	Positions windows tiled beside each other	-
Arrange icons		-
Close all		-
Mimic panel	Minimizes the active mimic panel to the task bar	-




Help

Item	Purpose	See §
About...	Displays the application's version number	-

3.2.2 Icons

Icons are simply shortcuts of available commands in the menu bar.

	Function	Menu equivalent	See §
	Lets you select files to view	<i>File > Results</i>	8.2
	Enabled only if at least one result has been selected via <i>File > Results</i> . Displays the results window	<i>File > Results</i> and click on <i>Unit view</i>	8
	Enabled only if at least one result has been selected via <i>File > Results</i> . Displays the results window for a previous measurement	<i>File > Results</i> and click on <i>Superimpose view</i>	8.4
	Enabled when the <i>Unit view</i> or <i>Superimpose view</i> window is open. Prints the displayed window	<i>File > Printer settings</i>	-
	Opens the measurement window	<i>Command > Menus</i>	6.6 or 7.5.2
	Toggles between the <i>liquid mode</i> screen and the <i>dry mode</i> screen. Icon enabled if the settings so allows (refer to <i>System</i> on page 84)	<i>Command > Dry/liquid</i>	6.2 or 7.2
	Microchamber settings. Refer to the special documentation	<i>Command > Microchamber</i>	-
	Performs several drainage and filling cycles, ending with a chamber filling	<i>Command > Liquid mode > Rinse</i>	-
	Displays system settings	<i>Menus > Tools > Options</i>	9.2
	Minimizes or restores the mimic panel window	<i>Window > Mimic panel</i>	-
	Emergency stop button. Immediately halts all functions of the particle size analyzer	None	-

	Displays the real-time analysis window	<i>Command > Real time > Real-time measurement</i>	6.5
	Displays the signal values window for each channel	<i>Command > Real time > Real-time signals</i>	6.4 and 6.5.1
	Starts the <i>Expert Report</i> add-on application. Refer to the <i>Expert Report</i> documentation	-	-

3.3 Qualification after installation (IQ)

After installing the particle size analyzer and the *Size Expert* application, it is essential to perform a qualification of the appliance, to check its satisfactory operation.

This qualification notably consists of performing a measurement on a reference sample provided with the particle size analyzer.

Refer to the *IQ manual* with the reference *NT-2107007-41*.

If the installation qualification does not give rise to the expected values then you should perform the standard checks and repeat the calibration process. Refer to the *Calibration manual* with the reference *NT-1061017-41*.

3.4 Periodic validation

The validation procedure enables the operator to check the accuracy of the results and the satisfactory reproducibility of measurements with the appliance.

This validation procedure should be performed periodically, every 6 months.

Refer to the *Validation manual* with the reference *NT-1061018-41*.

If the periodic validation does not give rise to the expected values then you should perform the standard checks and repeat the calibration process. Refer to the *Calibration manual* with the reference *NT-1061017-41*.

4. Preparation of the sample

4.1 Reducing measurement errors

Preparation of the sample is the most important stage of taking a measurement. As you can see in the graphic below, preparation of the analysis (extraction and preparation of the sample) is the greatest source of errors – much greater than those introduced by the CILAS particle size analyzer itself.

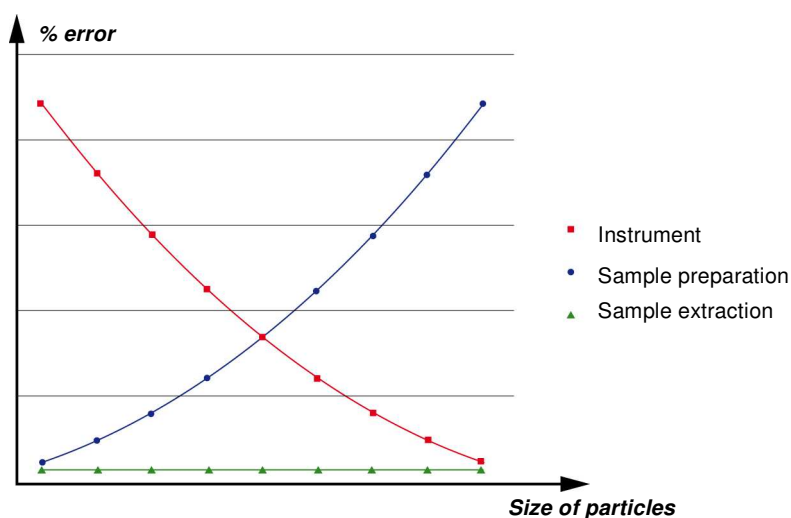


Figure 18: sources of measurement errors

The accuracy of the measurement and, therefore, the results of the measurement depend on how you prepare and extract the sample. Therefore, you have to carefully establish a sample extraction and preparation method so as to obtain accurate and reproducible measurements. CILAS recommends establishing a standard sample extraction and preparation method for each particular product.

- For fine particles, the most important stage is extraction.
- For bigger particles, sample preparation is the greatest source of errors.

If the distribution of sizes is already known, the greatest sources of errors can be limited.

From what we have just said, you can see the importance that the user plays in the measurement. Technicians and engineers performing measurements with a CILAS particle size analyzer must be particularly skillful. The company must train them on how to use the appliance. CILAS cannot be held responsible for measurement errors if you do not establish and employ a standard usage method (from preparation through to results processing) and if the operator has not been trained properly on how to make measurements with a particle size analyzer.

4.2 Extraction and preparation

There are two steps in the preparation of a sample:

- Extraction;
- Preparation.

You need to establish and apply one sampling and extraction procedure for each product. CILAS can use its applications laboratory to help you choose the most-suitable procedure.

Drawing on its applications laboratory and basing itself on its particle analysis experience, CILAS can help you develop a sampling method that will enhance both the sampling (sample extraction and preparation) and the standard operational procedure (SOP) use for the measurement by means of the *Size Expert* application software.

Sampling is a major source of errors, so an established procedure is important for this step. Users must be careful, because the accuracy of measurement depends on a user's ability to prepare a sample that is properly representative of the properties of the material.

4.2.1 Extraction

Extraction of the sample is the first of the two stages. It consists of extracting a quantity B of the original sample A. You need to know the distribution of sizes in A.

Extraction must be performed properly so as to obtain a sample B that is identical to sample A in terms of distribution of sizes.

There are many methods. CILAS recommends choosing one specific method for each product, according to the properties of the sample and the international and/or national standards applicable in your country.

4.2.2 Preparation

Preparation consists of dividing the sample B (obtained from extraction) into a smaller quantity C for a measurement with the CILAS particle size analyzer.

The quantity of sample necessary for a dry-mode measurement varies from 1 mg to 100 mg.

The problem is the same as before: sample C must be representative of sample B and therefore precisely representative of sample A.

If these conditions are met then when you measure the properties of C, the properties of A in terms of distribution of sizes will also be measured.

There are many methods for preparing the sample; CILAS recommends you to choose one specific method for each product, depending on the properties of the sample and the international and/or national standards applicable in your country.

4.3 Choosing the dispersal method

You must also establish and use one dispersal method for each product. Here, too, CILAS can use its applications laboratory to help you choose the best procedure.

There are two methods for dispersing the sample:

- the *liquid mode*;
- the *dry mode*.

The choice depends on the properties of the product (fluidity, wettability, density, heterogeneity, robustness and solubility, etc.), as well as on its use (application or environment). CILAS recommends analyzing a product in the same dispersal mode as is used for its application.

The dispersal method also depends on the initial state of the product. The sections that follow state the choice of dispersal procedure according to the initial state of the sample and its properties.

4.3.1 The initial state of the product is liquid

The *liquid mode* should be used if the sample is a liquid or if the measurement has to be performed on particles contained in an emulsion or a suspension. Dry mode cannot be used with these types of material.

4.3.2 The initial state of the product is solid

The choice of mode to be used for a solid is more complicated than for a liquid. It varies as a function of all the product's characteristics and the quantity of sample necessary for the analysis. Many parameters have to be taken into account in the final decision. To determine the best dispersal method, the best approach is to take measurements with the particle size analyzer. CILAS can use its experience with the particle size analyzer to help you establish the method to use.

4.3.3 Table of choices for dry mode or liquid mode

The procedure that enables you to choose between *liquid mode* and *dry mode* is stated in the table below.

Level	Properties of the sample	Level	Dispersal method
1	Quantity of sample necessary for an analysis	Low	Liquid
		High	Liquid or dry
2	Heterogeneity	Low	Liquid or dry
		High	Liquid or dry, with sample divider
3	Density	Low	Liquid or dry
		High	Dry with free fall
4	Strength	Low	Liquid or dry
		High	Dry with free fall Dry with low pressure
5	Fluidity	Low	Liquid
		High	Liquid or dry
6	Reactivity (to organic and inorganic solvents)	Low	Liquid or dry
		High	Dry
7	Toxicity	Low	Liquid or dry
		High	Liquid

Table 1: choice of dispersal method for a solid sample

After examination of all these parameters, it is possible to determine the dispersal mode for a solid sample. Once the dispersal method has been chosen, use the same dispersal mode for each measurement on the same type of product. Remember that dry dispersal requires a bigger sample than liquid dispersal.

The two steps described in this section (sampling and choice of dispersal) are part of the most-important steps in analysis with a particle size analyzer. CILAS particle size analyzers only give accurate and reproducible results if these steps are accomplished with care.

CILAS can help you optimize your usage conditions by using our applications laboratory. Don't hesitate to contact us.

5. Usage and measurements

5.1 Checking on connections

Check for the presence of the following connections, working from left to right on the rear panel of the particle size analyzer.



Figure 19: view of connectors on the particle size analyzer

Ref.	Label	Check to perform
1	Vacuum cleaner system air outlet	Also check that the sleeve exiting from the analyzer is indeed closed (presence of a sliding sleeve)
2	Out 1	Laden liquid outlet, connected to the settlement tank if liquid mode is used
3	Out 2	Overflow outlet, connected to the settlement tank if liquid mode is used
4	In	Input connector for the liquid dispersal system
5	In air	Air inlet connector for the dry dispersal system
6	PC/Camera	Connector for a video camera to be linked to the PC's video acquisition card
7	PC/particle size analyzer	RS232 output connector to be connected to the input of the PC's serial card
8	Line voltage in	Connector connected to a special 16A / 110/230V 50/60Hz AC power socket (vacuum cleaner system power connector)
9	On/Off switch	Vacuum cleaner system power On/Off switch
10	Line voltage out	Connection for connecting the vacuum cleaner system's plug to this connector

Table 2: connectors table

5.2 Powering-on devices

5.2.1 Particle size analyzer

1. **On the particle size analyzer, toggle the *On/Off switch* to position 1.** The red LED on the front illuminates (AC power present). If it does not illuminate, check the AC power connection circuit.



Figure 20: location of the On/Off switch and the AC Power indicator

5.2.2 Powering-on the computer, screen and printer

1. **Power-on the screen, the computer and the printer.**

5.2.3 Powering-on the vacuum cleaner system

1. **On the particle size analyzer, toggle the *On/Off switch* to position 1.** Check that the *On/Off switch* on the vacuum cleaner system itself is in the *On* position.



Figure 21: location of the vacuum cleaner system On/Off switch

2. **On the industrial vacuum cleaner system, toggle the AC power switch to the *On* position.**

5.2.4 Air and water supplies

1. Turn-on the water supply (if you are using liquid mode) at the laboratory's faucet.
2. Turn-on the compressed air supply (if you are using dry mode) at the laboratory's compressed air faucet.



Note

The inputs for the air and water supplies (in *dry* and *liquid* mode) can also be connected simultaneously.



Important

If you are using liquid mode, check immediately that there is no water leak.

5.3 Launching the application software



Reminder

By default, the application's menus display in English. If you want to select another language, go to *Tools > Options > Languages* and select the desired language. Then click on OK to close the various open windows.

Proceed as follows:

Note: if you are starting the application for the first time, proceed directly to step #2.



Size Expert .

1. Run the application by clicking on its shortcut:
2. If no security level has been selected (refer to the *Defining the security level* on page 86), skip ahead to step #3.
If the *CFR 21 part 11* or *Multilevel security* option was selected when the application was installed (refer to the *installation manual*), the following dialog box will display:

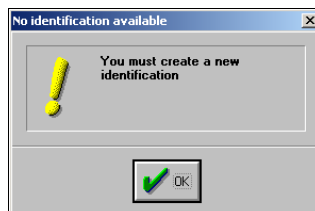


Figure 22: password entry warning dialog box

2. Click on **OK** to display the user login creation dialog box.

Figure 23: user login dialog box (*CFR 21 part 11* or *Multilevel security* option)

In the dialog box, enter the user's login name and the associated password. Enter the password a second time to confirm it, before clicking on *Validate*.

3. The mimic panel is then displayed.

- In *dry mode* with a type *D* particle size analyzer only, proceed to section 7.
- In *liquid mode* with a type *L* or *LD* particle size analyzer, proceed to section 6.

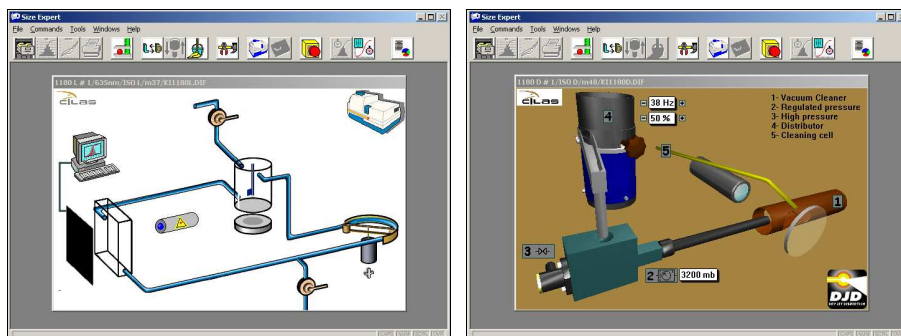


Figure 24: the mimic panel in *liquid mode* (on the left) and *dry mode* (on the right)


5.3.1 Answers to frequently-asked questions concerning measurements

If you have any questions or need advice about taking measurements with the pas, check the file available on our website at www.particle-size-analyzer.com or on the user CD-ROM (in the folder USERCDROM\Answers to frequently-asked questions\Frequently-asked questions.pdf), or contact your local CILAS representative.

5.4 Changing user

To change user, go to the *File* menu and select *Quit*. Then enter the new user login name in the dialog box that opens.

5.5 Locking your session

To lock your session, click on the minimize button () in the main window). When you next open the application's main window, the login dialog box will display.

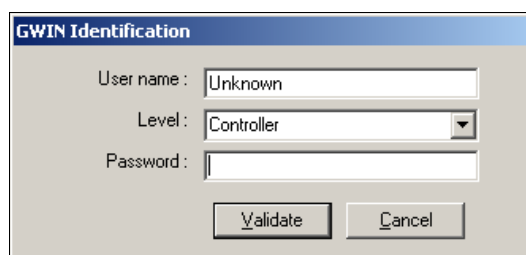


Figure 25: the login window after a session has been locked

5.6 Exiting the application

To exit the *Size expert* application, go to the *File* menu and choose *Quit*.

5.7 Managing measurement waste

You should dispose of waste generated from measurements in accordance with your company's rules and the environmental legislation in your country. A CILAS particle size analyzer does not generate any waste itself.

The samples and solvents used in the particle size analyzer may be hazardous chemical products. You should take all the necessary precautions after reading the safety data sheet for the products being handled.

Warning

CILAS recommends all users of our particle size analyzers to implement a circuit in accordance with ISO standard 14000 (or a similar standard) for dealing with waste from measurements. Users should apply the policy operated by their company and applicable in their country for dealing with environmental waste. CILAS will not be liable for damage caused by waste from particle size analyzers.

CILAS particle size analyzers are designed to limit the waste generated when taking a measurement. Special attachments are also available as an option (small-volume unit, alcohol regenerator, etc.) to limit waste and to enhance your productivity. For more information about these attachments, read section 2.8 on page 16.

5.7.1 Liquid mode

Waste can come from the sample, the dispersal agent and the solvent. The outlet from the particle size analyzer must be connected to a line on which the solvent is treated, to eliminate all polluting agents contained in the carrier liquid. If you are using organic solvents, special appliances reduce pollution and costs. For example, if you are using alcohol, CILAS has designed an alcohol regenerator that reduces the quantity of solvent used.

You should check the company's rules and your national legislation concerning all the instruments used for preparing the sample (capsule, etc.). You must be properly cognizant with these issues before taking a measurement.

5.7.2 Dry mode

Waste only derives from the sample. No solvent or dispersal agent is used. Dry mode reduces waste emissions. To dispose of these waste emissions, the waste should be channeled through the extraction system connected to the particle size analyzer. Read the user manual for the extraction system to inform yourself about disposal of waste from the extraction system. When disposing of waste, always comply with your company's environmental policy and the environmental legislation in your country.

6. Usage in liquid mode

6.1 Prerequisites

You are presumed to have completed the steps explained in the following sections:

- 5.1 - Checking on connections
- 5.2 - Powering-on devices
- 5.3 - Launching the application software.

6.2 On-screen display

The on-screen display in liquid mode is as follows:

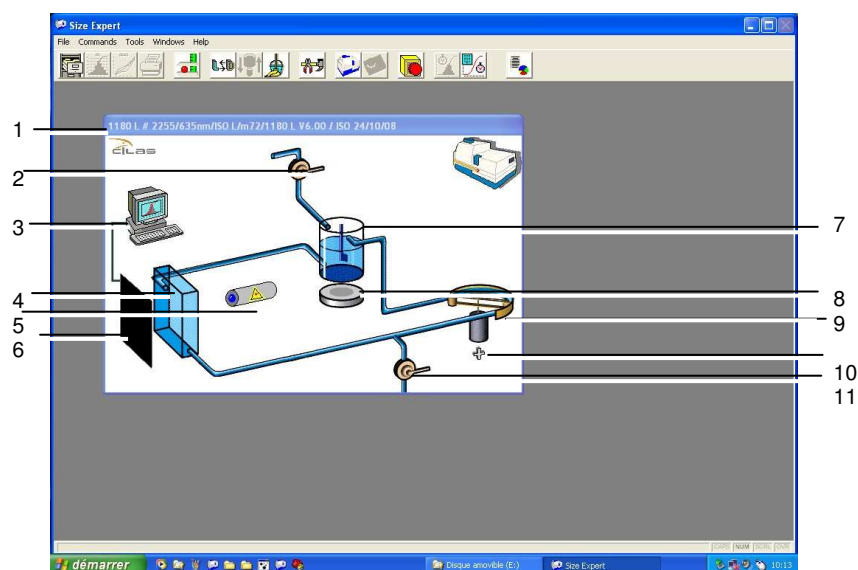


Figure 26: the startup screen in liquid mode

Note

If your particle size analyzer is only designed for liquid mode, the mimic panel will always show the correct display. If your particle size analyzer is an LD model (for liquid mode or dry mode), check that the mimic panel shows the correct display for the desired mode. If it does not, toggle the display by clicking on the following icon:



6.2.1 Interpretation of the on-screen information

Ref.	Check to perform
1	Serial number of the particle size analyzer used.
2	Filling water inlet electrovalve.
3	PC.
4	Glass analysis recipient. Changes to a blue Background when the circuit is filled with liquid.
5	Laser. Displays a ray when the laser is active.
6	Main measurement sensor connected to the PC.
7	Ultrasound recipient and agitator. Clicking on the icon displays the recipient rotation speed setting dialog box (180 to 500 rpm – the default value is 300 rpm). Pressing the <i>Del</i> key on the keyboard clears the value entered; the application then adopts the default value. Changes to a blue Background when the circuit has been filled with liquid.
8	Ultrasound generator. Clicking on the icon displays the ultrasound generator operation time setting dialog box (from 1 to 240 secs – 60 secs is the default value). Pressing the <i>Del</i> key on the keyboard clears the value entered; the application then adopts the default value.
9	Peristaltic circulation pump (the drainage pump is not represented). Clicking on the icon displays the pump operation speed setting dialog box (from 30 to 240 rpm – the default value is 120 rpm). Pressing the <i>Del</i> key on the keyboard clears the value entered; the application then adopts the default value. The icon's speed of rotation varies according to the current running speed.
10	Pump speed setting icon (8).
11	Drainage electrovalve. Clicking on the icon displays the drainage time setting dialog box. Pressing the <i>Del</i> key on the keyboard clears the value entered; the application then adopts the default value. The second dialog box shows the number of rinsings (drainage and filling) to be performed. Pressing the <i>Del</i> key on the keyboard clears the value entered; the application then adopts the default value.

6.3 Choosing the carrier liquid and the dispersal agent

In liquid mode, a carrier liquid – called “Liquid” - carries the sample. Before taking a measurement with the particle size analyzer, you have to specify a carrier liquid for the product. Knowing the physical and chemical properties of the sample will help you choose the right carrier liquid and dispersal agent. This section provides a step-by-step explanation of taking a measurement in liquid mode.

Liquid mode is currently the most-commonly used method for characterizing particles. You have to check various parameters, such as the preparation of the sample, the usage conditions, the carrier liquid and the dispersal agent. For a description of how to prepare the sample, refer to section 4.3. The usage conditions will be described in an upcoming section.

6.3.1 Carrier liquid

The carrier liquid must have the following properties:

- non-reacting with the measured product;
- non-absorbent at the operating wavelength;
- different refraction index from the product;
- low viscosity (no bubbles) and low evaporation point;
- homogeneity;

- compatibility with the various parts of the CILAS particle size analyzer (refer to the tables in the appendix on your user CD-ROM).

If the liquid does not comply with one of the points above, you cannot use it as a carrier liquid for the analysis. Once you have established the carrier liquid for a particular product, it is better to keep using it.

The main carrier liquids used are water, alcohol (methanol, ethanol, isopropanol, isobutanol, benzylique alcohol, etc.). With any other carrier liquid or dispersal agent, check its compatibility with the silicon pipes, the Viton® seals and gaskets, and the polysulphone level sensors of your CILAS particle size analyzer.

6.3.2 Dispersal agent

CILAS recommends you to use a dispersal agent in order to obtain better results. Like a carrier liquid, the dispersal agent must satisfy the following basic criteria:

- non-reacting with the product and the carrier liquid;
- non-absorbent at the operating wavelength;
- enhances the wettability of the product (see the illustration below);
- homogeneous and stable.

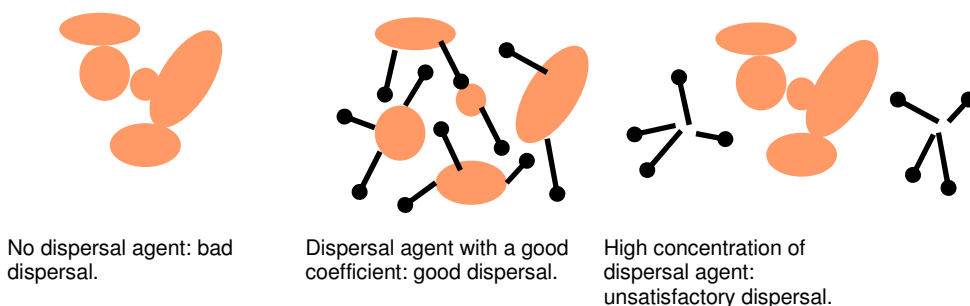


Figure 27: action of the dispersal agent

The quantity of dispersal agent put into the chamber must not be too small, so as to procure a good dispersal of the product within the carrier liquid.

The main dispersal agents used are HMP (sodium hexametaphosphate), sodium tetraphosphosphate, Igepal, Daxad, Dispex, Tween 80, and Triton. You should always ensure that the dispersal agent complies with the stated properties.


Once the usage conditions have been established, the standard procedure (called the SOP, or *Standard Operational Procedure*) must be identical for each similar product.

Before taking measurements with a new type of sample, use a microscope or a similar instrument to check for proper dispersal. When a satisfactory dispersal is obtained, you can start liquid-mode measurements with your CILAS particle size analyzer as explained in the sections that follow.

6.4 Checks on signals before Background measurements

Proceed as follows:



1. Click the  icon or select *Commands > Real time > Real-time signals*.
2. The window displays the value of the signals (rising angular order) for each measurement channel:
 - 1 to 44 for the 990;
 - 1 to 64 for the 1090 and the 1190.

It also shows the power in mW of each laser installed (bottom of the window):

- 1 single laser for the 990;
- 2 lasers for the 1090 and the 1190.

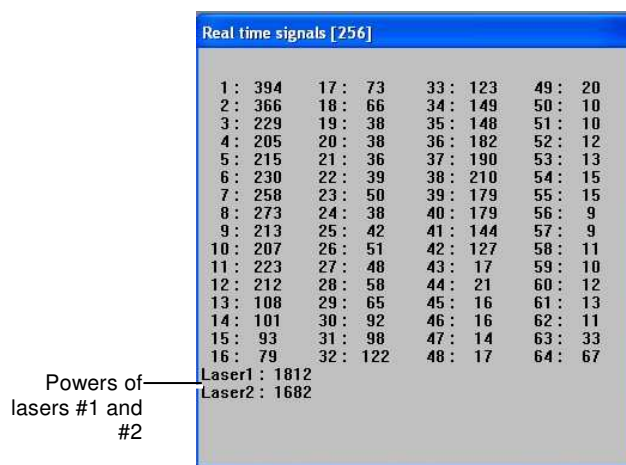


Figure 28: the real-time signals window


6.5 Preparatory measurement

6.5.1 Real-time signals

Note: this measurement will display the value of the obscuring rate of the analysis chamber, in addition to the value covered in section 0.

Proceed as follows:



1. Click the  icon or select *Commands > Real time > Real-time signals*.
2. The window displays the value of the signals (rising angular order) for each measurement channel:
 - 1 to 44 for the 990;
 - 1 to 64 for the 1090 and the 1190.

It also displays the power of each installed laser in mW:

- 1 single laser for the 990;
- 2 lasers for the 1090 and the 1190.

Also shown is the obscuring rate of the main laser (laser 1).

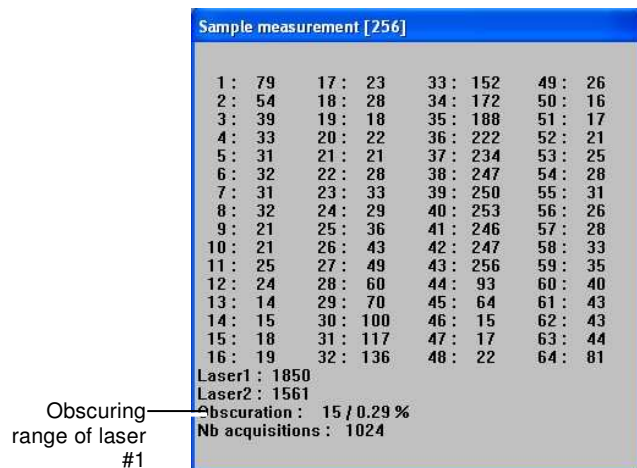


Figure 29: the real-time signals window, with the obscuring rate at the bottom

6.5.2 Real-time measurement

Before starting a series of measurements, you are advised to use the real-time measurement function; this gives you a real-time view of the measurement curve, and of the adjustment of a number of measurement settings (ultrasound action time; dispersal agent; obscuring rate; etc.).

Note: the difference between the *real-time measurement* function and the *real-time signals* function is that the application performs a particle size calculation and displays the resulting curve (see Figure 30).

Proceed as follows:

1. Click the  icon or select **Commands > Real time > Real-time measurements**.

The real-time result evolution window displays. This feature can help you see the effects of factors such as the ultrasound or a dispersing agent. Acquisition is performed every second, and the results are displayed immediately.

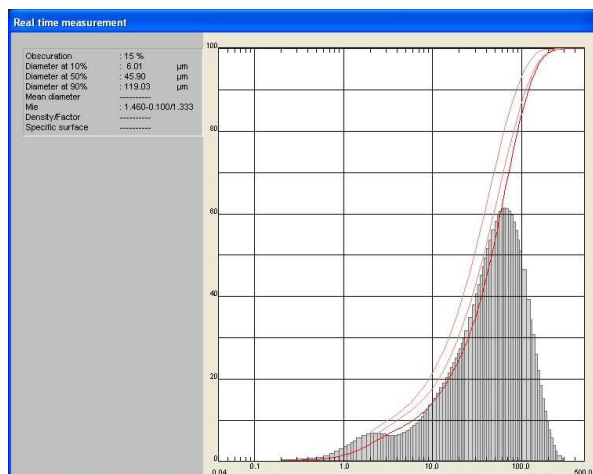



Figure 30: the real-time measurement window.

6.6 Actual measurement

Reminder


If an incident occurs or if you need to do an emergency shutdown of the particle size analyzer, click on the  icon in the toolbar under the menu bar.

6.6.1 Automatic rinsing

1. Rinse the particle size analyzer by clicking on the  icon or by selecting **Commands > Liquid mode > Rinse**.

Filling takes place after a 15-second drainage. It is performed several times, according to the SOP being used.

6.6.2 Adjusting measurement settings

1. Click on the  icon or choose **Commands > Measure** in the menu bar.
2. The measurement setting dialog box displays:

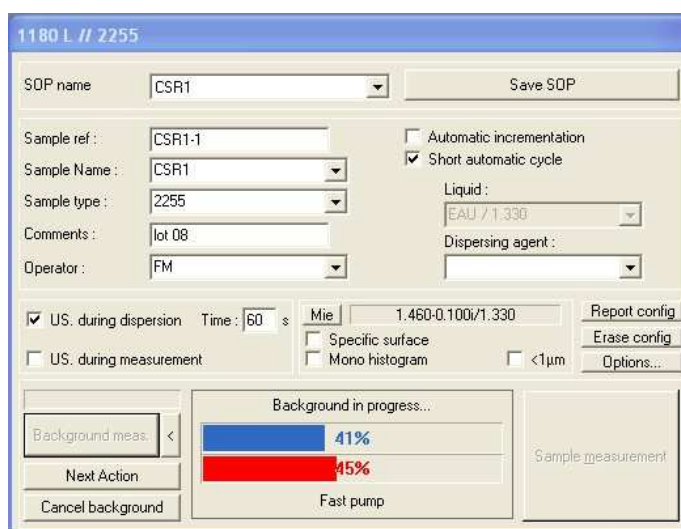



Figure 31: the measurement setting dialog box

Enter the corresponding information as follows:


Description	Information to be entered or selected
Name of SOP	<p>The SOP is designed to ensure good reproducibility of results. It contains all the measurement parameters defined on the CILAS particle size analyzer. CILAS recommends that you establish and save an SOP for each particular product.</p> <p>Select a standard operating procedure (SOP) from the list already defined and saved. The SOP list is displayed when you right-click on the dropdown list.</p> <p>The SOP contains parameters such as the theory used, the working conditions, etc. You can save the SOP currently displayed in the window by clicking on the Save SOP button. Give the file a meaningful name, such as the product name or code.</p>
Save SOP	<p>Displays a window that lets you:</p> <p>Save to the database all the user settings set within this window, by pressing the Save button. The data can then be reloaded at a later date by selecting this name in the <i>SOP name</i> dropdown list.</p> <p>Clear the SOP by pressing the Clear button.</p> <p>Close the displayed window by means of the Exit button.</p>



Sample ref.	Any name reminiscent of the sample to be analyzed.
Sample name	Dropdown list of sample names saved in the database.
Sample type	Dropdown list of types of samples recorded in the database.
Comments	22-character field in which to write any comment of your choice.
Operator	Select the operator from the dropdown list. This list contains all the users for whom an account has been created (see section 5.3).
Automatic increment	Several measurements can be performed on the same sample. The chamber is rinsed automatically after the last measurement. A dialog box will display so you can enter the index for the first measurement, the total number of measurements desired, and the time interval between two measurements. This feature is designed for organizations that take multiple measurements using the same working methods.

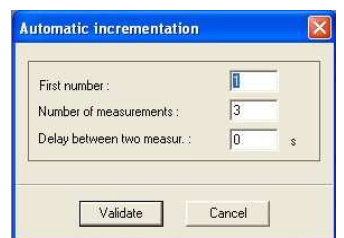

Short auto cycle	When checked, reduces the time of repeatability measurements by eliminating ultrasound if enabled. Only enabled if <i>Automatic increment</i> has been checked.
Liquid	With a predefined SOP, the dropdown list of carrier liquids present in the database is disabled.
Dispersal agent	With a predefined SOP, the dropdown list of dispersal agents present in the database is disabled.
US during dispersal	Dispersal by ultrasound for a defined time interval before the measurement is enabled. Read the <i>note</i> below.
US during measurement	Dispersal during the measurement is enabled. Read the <i>note</i> below.
Duration	Duration during which ultrasound is activated, in seconds.
	Note: using ultrasound during the measurement can disintegrate particles, introducing an error in the results. Ultrasound is necessary to obtain individual particles instead of aggregates. You should set a suitable time length (Duration field) for dispersal by ultrasound for each product.
MIE	Displayed by default when ISO MIE has been selected from the <i>SOP name</i> dropdown list. If Fraunhöfer is selected from the <i>SOP name</i> list, this button is not displayed.

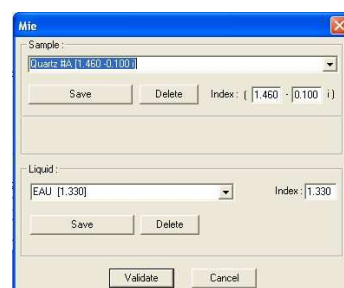


The MIE theory is used for particles that are fine (smaller than 1 μm) and/or transparent, whereas the Fraunhöfer – the most common – is an approximation of the MIE theory.

	<p>A database is available for the most commonly-used samples and liquids.</p> <p>Sample box</p> <p>In the dialog box, select the product of which the refraction index is closest to the sample to be analyzed. You can also create a new sample by entering its index (complex number with a real part and an imaginary part) and clicking on <i>Save</i>. In the dialog box that opens, enter the new name, and maybe a comment, before accepting your entries by pressing <i>Validate</i>.</p> <p>Liquid box</p> <p>The principle is the same as for a sample except that here, instead of an index, you enter a coefficient.</p>
Specific surface	When you click, a dialog box displays so that you can enter the density and form factor parameters for the particles to be measured. These values will be displayed or printed in the <i>Results</i> window (see § 0).
Single histogram	When checked, eliminates spurious noise in the signal and saves a single size class. This feature is only used for monodispersed samples.
<1 µm	Check this checkbox to coerce MIE usage.
Report settings	Opens a dialog box that lets you load a special report previously-created for <i>Expert Report</i> (see <i>Options</i> below).
Clear config.	Clears the configuration of <i>Expert Report</i> .
Options	Specifies the options for the SOP (<i>standard operating procedure</i>).

Background measurement


Defines the settings for the Background measurement, namely the acquisition time, the pumps running time, and agitation before, during and after the measurement. When "Rinse if defect" is checked, the chamber will be rinsed automatically when a defect is encountered.

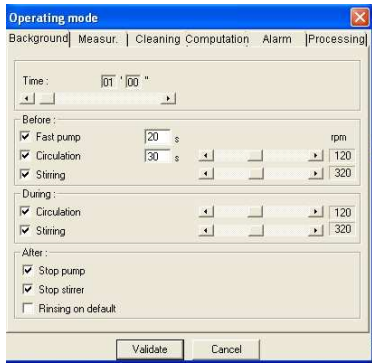

Background measurement


Defines the settings for the measurement with a sample, by specifying the measurement time and all the settings for before, during and after the measurement. Before the measurement, you can set the pumping time (fast throughput, followed by normal) and agitation, as well as dilution of the sample for a given time lapse if excessive obscuring is sensed.

Note: a number of measurements instead of a duration may be displayed by parameterization (see *Time acquisition* on page 78).

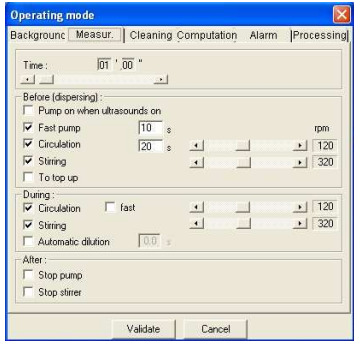


Cleaning

Sets the number of rinses. By default, the number is 4. CILAS recommends performing sufficient rinses to clean the particle size analyzer's chamber after each measurement.

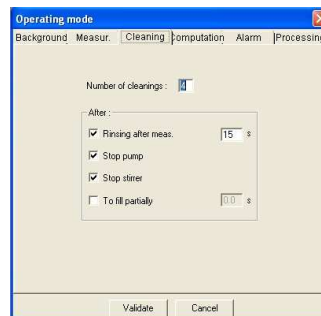

Computation

Specifies the methods for calculations performed by the particle size analyzer. This dialog box is important because the results obtained depend on the settings.

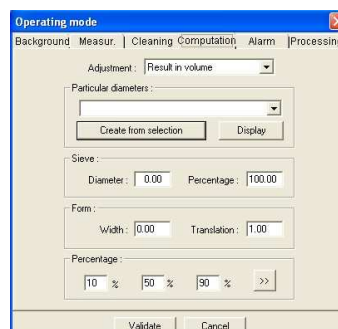

The format for results is selected in the “Adjustments” box from several results formats. The most frequently-used is the default format, called “In-volume results”. For more information about these aspects, read section 3.2 of this manual.

You can select a list of special diameters to be displayed in your result in the second part. If this list has already been saved, then checking the box enables you to load it. Display the selected diameters list by clicking on “Show”. Pressing the “Create from selection” button generates a new list.


The “Screen” box enables you to compare the results presented by the particle size analyzer with results obtained by screening. Enter the size of the screen and the percentage of particles that pass at this size. This lets you compare the two most-common particle characterization methods.

You can also define shape settings in the *Shape* box. Enter the width and the proportional transformation in the corresponding boxes. These values will be used in the calculation.

Lastly, choose the values to be measured for cumulative curves. The values generally selected are 10%, 50% and 90%, and these are the default values. These values can be modified or added at other points.


Alarm

Defines alarm settings for the particle size analyzer. Specify the obscuring limits (the recommended default values are: 0-30 = 30% max) and the desired acquisitions mode. “Keep measurements with obscuring within limits” enables you to ensure that the calculation only takes account of acquisitions performed within the defined obscuring limits (between 5 and 20%, for example).

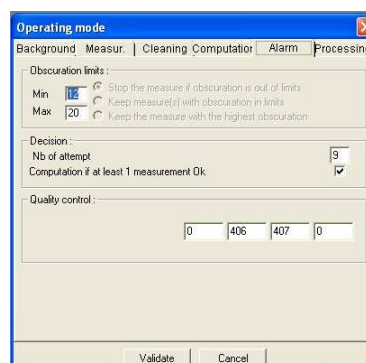

Specify the number of attempts or select one single measurement, by checking the corresponding checkbox. A “Quality control” option is available. It is possible to use measurements already performed to define the size limits and validate the result. By means of the quality control option, the instrument can establish whether the sample is to be accepted or not. Simply enter the reference measurement index or indexes in the boxes.

Processing

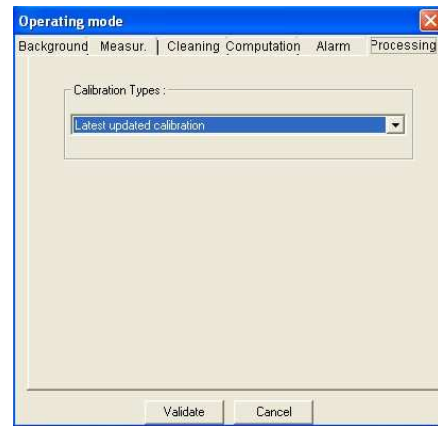

Select the type of calibration desired from the list. Select the calibration type carefully, because all the results depend on proper calibration. CILAS recommends using the latest calibration date-wise by default.

Validate

To accept your settings, click the “Validate” button and then save the new settings in an SOP by pressing “Save SOP”. If you don't validate the settings, the measurement will be performed with the standard settings.

Background measurement	Executes a measurement that enables the measurement of impurities (Background measurement, i.e. a measurement of the signal with no sample).
Next action	Enables you to skip a step.
Close	Closes the dialog box and saves the changes made for this measurement. But SOPs are not saved to the database. You are recommended to save your settings before taking any measurement, by pressing the <i>Save SOP</i> button in this window.
Start measurement	Starts the actual measurement (see sections 6.6.4 and 6.6.5).

6.6.3 Background measurement

1 Start the Background measurement by clicking the **Background measurement** button.

The particle size analyzer starts operating. In the window, you will see two progress bars indicating the state of progress of the measurement. The blue progress bar is the percentage of Background time having elapsed (progress of the Background measurement). The red progress bar is the total measurement percentage accomplished by the appliance.

1180 L // 2255

SOP name: CSR1 [Save SOP]

Sample ref: CSR1-1 [Automatic incrementation]

Sample Name: CSR1 [Short automatic cycle]

Sample type: 2255 [Liquid: EAU / 1.330]

Comments: lot 08 [Dispersing agent:]

Operator: FM

☒ US. during dispersion Time: 60 s Mie: 1.460-0.100/1.330 [Report config]

☐ US. during measurement [Specific surface]

☐ Mono histogram [Erase config]

☐ <1µm [Options...]

Background meas. < [Background in progress...]

Next Action [Sample measurement]

Cancel background [Fast pump]

2. Once the Background measurement has been taken, the message **Background measurement OK** displays in the window. The prompt **Input sample** then displays, and the **Start measurement box** becomes green.

1180 L // 2255

SOP name: CSR1 [Save SOP]

Sample ref: CSR1-1 [Automatic incrementation]

Sample Name: CSR1 [Short automatic cycle]

Sample type: 2255 [Liquid: EAU / 1.330]

Comments: lot 08 [Dispersing agent:]

Operator: FM

☒ US. during dispersion Time: 60 s Mie: 1.460-0.100/1.330 [Report config]

☐ US. during measurement [Specific surface]

☐ Mono histogram [Erase config]

☐ <1µm [Options...]

Background meas. < [Background OK]

Next Action [Input sample]

Close [Start measurement]

Check that these two messages (*Input sample* and *Start measurement*) have displayed before proceeding with the next step.

You can skip a step by pressing *Cancel dry run*, but CILAS advises you not to do this. To ensure accurate measurement results, you should perform a Background measurement before each sample measurement.

6.6.4 Inputting the sample

1. **Input the sample into the ultrasound chamber (see illustration below), together with the dispersal agent if required.**

The obscuring rate depends on the quantity of sample in the circuit. You should seek an obscuring rate of 15%.

To facilitate the entry of the sample, raise the agitator unit (ref. 1), as shown in the illustration, and turn the agitator anticlockwise roughly 90° to lock it in position. To lower the agitator unit again, raise it slightly and reposition it in the chamber.



Figure 32: inputting the sample in liquid mode

The quantity of sample needed to take a measurement varies from 100 to 900 mg. Insert the sample using laboratory tools (a spatula, for example). The signal should obscure by around 15% with regard to the difference between the Background measurement and the sample measurement (see ref. 1 in the illustration below). For the dispersal agent, around 1 to 2 ml will be required; the dispersal agent can be inserted using a pipette.

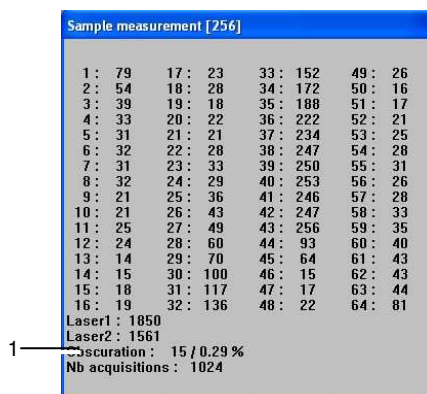


Figure 33: obscuring measurement displayed at the bottom of the window

6.6.5 Actual measurement

1. Click the **Start measurement** button.

The measurement starts and the progress is shown by two indicators. During the measurement, you can view the action in progress and the real-time signals (signals and obscuring rates values – see ref. 1 in the next illustration).

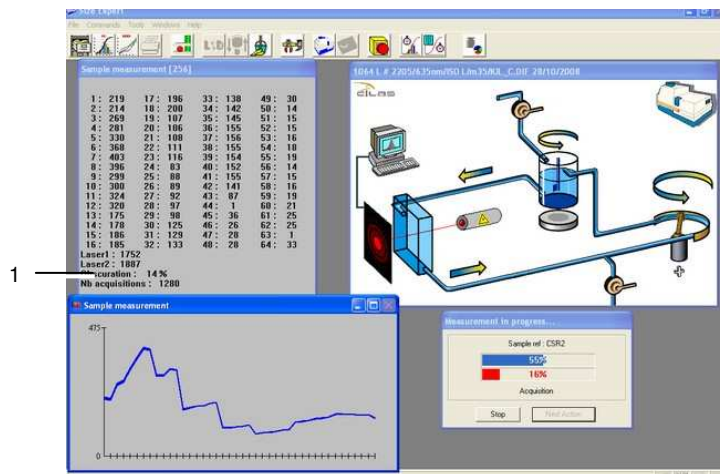


Figure 34: the window during a measurement

6.6.6 End of measurement

1. Once the measurement has been completed, it is automatically saved in the database. The results window then displays (if the option was selected – see *Tools > Options > Organization > View result after measurement*) and the chamber is rinsed automatically.

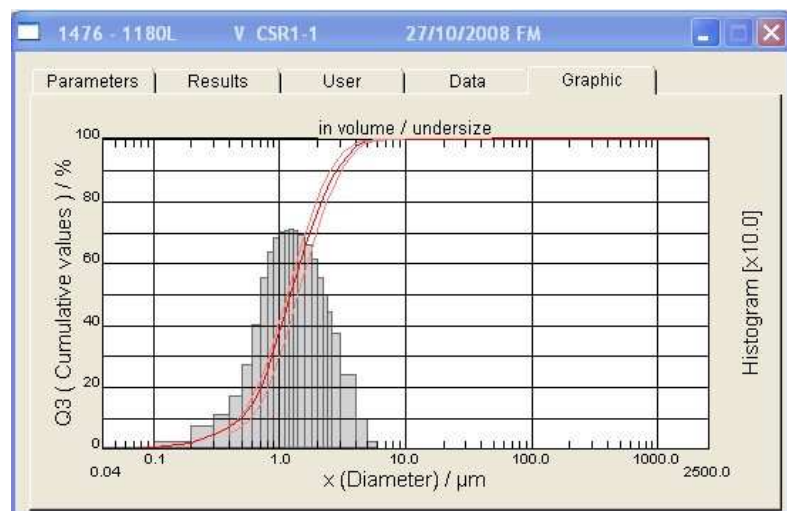


Figure 35: window at end of measurement

2. Proceed to section 8 on page 63 for viewing and managing the particle size analyzer results.

7. Usage in dry mode

7.1 Prerequisites

You are presumed to have completed the steps explained in sections 5.1 - *Checking on connections*, 5.2 - *Powering-on devices* and 5.3 - *Launching the application software*.

7.2 On-screen display

The on-screen display in *dry mode* is as follows:

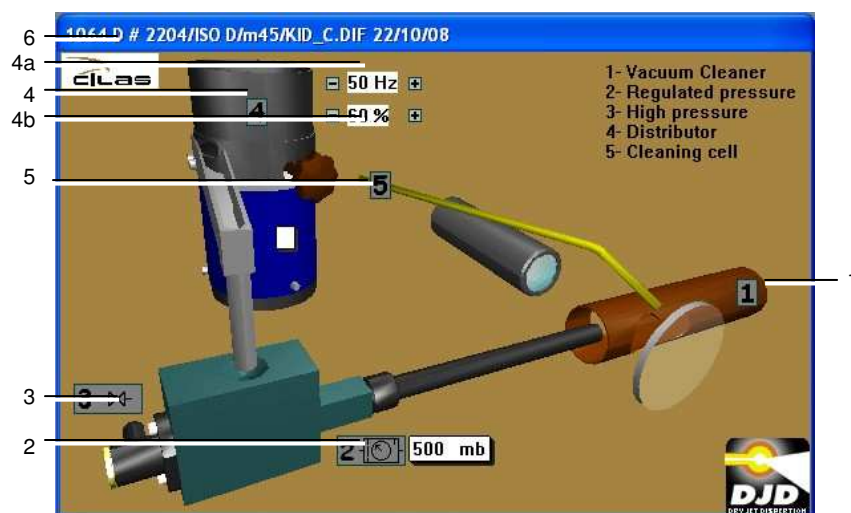


Figure 36: startup display in dry mode .

Note

If the particle size analyzer is only designed for dry mode, the correct mimic panel will always be displayed. If your particle size analyzer is an LD model (liquid mode or dry mode), check that the on-screen display is correct for the desired mode. If it is not, toggle the displayed mimic panel by clicking on the



icon.

7.2.1 Interpretation of the on-screen information

Ref.	Check to perform
1	<p>External vacuum cleaner system</p> <p>One click on the icon starts the external vacuum cleaner system. A second click toggles it off.</p>
2	<p>Regulated pressure.</p> <p>Can only be activated if the vacuum cleaner system (ref. 1) is activated.</p> <p>One click turns on regulated pressure (entry of an air flow at the point of entry to the funnel to contribute to dispersing the powder to be analyzed); a second click stops the pressure.</p> <p>A right-click displays the setting adjustment dialog box (100 to 8000 mb); the default value is 500 mb. Pressing the <i>Del</i> key on the keyboard clears the value entered; the application then adopts the default value.</p>
3	<p>High cleaning pressure.</p> <p>Can only be activated if the vacuum cleaner system (ref. 1) is activated.</p> <p>One click starts high cleaning pressure in the circuit of refs. 1, 2 and 3 (pipe, funnel and inlet); a second click stops high pressure.</p>
4	<p>Vibrator startup/shutdown.</p> <p>One click starts the vibrator; a second click stops the vibrator.</p>
4a	<p>You can adjust the vibrator's vibration frequency by clicking on the '+' or '-' controls, or by right-clicking. In the latter case, enter the desired setting (5 to 80 Hz); the default value is 50 Hz. Pressing <i>Del</i> on the keyboard clears the value entered; the application then adopts the default value.</p>
4b	<p>You can adjust the vibrator's cyclical ratio for vibration by clicking on the '+' or '-' controls, or by right-clicking. In the latter case, enter the desired setting (5 to 90%); the default value is 50%. A low value means a low vibrating power. Pressing the <i>Del</i> key on the keyboard clears the value entered; the application then adopts the default value.</p>
5	<p>Activates window cleaning.</p> <p>Can only be activated if the vacuum cleaner system (ref. 1) is activated.</p> <p>The pressure is manually adjustable by means of the control located inside the particle size analyzer (see Figure 37).</p>
6	<p>Serial number of the particle size analyzer used.</p>



Figure 37: location of the high pressure cleaning adjustment control

7.3 Choice of carrier liquid and dispersal agent

In dry mode, the sample is carried by compressed air. Before taking a measurement with the particle size analyzer, you should adjust the compressed air pressure to achieve satisfactory dispersal.

7.4 Preliminary test

Before commencing measurements with each product, it is essential to establish the compressed air pressure required for satisfactory dispersal. Proceed as follows:

1. **Place the sample in the dry mode vibrating feed bowl. The quantity of sample necessary varies from 1 to 300g.**




Figure 38: inserting the sample in dry mode

2. **Commence a measurement (refer to the procedure in section 7.5).**
3. **Check that dispersal is satisfactory by analyzing the results.**
Analysis of dispersal is covered in section 8
4. **If dispersal is not satisfactory, select a different air pressure and make another measurement. If the results are satisfactory, adopt this pressure as standard for this particular product.**
There will be a particular compressed air pressure for each product. You need to establish the right air pressure setting before taking a measurement. You should use the same air pressure for all samples measured using a given SOP. Satisfactory dispersal will ensure satisfactory results.


This procedure should be followed each time you are going to measure a new product. Because dispersal is a very important parameter in a measurement, this step must be completed with care. Once you have established the pressure, you can start taking measurements as explained in section 8.

7.5 Actual measurement

Reminder

If an incident occurs or if you need to stop the particle size analyzer in an emergency, click on the  icon in the toolbar.

7.5.1 Automatic rinsing

1. **Rinse the particle size analyzer by clicking on the  icon or by selecting **Commands > Liquid mode > Rinsing**.**
Filling takes place after a drainage of 15 seconds. It is performed several times, in accordance with the SOP being used.

7.5.2 Adjusting measurement settings




1. Click on the  icon or select **Commands > Measurement** in the toolbar.
2. The measurement settings dialog box displays:

Figure 39: the measurement settings dialog box

Enter the corresponding information as follows:

Description	Information to enter or select
Name of SOP	<p>The SOP is designed to ensure good reproducibility of results. It contains all the measurement parameters defined on the CILAS particle size analyzer. CILAS recommends that you establish and save an SOP for each particular product.</p> <p>Select a standard operating procedure (SOP) from the list already defined and saved. The SOP list is displayed when you right-click on the dropdown list.</p> <p>The SOP contains parameters such as the theory used, the working conditions, etc. You can save the SOP currently displayed in the window by clicking on the Save SOP button. Give the file a meaningful name, such as the product name or code.</p>
Sample ref.	Any name reminiscent of the sample to be analyzed.
Sample name	Dropdown list of sample names saved in the database.
Sample type	Dropdown list of types of samples recorded in the database.
Comments	22-character field in which to write any comment of your choice.
Operator	Select the operator from the dropdown list. This list contains all the users for whom an account has been created (see section 5.3).
Automatic increment	<p>Several measurements can be performed on the same sample. The chamber is rinsed automatically after the last measurement.</p> <p>A dialog box will display so you can enter the index for the first measurement, the total number of measurements desired, and the time interval between two measurements. This feature is designed for organizations that take multiple measurements using the same working methods.</p>

Flow regulator	<p>When checked, the flow regulator is used; this enables regulation of the flow of particles in the funnel of the bowl. Enter the value for the difference between the bowl and the hard mass distributor pipe in mm in the adjoining field (one line equals 1 mm).</p> <div data-bbox="997 250 1246 488" data-label="Image"> </div> <p>Turning (screw-like movement) the mass distributor one graduation in relation to the index mark on the top of the ring raises or lowers the pipe by 1 mm in relation to the bottom of the bowl. This spacing enables the flow of more or less sample, and thereby adjusts and stabilizes the obscuring rate.</p>
MIE	<p>Displayed by default when ISO MIE has been selected from the <i>SOP name</i> dropdown list. If Fraunhöfer is selected from the <i>SOP name</i> list, this button is not displayed.</p> <div data-bbox="938 734 1305 1039" data-label="Image"> </div> <p>The MIE theory is used for particles that are fine (smaller than 1 μm) and/or transparent, whereas the Fraunhöfer – the most common – is an approximation of the MIE theory.</p> <p>A database is available for the most commonly-used samples and liquids.</p> <p>Sample box</p> <p>In the dialog box, select the product of which the refraction index is closest to the sample to be analyzed. You can also create a new sample by entering its index (complex number with a real part and an imaginary part) and clicking on <i>Save</i>. In the dialog box that opens, enter the new name, and maybe a comment, before accepting your entries by pressing <i>Validate</i>.</p> <p>Liquid box</p> <p>Enter here the name of the carrier liquid as well as the real part of its refraction index.</p>
Specific surface	When you click, a dialog box displays so that you can enter the density and form factor parameters for the particles to be measured. These values will be displayed or printed in the <i>Results</i> window (see § 8.3.1).
Single histogram	When checked, eliminates spurious noise in the signal and saves a single size class. This feature is only used for monodispersed samples.
<1 μm	When checked, this checkbox to coerce MIE usage.
Report settings	Opens a dialog box that lets you load a special report previously-created for <i>Expert Report</i> (see <i>Options</i> below).
Clear config.	Clears the configuration of <i>Expert Report</i> .

Modes

5.00

Background measurement

Defines the settings for the Background measurement. *Duration* specifies or modifies the acquisition time for a Background measurement or sample measurement.

Note: a number of measurements instead of a duration may be displayed by parameterization (see *Time acquisition* on page 79).

Putting a checkmark beside *Vacuum cleaner system* and/or *Pressure* activates the external vacuum cleaner system and the pressure regulator respectively at the entry to the funnel (Figure 36, ref. 2) during the Background measurement.

Measurement

When *Background measurement before measurement* is checked, a Background measurement is performed to measure the Background (residual value for all dust present).

When *Vacuum cleaner system* is checked, the vacuum cleaner system will be activated during the measurement.

When *Pressure* is checked, the pressure regulator at the entry to the funnel (Figure 36, ref. 2) is activated with a set level specified on the right.

Stop after sensing obscuring peak enables you to halt the measurement cycle when the obscuring returns to zero (there is no more sample left in the vibrating bowl).

Duration specifies the measurement acquisition time.

Frequency specifies the vibration frequency of the vibrator during the measurement.

Cyclic ratio specifies the power of the vibrator during the measurement; the lower the value, the lower the vibration power.

Sample preparation

Feed time specifies the time interval between startup of the vibrator and the first signal acquisition.

Clean after measurement

Specifies the cleaning procedure.


Funnel: put a checkmark here to clean the funnel system after each measurement, and specify the funnel cleaning time length.

Clean cell: put a checkmark here to actuate blow-cleaning of the cell between 2 measurements cycles, for the specified *Time length*.

Note: You are recommended to clean the funnel system and the cell after each measurement.

Computation

Specifies the methods for calculations performed by the particle size analyzer. This dialog box is important because the results obtained depend on the settings.

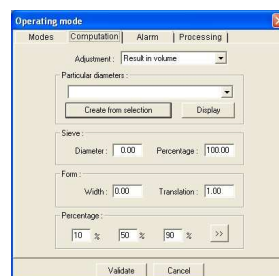

Adjustments: selects the type of results calculation. The format used by default is *In-volume results*. For more information about these aspects, refer to section 12.2 of this manual.

Special diameters: selects a list of special diameters to be measured. If this list has already been entered, it can be loaded by selecting it from this dropdown list. You can display the list of diameters selected by clicking on *Display* or *Create a new list*, by using the button *Create from selection*; in the window displayed, select the diameter and click on *Add*.

Screen point

Enables you to compare the results provided by the particle size analyzer with those obtained by screening. Enter the size of the screen and the particle distribution. This enables you to compare the two most-common particle characterization methods.

Shape

Enables you to specify correlation parameters by entering the width and the proportional variation in the corresponding boxes. These values will be used for calculations, so as to modify the histogram and correlate the results with a reference.

Percentage


Three (3) of the highest-priority 8 values (particular percentages) are displayed in these boxes. All the specified values are shown in the results window (see Figure 56 under *Diameter at x %*).

>>>

This button enables you to specify the list of highest-priority values.

Alarm

Defines settings for the particle size analyzer alarm.

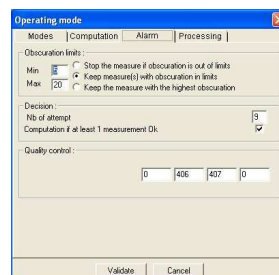

Obscuring limits

Min and *Max* specify the obscuring limits (the values recommended by default are: 0-30 = 30% max) and the desired acquisition method.

Putting a checkmark beside *Stop measurement if obscuring outside limits* stops the measurement if the alarm thresholds are exceeded.

Keep measurement(s) with obscuring within limits enables you to only take account, in the calculation, of acquisitions accomplished within the specified obscuring limits (between 5 and 20% for example).

Putting a checkmark beside *Keep the measurement with the highest obscuring rate* stores the measurement taken with the highest obscuring rate.

Decision

When checked, enables you to specify the number of attempts before registering an error.


Calculate if at least measurement OK keeps the measurement that

fluctuates least during an acquisition instability.

Quality control

Lets you use measurements already taken to specify size limits and validate results. By virtue of the quality control option, the instrument can establish whether the sample is to be accepted or not. Simply enter the reference measurement index or indexes in the boxes.

Processing

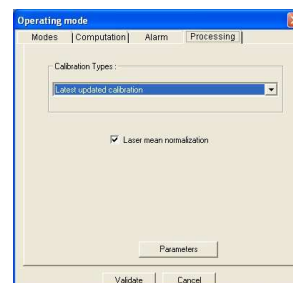

5.389


Selects the type of calibration to be used in the list. Make this choice with care, because all results are dependent on the calibration selected. You are recommended to use the latest calibration date-wise by default.

Validate	To accept your settings, click the “Validate” button and then save the new settings in an SOP by pressing “Save SOP”. If you don't validate the settings, the measurement will be performed with the standard settings. Once you have specified all the settings, the measurement can be taken (see section 7.5.3).
Background measurement	Starts a measurement to measure impurities (Background measurement, namely measurement of the signal without a sample).
Next action	Enables you to skip a step.
Close	Closes the dialog box and saves the changes made for this measurement. But SOPs are not saved to the database. You are recommended to save your settings before taking any measurement, by pressing the <i>Save SOP</i> button in this window.
Start measurement	Starts the actual measurement (see sections 7.5.4 and 7.5.5).


7.5.3 Background measurement

1. **Start the Background measurement by clicking the Background measurement button.**

The particle size analyzer starts operating. In the window, you will see two progress bars indicating the state of progress of the measurement. The blue progress bar is the percentage of Background time having elapsed (progress of the Background measurement). The red progress bar is the total measurement percentage accomplished by the appliance.

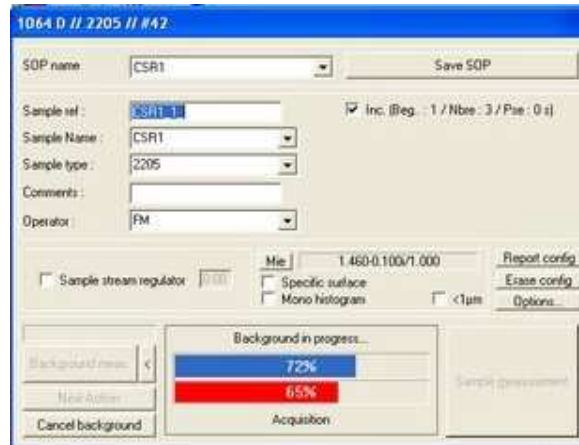

2. **Once the Background measurement has been taken, the message Background measurement OK displays in the window. The prompt Input sample then displays, and the Start measurement box becomes green.**

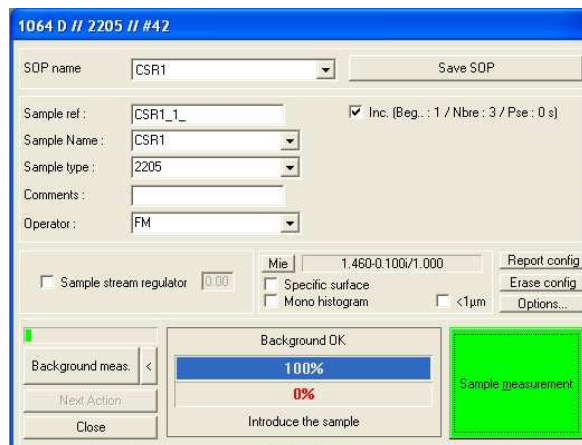

Check that these two messages (*Input sample* and *Start measurement*) have displayed before proceeding with the next step. You can skip a step by pressing *Cancel dry run*, but CILAS advises you not to do this. To ensure accurate measurement results, you should perform a Background measurement before each sample measurement.

7.5.4 Inputting the sample

1. **Close the ring of the mass distributor (see illustration below).**
Turn the distributor clockwise.
2. **Insert the sample into the mass distributor (see illustration below).**



Figure 40: inputting the sample

The quantity of sample necessary for a measurement depends on the density of the product. Insert the sample using a laboratory tool such as a spatula.

2. **Turn the ring (ref. 1) of the mass distributor one graduation (ref. 3).**
The index mark (ref. 2) engraved on the ring shows the angle of rotation. The mark engraved on the body (ref. 4) represents zero. This one-notch rotation movement has the effect of increasing the clearance height between the bowl and the distributor by 1 mm.



Figure 41: the ring on the mass distributor

The signal should obscure by around 15% with regard to the difference between the Background measurement and the sample measurement (see ref. 1 in the illustration below). If necessary, turn the ring again to achieve a satisfactory obscuring rate.

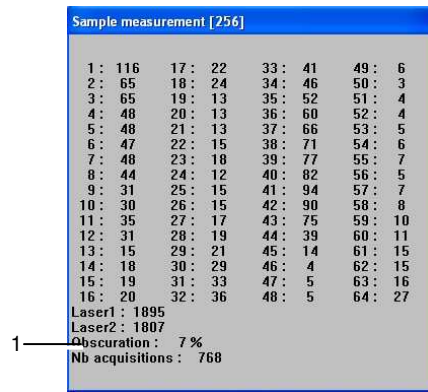


Figure 42: obscuring measurement display at the bottom of the window

7.5.5 Actual measurement

1. Click on the **Start measurement** button.

The measurement starts and the progress is shown by two indicators. During the measurement, you can view the current action, the signal values and the obscuring rate (see illustration below).

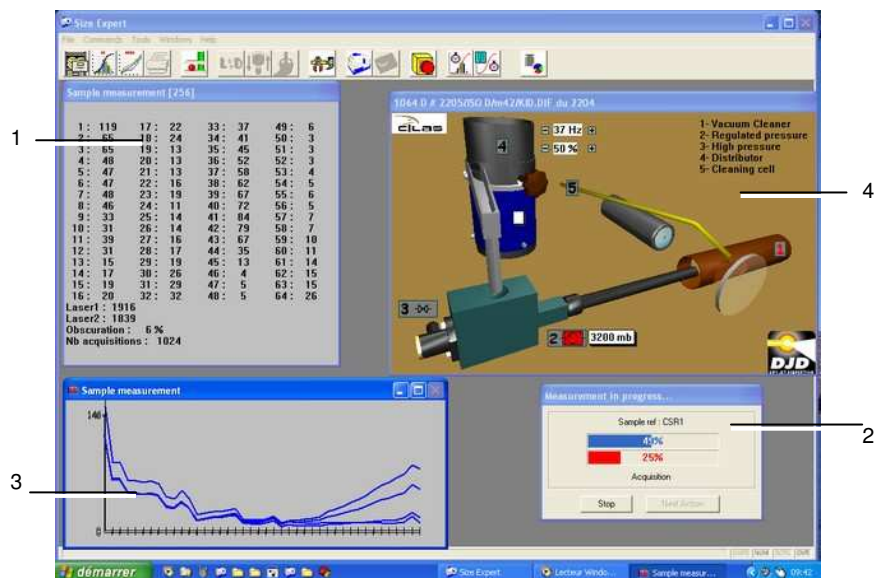


Figure 43: the windows displayed during the measurement

- | | |
|---|---|
| 1 | Window displaying real-time signals, laser power and number of acquisitions. |
| 2 | Dialog box showing the progress of the Background measurement process. |
| 3 | Graphic displaying signals measured (graphic view of the data in window ref. 1). By default, this graphic is overlaid so that you can see any signal discrepancies. |
| 4 | Mimic panel in dry mode. |

Table 3: information items in the various parts of the display

7.5.6 End of measurement

- Once the measurement has been completed, the results window displays (if the option was selected – see **Tools > Options > Organization > Viewing results after measurement**) and the chamber is rinsed automatically.

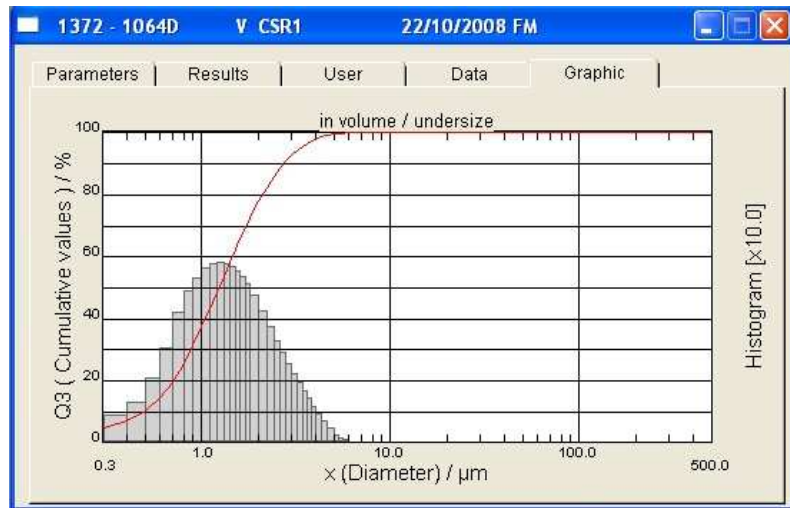


Figure 44: the window displayed after a measurement has been completed

Note: the results are automatically saved in the database. This enables you to perform several measurements before viewing and analyzing the results.

2. Proceed to section 8 on page 63 for viewing and managing results from the particle size analyzer.

7.6 Free-fall mode

7.6.1 Purpose

This mode uses a special bowl fitted with a long funnel, so that the sample free falls past the CCD camera. Next, a special treatment called *erosion* is performed. This method is used particularly in dry mode for powdery, water-repellent samples that cannot be measured using liquid mode.

However, this mode cannot measure samples of which the size is smaller than 300 μm . In addition, the sample present in the bowl must be pre-dispersed.

7.6.2 Installation

Proceed as follows:

1. Remove the mass distributor (ref. 1) and the vibrating bowl (ref. 2).

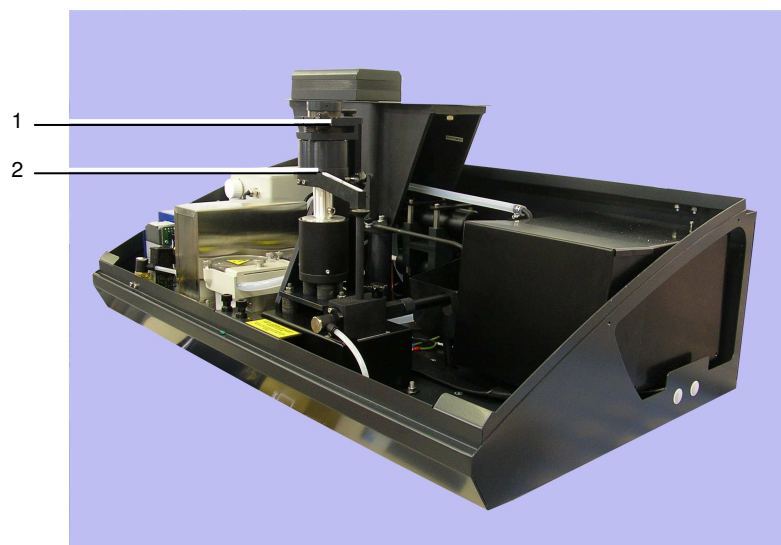


Figure 45: the mass distributor and the vibrating bowl must be removed

- 1
- 2
- 3



- 1
2



- 1



8. Using results

8.1 General

The method for viewing and using results is the same as for measurements in both liquid mode and dry mode. This section covers how to view and use measurement files.


All measurements taken with your particle size analyzer are stored in a database. Using the database is covered in section 9.3.

8.2 Measurement selection

The database enables you to view all the results you want to see. This is a major advantage. The *Size Expert* application allows you to compare results obtained today with results obtained in the past.

8.2.1 Selecting the file to view (database)

To open a file already stored in the database, proceed as follows:

1. Click on  or go to **File > Results** in the menu.
A dialog box displays on-screen.

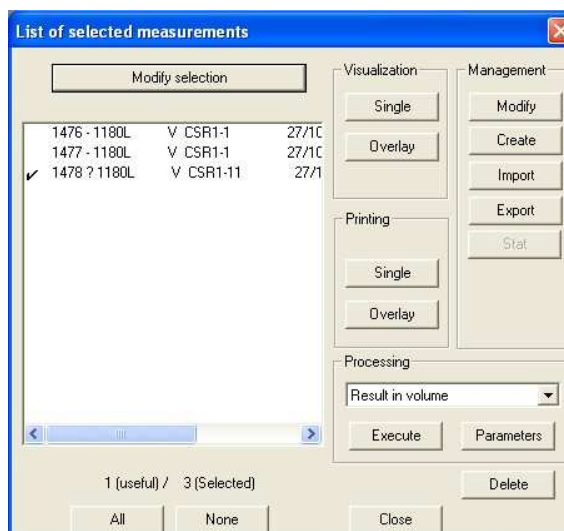


Figure 49: dialog box showing selected measurement lists

2. **In the left-hand list, examine the files already loaded.**
If the desired files are present in the list, it means that these files have already been loaded.
If the files have not been loaded, click *Change selection*. The following dialog box will open on-screen:

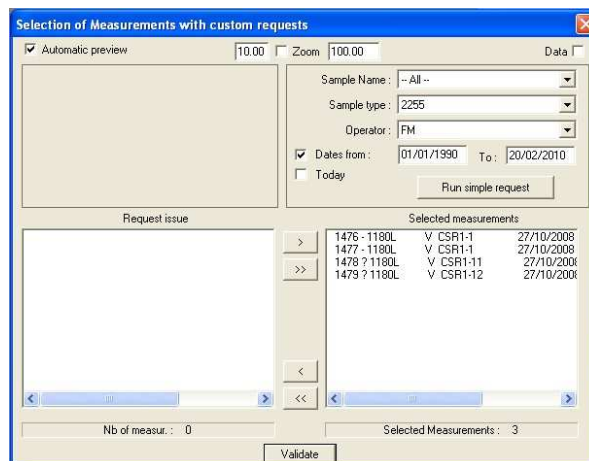


Figure 50: search for measurement files

The top right-hand section is used for entering measurement file search parameters. Files can be searched-for using the following parameters:

- name of product measured,
- sample type,
- operator having performed the measurement,
- measurement date.

A search among the most-recent files can be performed by putting a checkmark in the *Today* checkbox. This lets you only search among files with the selected parameters from the given day. The date should be entered in the standard format for the country. To run a search with no criterion, select *All* in each box.

2. Then click on **Run simple request** to accept your choices and start the search.

All files stored in the database will be listed.

For a preview of the curve pertaining to the selected measurement in the top left-hand corner of the window (ref. 2), put a checkmark beside *Automatic preview* (ref. 1).

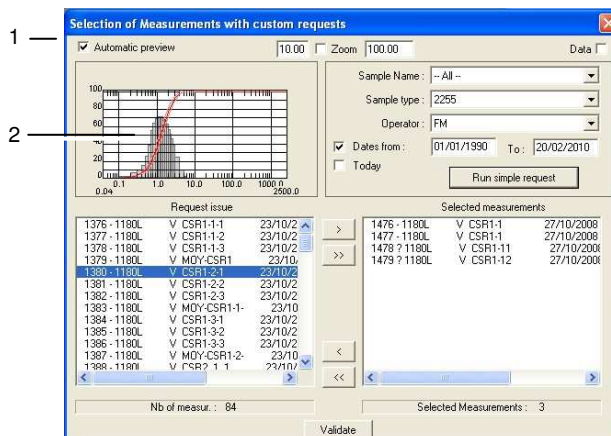


Figure 51: view of the curve pertaining to the selected measurement in the top left-hand part of the window

For a preview of the data concerning the selected measurement (ref. 2) in the right-hand corner of the window, put a checkmark beside the *Data* checkbox (ref. 1).

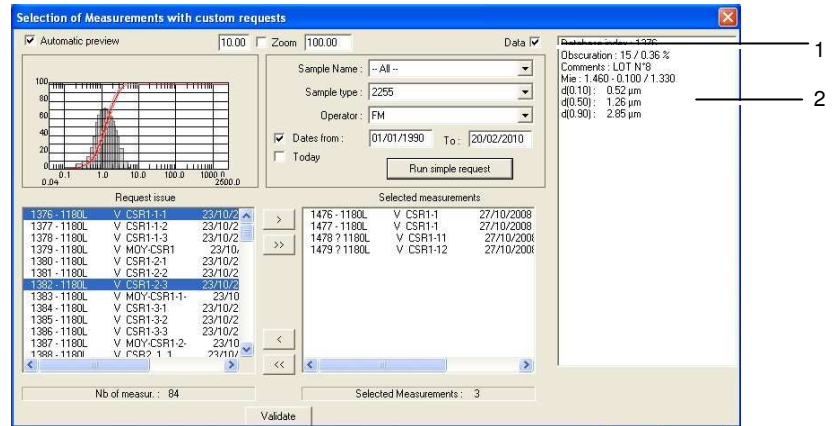


Figure 52: view of data pertaining to the measurement selected in the right-hand part of the window

Once you've found the measurement you are looking for, select the file by clicking on it. To select measurements to process, there are several possibilities:

- you can double-click in the query results list on the left-hand side;
- you can click on the ">" button.

In both cases, the measurements are transferred to the "Selected measurements" box.

To select measurements, use the same principle as described for the "<" button.

Note: to select or deselect call measurements, click ">>" or "<<".

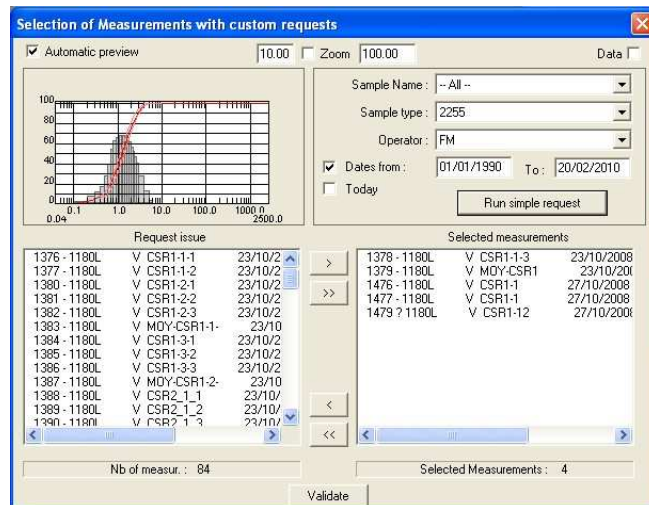


Figure 53: selecting and displaying measurement files

3. When the files have been selected, click "**Validate**".

8.2.2 Measurement analysis and processing

After you click on *Validate*, the following window displays:

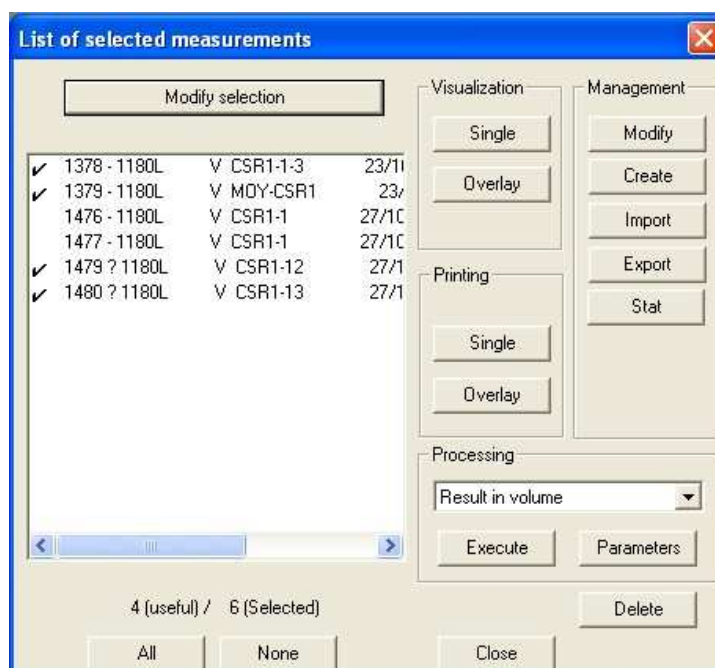


Figure 54: result from selecting measurements

This window enables you to view, edit, compare and print results obtained with your particle size analyzer.

8.2.3 Selecting a measurement to view

Select the measurement to view. To select all measurements in the list, click on "All". To deselect all measurements, click "None".

Note: it is possible to select measurements individually by using the space bar on the keyboard.

8.2.4 Viewing or printing measurements

A single measurement

Select a measurement with the mouse and click on the *Individual* button in the *View* or *Print* section. If you select "View – individual", the results window displays on-screen. Section 8.3 describes the content of the window displayed in individual viewing mode.

Several measurements

If you select *View - Superimpose* in the *View* or *Print* box, the report is printed. Section 8.4 covers the content of the window displayed in superimposed viewing mode.

8.3 Information displayed in individual mode

Once the measurement has been completed, the results window displays automatically if you put a checkmark beside *View results after measurement* in *Options > System options > Organization*.

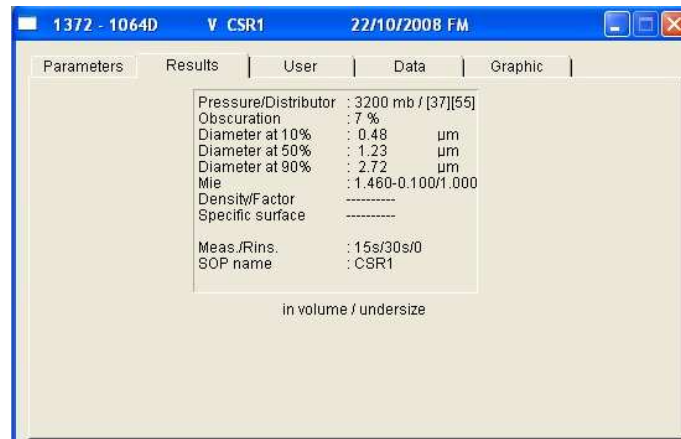



Figure 55: the results window

Note: it is possible to display the graphic window after the measurement if you check *View graphic* in *Options > System options > Organization*.



Click the  button to print the results. By default, results are printed in a standard report format.

To personalize the report, use the optional *Expert Report* application designed by CILAS. It enables you to design a personalized report.

The window displayed has the five tabs described below.

8.3.1 Results tab

A summary of results and operating settings is displayed, namely the obscuring, the results (median diameters d50%, specific surface, etc.) and operating settings (theory used, SOP name, etc.). The information items necessary for a specific report are contained in this part.

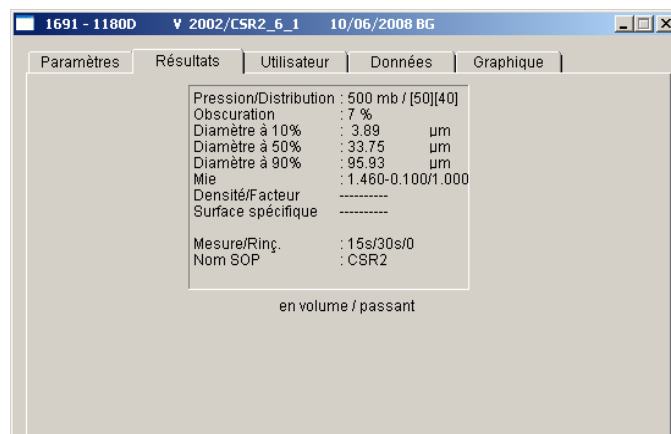


Figure 56: the *Results* tab

8.3.2 Settings tab

This tab contains all the information items entered before the measurement, and all the operating settings. This part contains the operating method used, the sample measured, etc. This tab is used for determining whether a comparison

is possible between two measurements. For a comparison, the SOPs must be similar.



Figure 57: the *Settings* tab

8.3.3 User tab

This contains the specific settings chosen by the user.

8.3.4 Data tab

This tab contains a table of results. For each diameter measured, the table states the population density value q3 and the cumulative curve Q3 (as a percentage).

The screenshot shows the 'Data' tab of the same software window. It displays a table with three main sections: 'x: diameter / μm ', 'Q3: cumulative value / %', and 'q3: density distribution'. The table is organized into four groups of rows, each corresponding to a specific diameter range. The first group covers diameters from 0.30 to 1.10 μm , the second from 1.20 to 2.20 μm , the third from 2.40 to 4.00 μm , and the fourth from 4.30 to 7.50 μm . Each group contains three rows: 'x', 'Q3', and 'q3'. The 'Q3' and 'q3' rows contain multiple data points corresponding to the diameters in the 'x' row.

x: diameter / μm		Q3: cumulative value / %					q3: density distribution		
x	0.30	0.40	0.50	0.60	0.70	0.80	0.90	1.00	1.10
Q3	4.62	7.37	10.51	14.59	19.58	25.52	31.63	37.60	43.29
q3	0.64	0.90	1.33	2.11	3.05	4.20	4.89	5.34	5.63
x	1.20	1.30	1.40	1.50	1.60	1.70	1.80	2.00	2.20
Q3	48.63	53.57	58.12	62.29	66.08	69.52	72.64	77.99	82.29
q3	5.79	5.82	5.79	5.70	5.54	5.35	5.15	4.79	4.26
x	2.40	2.60	2.80	3.00	3.20	3.40	3.60	3.80	4.00
Q3	85.76	88.57	90.87	92.75	94.28	95.53	96.55	97.38	98.03
q3	3.76	3.31	2.93	2.57	2.24	1.94	1.68	1.45	1.20
x	4.30	4.60	5.00	5.30	5.60	6.00	6.50	7.00	7.50
Q3	98.75	99.25	99.66	99.83	99.93	100.00	100.00	100.00	100.00
q3	0.94	0.70	0.46	0.28	0.17	0.10	0.00	0.00	0.00

Figure 58: the *Data* tab

The results are read as follows:

- X: diameter of particles (population class);
- Q3: cumulative value as a %;
- q3: population density as a %.

8.3.5 Graphics tab

This tab shows the population density histogram and the accumulated tab.

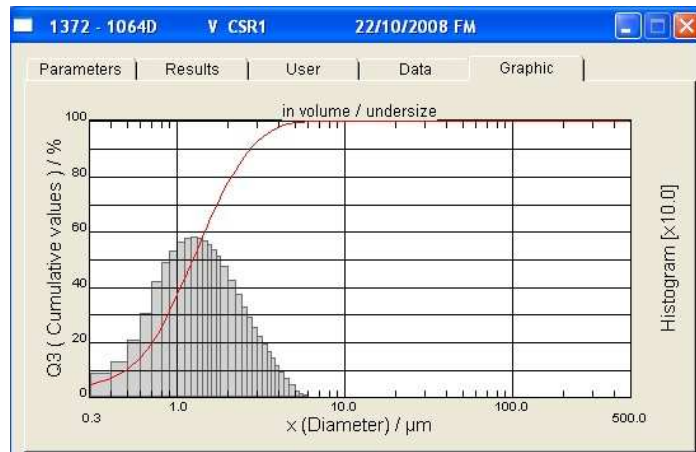


Figure 59: the *Graphic* tab

8.4 Information displayed in superimposed mode

Note: you select this mode by clicking on the *Superimpose* button in Figure 54.

The *Graphic* tab

This tab shows the cumulative curves and histograms.



Figure 60: example of a graphic (with superimposed results, in this particular case).

The *Results* tab

The *Results* tab displays a table containing results, and differences between them.

For each result, the minimum value, the maximum value and the typical difference are shown. This information can be saved in an Excel® file. This option is specially designed for establishing comparisons.

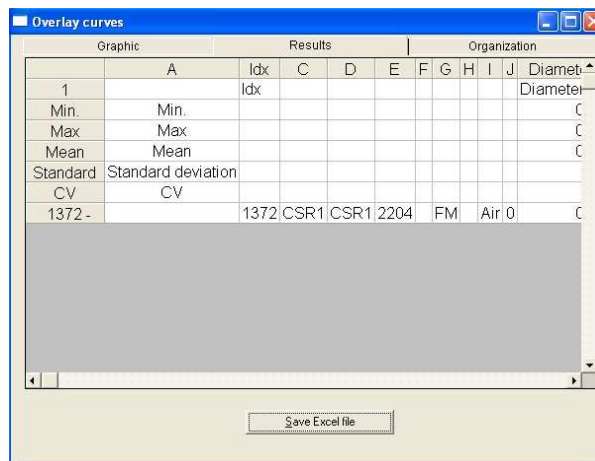



Figure 61: example of results

The *Organization* tab

This tab enables you to select parameters for comparison purposes.

Figure 62: example of parameters selection



To print a superimposed report, click on the  icon or click on the *Superimpose* button in the *Print* section (see Figure 54). The information is displayed on-screen in a standard report format.

The *Read* and *Write* buttons are respectively for reading or saving report configuration information.

8.5 Managing results files

The *Management* part of the window enables you to modify various items of information in results files, except in *CFR 21 Part 11* mode.

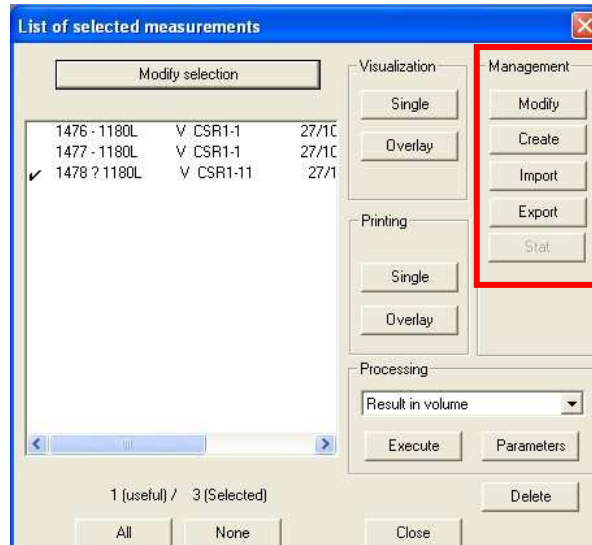


Figure 63: the management box

8.5.1 Editing a measurement

To edit the measurement directly, click on *Modify* in the part of the window illustrated above. The following window then displays.

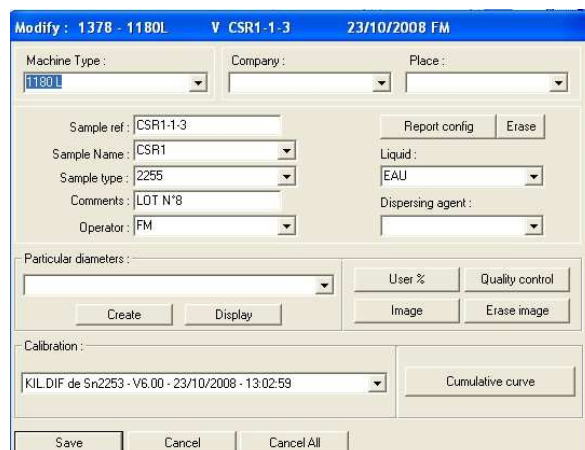


Figure 64: the management window after a measurement

This window enables you to edit any parameter. The changes will be saved in the database, but the former configuration will not be lost; changes are stored in another measurement file, which is a modified copy of the original.

8.6 Recalculating results

The standard method produces in-volume results, which is the most commonly-used method in laser diffraction.

It is possible to recalculate results as surface, number, Log-Normal, Rossin-Ramler or as a monodispersed sample (to eliminate spurious information).

For more information about this, check section 12.2 of this manual.

Proceed as follows:

1. Select the **Selected measurements list** window.

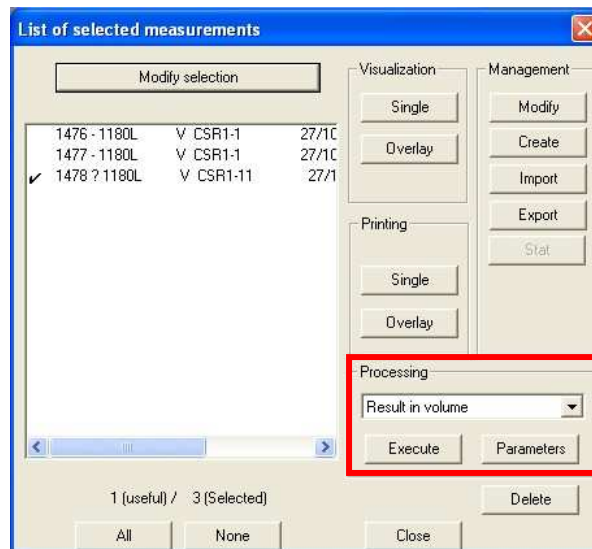


Figure 65: the **Selected measurements list** window

2. Select the list of files to be recalculated (left-hand area), using the space bar on the keyboard.
3. In the **Processing** box, choose the calculation method to be used from the dropdown list.
4. Click on **Parameters** to define parameters such as the particle shape (width and proportional difference).

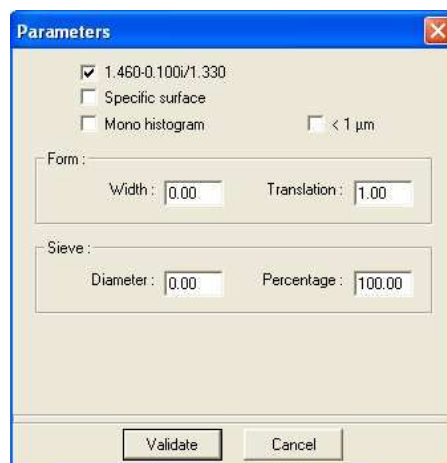


Figure 66: the **Parameters** window

The first choice concerns the MIE indexes.

The second choice enables you to obtain results for the specific surface.

When the *MonoHistogram* is activated, only the size with the biggest distribution will be used. Other sizes will be eliminated and considered to be spurious.

It is possible to add results obtained by screening the same sample (*Screen point*).

5. **Validate to close the window again.**

6. **Start the calculation by clicking on *Calculate*.**

An indicator displays the progress of the new calculation.

7. **Once the calculation has been completed, a new file displays in the list.**

The new file with the calculation results is stored in the database like the other files, and can be used like any other file.

8.7 Expert calculation

This function is available from the menus by selecting *Commands > Real time > Expert calculation*, and enables you to modify the processing settings applied and to view these adjustments on the curve.

The window displayed is as follows:

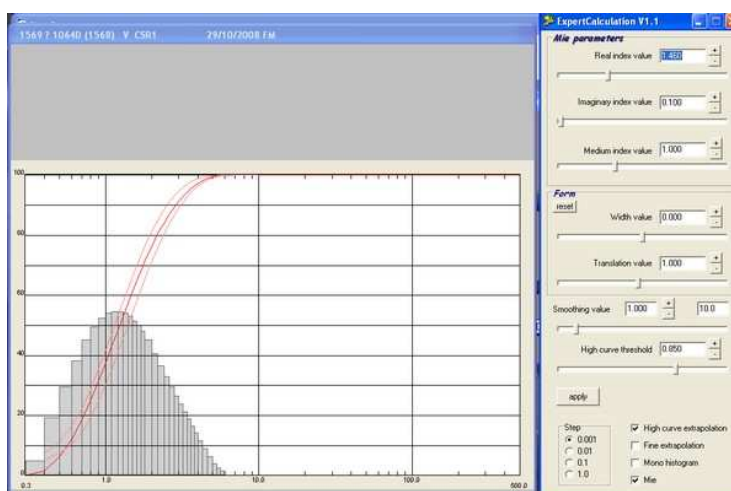


Figure 67: the *Expert calculation* window (on the right), and the resulting modified curve.

The following commands are available:

- MIE index,
- shape parameters,
- smoothing constant.

Modify the parameters used in the SOP so as to fine-tune it for the type of powder measured.

8.8 Quality control

Quality control displays the min/max curves superimposed over the current measurement curve. To select this feature, choose *Commands > Quality control*.

To view a curve with or without quality control, proceed as follows:

1. Click *File > Results > Modify selection*, and select a measurement from the database via its index number.
2. Select *Commands > Measurement > Options > Alarms*.
3. In the *Quality control* tab, enter the index numbers. The index number is the number on the left-hand side of database selection lists (489-490, for example); this number is unique, and is an identification number within the database.

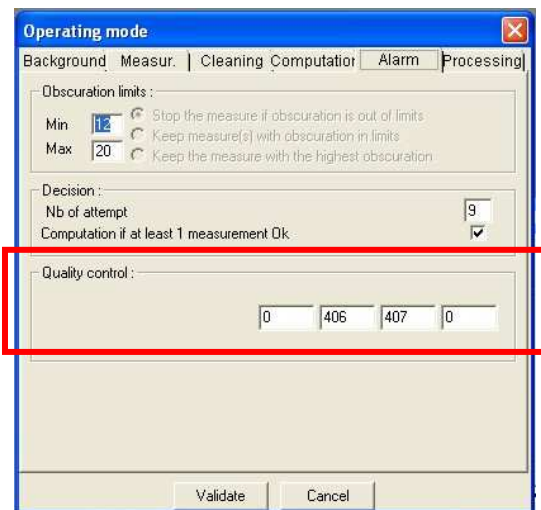


Figure 68: *Quality control* tab

4. Close the dialog box and display the curves with or without the quality control curves. (*Command > quality control*)

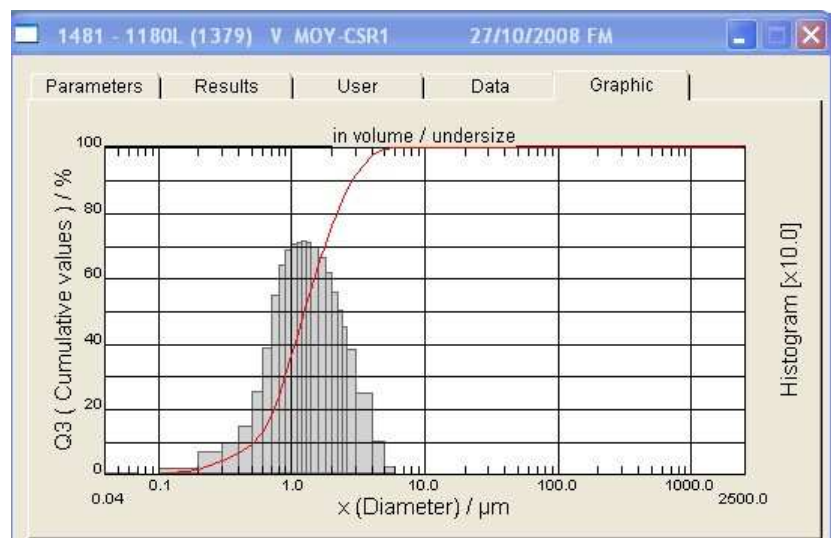


Figure 69: Individual view curve without quality control

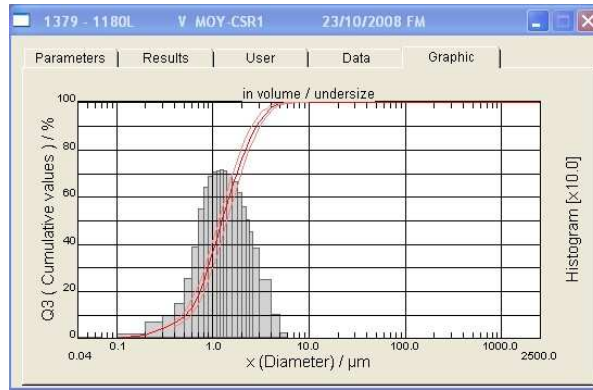


Figure 70: Individual view curve with quality control



Figure 71: Curve without superimposition and without quality control

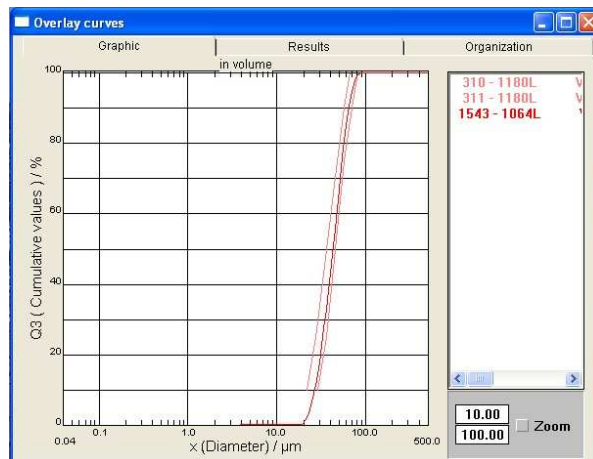


Figure 72: Curve with superimposition and without quality control

9. Application configuration

9.1 Purpose of configuration


Size Expert is an application specially designed for CILAS particle size analyzers. It incorporates many options and the features described in the preceding sections are standard functions. This section describes the parameterization of other options so as to adapt the software to the user's needs.

Note: CILAS can help you optimize your operating method. Drawing on our thirty years of experience, the applications laboratory can help you improve your results by creating an SOP that is specific to your products. Contact CILAS at info.particle@cilas.com, or visit our website at: www.particle-size-analyzer.com.

9.2 Managing the tools

9.2.1 Access

Proceed as follows:

1. Select **Tools >Options** from the menu bar, or click on the  icon.
2. The configuration window opens.
It contains the 6 tabs described below.

9.2.2 Interface tab

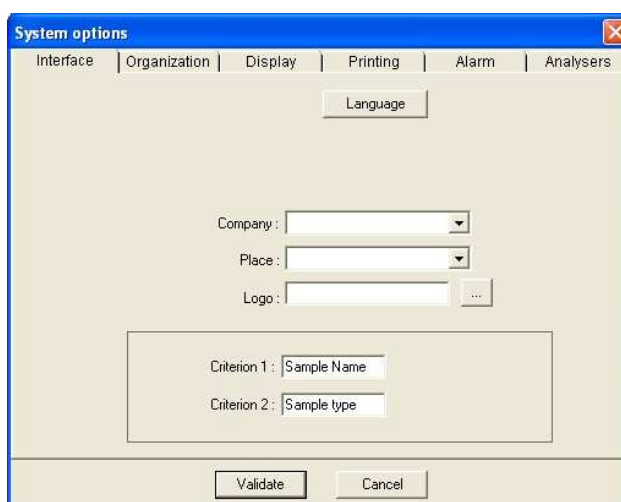


Figure 73: settings in the *Interface* tab

It contains global settings for the *Size Expert* application.

- **Language:** select the application's display language from a list.
- **Logout:** when checked, security levels are activated (see § 5.4).
- **Company, location:** specify the name of the enterprise, and its address. These settings are displayed in the *Settings* tab of the individual view (see section 8.3.2), and in the *Sample name* and *Sample type* in Figure 31.
- **Logo:** specifies the enterprise's logo to be included in each report. Select an image in bitmap format only (bmp), by clicking on the "...” button.
- **Criterion 1** and **Criterion 2:** the criterion names are very important to specify when storing measurements in the database. They are used as search keys. These parameters will be requested for each measurement, and will be stored in the results file in the database. By default, the two parameters are the *Product type* and the **Client** name. The settings are displayed in the *Settings* tab of the individual view (see section 8.3.2) and in the *Sample name* and *Sample type* in Figure 31.

9.2.3 Organization tab

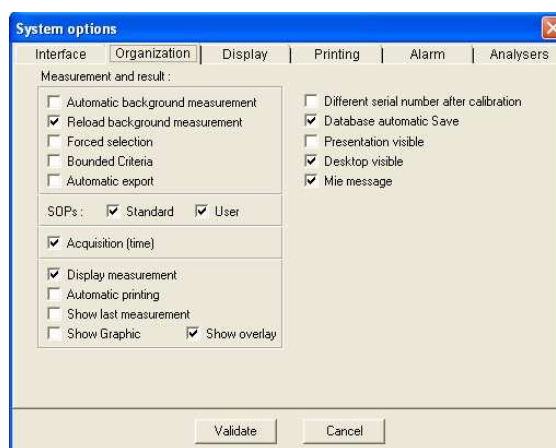



Figure 74: settings in the *Organization* tab

This tab contains the acquisition and display settings. The section on the right controls measurements and the result, while the section on the left contains acquisition settings.

Once you have made your choices, accept the settings by clicking on *OK*. Once the settings have been accepted, they will be used as standard settings.

Measurement and result section

Select choices by checking the corresponding checkbox:

- **Automatic Background measurement:** a Background measurement will be made automatically before each measurement when you click the  icon.
- **Reload Background measurement:** reload the last Background saved.
- **Coerce selection:** coerce selection of all measurements in the list of selected measurements (they cannot be deselected) by means of the *Coerce selection* button.
- **Mandatory criteria:** impose input of criteria 1 and 2 before a measurement is taken with *Mandatory criteria* (see *Sample name* and *Sample type* in Figure 31).

- **Automatic export:** automatically export the results after each measurement in text format (*.mes) in the application's special DATA.MES sub-folder (Cilas / GWin / EXE / DATA.MES).
- **Standard SOP / user:** select the SOP files that can be selected in the standard SOP measurement window (Standard CILAS is already present in the database) and/or user-created SOPs.
- **Time acquisition:** when checked, sets the type of display to time acquisitions (presence of a time selection cursor) or, when unchecked, sets the display type as a number, within the measurement dialog box.
- **View results after measurement:** automatically display the results after a measurement.
- **Automatic printout:** automatically print the report after each measurement.
- **View last measurement:** automatically display the last results.
- **Graphic display:** automatically display the curve (histogram and cumulative) at the end of the measurement.
- **View superimposed:** automatically display curves at the end of measurement.

Right-hand section

- **Different serial n° after calibration:** check to use a calibration file from another particle size analyzer.
- **Auto save in database:** automatically save to the database. This option is strongly recommended by CILAS. A zip file of the database is created each time the application is closed, named as "bk\year\month\day.zip".
- **Visible display:** displays the startup window when the application is started.
- **Desktop visible:** the *Windows®* desktop is visible when the application is started. Otherwise the application window will completely cover the *Windows®* desktop.
- **MIE message:** an MIE window displays for a few seconds during the MIE calculation. It will not be visible if the option is unchecked.

9.2.4 Display tab

This tab contains all the settings concerning the displaying of results. To understand these settings, read section 12.2. The display settings tab includes the following options:

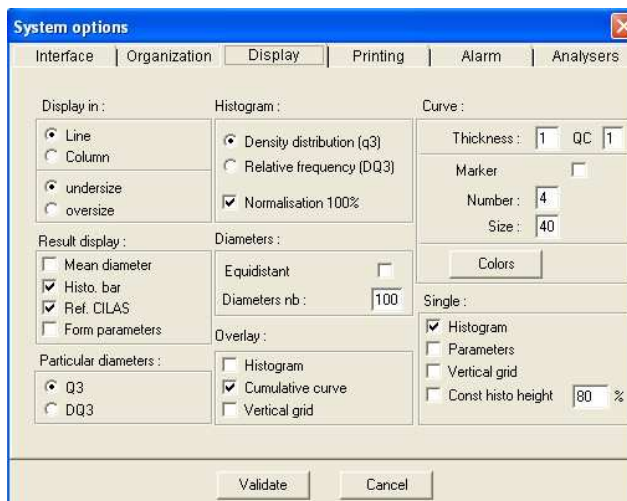


Figure 75: settings in the *Display* tab

Once you have chosen your preferred settings, accept your choices by clicking **OK**. Once accepted, these settings will be used as defaults.

Display in

Line/column: choose how to display the cumulative values and diameters within the *Result* window (*Data* tab): within lines or within columns.

Pass-through/reject: *Pass-through* mode displays the quantity of the sample that is smaller than or equal to the associated diameter. *Reject* mode displays the quantity of the sample that is equal to or greater than the associated diameter.

Display results

- **Average diameter**: (statistical average of results, $d[4,3]$): when checked, the average diameter will be displayed.
- **Bar chart**: when checked, displays the histogram as a bar chart.
- **CILAS ref.**: when checked, displays additional information about the measurement. By default, this option is disabled because it slows down the loading of measurement results.
- **Shape setting**: when checked, displays the shape settings specified in *Measurement > Options > Calculation* or the result of the Roslin\Ramler equation.

Special diameters

- **Q3**: when checked, displays the cumulative value of a diameter specified by the client.
- **DQ3**: when checked, displays the difference between the cumulative values of the diameter defined by the client and the preceding diameter. This enables the user to establish the percentage of a sample that is included within two special diameters.

Histogram

Selects the type of graphic presentation of the histogram:

- population density (q3): choice recommended by ISO standard 9276;
- mass fraction (DQ3);
- 100% standardization.

Diameters

Specifies the number of classes into which the histogram should be broken down.

- **Equidistant:** when checked, an equivalent distance between each diameter is applied;
- **Number of diameters:** specifies the number of classes of diameter used to display the histogram (number between 10 and 100).

Superimposition

Specifies settings for a report superimposed within the graphic window.

Curve

Specifies the parameters for the cumulation curve, such as thickness, the number of points, the references used, the color, etc.

Individual

Specifies settings for the individual report within the graphic window.

- **CST height histogram:** when checked, all histograms will use a percentage (*Value* field) for the cumulation curve as a maximal value. This display settings enables you to provide your clients with accurate and standardized graphics.

To accept your settings, click on “Validate”. Once accepted, these settings will be used as defaults.

9.2.5 Printing tab

This tab contains printing settings. Results obtained with your CILAS particle size analyzer can be printed directly from the *Size Expert* application.

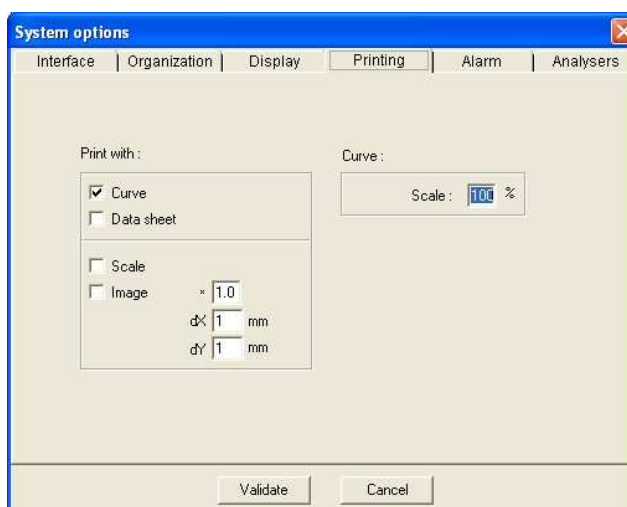


Figure 76: settings in the *Printing* tab

Once you have specified your preferred choices, click on *OK*. These settings will then be used as defaults.

Representative page

- **Curve:** when checked, curves are printed.
- **Table:** when checked, prints the data table.
- **Scale:** when checked, the image (from an electronic microscope, for example) linked to the report will be automatically adapted to the standard size.

- **Image:** when checked, specifies the size of the image linked to the report (see *Scale* above). Specifies the size factor in the “.” box, and the values of the limits “dX” and “dY”. This option is not used often, because the optional *Expert Report* application incorporates the same settings, with optimized settings in addition.
- **Curve:** specifies the graphic part that can be printed at a size from 33% to 100% of the original size.

Print with Expert Report, enables you to print the report using the optional *Expert Report* application.

When enabled, *Identification* prints the user names within the report. This option does not affect the application's compliance with CFR 21 part 11. When 21 CFR part 11 is used, the user name is automatically included in every report printout.

9.2.6. Alarm tab

This tab defines alarms indicating that there is a problem with the CILAS particle size analyzer. By default, this section is parameterized to ensure that the particle size analyzer works satisfactorily for the majority of applications. CILAS recommends that you only change these settings if necessary, and that you only do so after having carefully read all the manuals. Only technicians with a thorough knowledge of CILAS particle size analyzers are authorized to change the operation of the alarms.

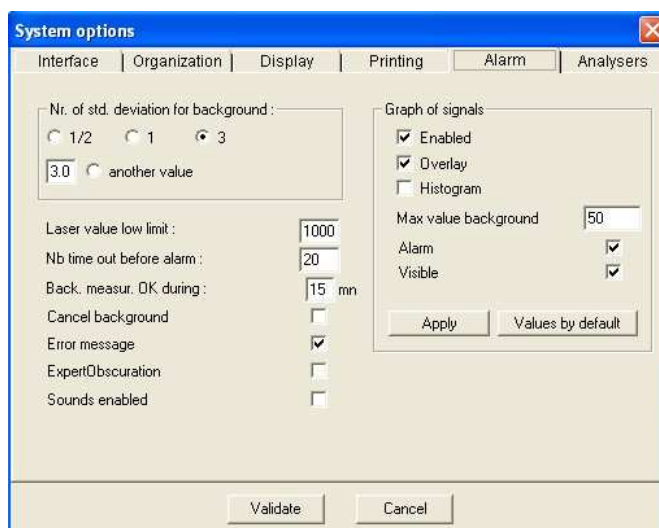


Figure 77: settings in the *Alarms* tab

Number of typical difference for Background measurement

- **1/2, 1, 3:** sets the typical difference that is acceptable for a Background measurement for each measurement mode. By default, the value is 3. The standard difference for acquisitions performed during a Background measurement must be sufficiently low to ensure a superior measurement quality. This standard difference mainly depends on the quality of the carrier liquid. A standard difference of 0.5 is ideal if it is particularly pure (no particles and air bubbles), and a standard difference of up to 3 is acceptable in other cases. If the predefined values are not good choices, click *Other value* to specify a standard difference between 0.1 and 9.9.

To obtain a measurement of superior quality, you are recommended not to specify a standard difference higher than 5.

Left-hand section

- **Lower limit of laser:** if the laser signal is too weak (mainly due to deposits in the measurement chamber), the Background measurement will be rejected. The nominal value for the laser is 2000. A lower limit of 1400 is generally sufficient to enable measurements in all conditions. You are strongly recommended not to specify a lower value, which might conceal a problem of large deposits and might deteriorate measurements.
- **Number of time-outs before alarm:** number of attempts made by the application before an error is displayed.
- **Background measurement for:** specifies the interval of time (in minutes) during which the last Background measurement remains effective. Beyond this time. Once this time has elapsed, a new Background measurement must be performed if *Cancel Background measurement* is checked. A progress indicator showing the lapsed amount of this time interval is visible in the measurement window above the *Background measurement* section.
- **Cancel Background measurement:** when checked, the Background measurement is no longer valid and the green *Start measurement* button is concealed; this means that a further Background measurement must be made.
- **Display error messages:** when checked, activates the display of instrument error windows.
- **Expert Obscuration:** activates use of the *Expert Obscuration* software. This software controls the product obscuring rate via a special window, endowing better reproducibility of results.
- **Sounds enabled:** when checked, enables end-of-cycle sounds.

Signals graphic

Displays and/or controls the intensities of the measurement channels in graphic form.

- **Valid:** when checked, the signal validity test is enabled.
- **Superimpose:** when checked, graphics are superimposed, enabling the highlighting of any fluctuations.
- **Histogram:** when checked, the graphic is displayed as fluctuating vertical bars. Superimposition mode is not possible.
- **Background max value:** this setting is very important for the appliance's operation. When checked, the application tracks the particle size analyzer's state of cleanliness. By default, the value is "200"; this maximum value difference authorized between the reference value (stored within the application) and the actual value during the Background measurement.
Example: if the reference value for channel #1 is "300", a maximum signal of 500 will be authorized for acceptance of the Background measurement.
- **Apply:** immediately applies the new settings.
- **Default values:** applies the application's default values.

9.2.7. Analysers tab

Enables configuration of the particle size analyzer and all its attachments by means of the *Size Expert* application. The bottom section is disabled. It is only for use by CILAS approved technicians for corrective maintenance purposes. Users can only modify settings in the top part.

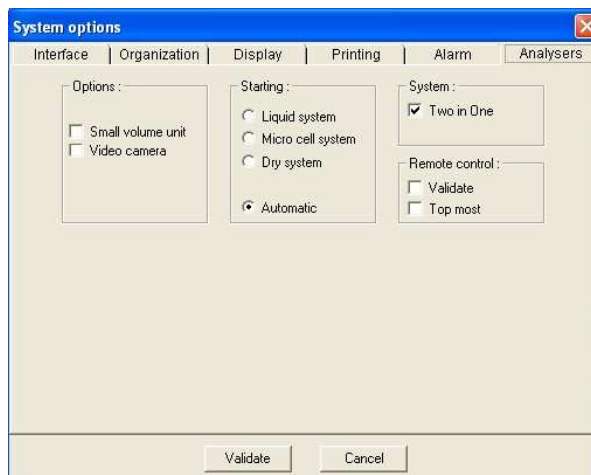


Figure 78: settings in the *Analysers* tab

Options

Check the box corresponding to the accessory installed on the CILAS particle size analyzer. For more information about attachments, consult the dedicated manuals available on the user CD-ROM.


Startup

Specifies the mode in which the particle size analyzer will operate when the user starts the software.

- **Liquid mode:** configures the particle size analyzer for use in liquid mode.
- **Micro volume:** configures the particle size analyzer for liquid mode with the Micro volume option enabled.
- **Dry mode:** configures the particle size analyzer for use in dry mode.
- **Automatic:** means that the software will use the pre-parameterized configuration of the controller card.

Models with a liquid mode only and 2-in-1 models (with both liquid and dry modes) are designed to start-up in liquid mode. Models with dry mode only will automatically start-up in dry mode.

System

- **2-in-1:** when checked, the  icon is enabled and the user can switch between liquid and dry mode via the menu bar.

9.3 Database management

Size Expert is compliant with ISO standard 13320 and with CFR 21 part 11. This is why the application comes with a database for storing results and with security levels for identifying the user.

This section describes the use of the Database submenu (*Option > Database*).

Section 9.4 describes the use of security levels.

9.3.1 Database access and location

The results database for CILAS particle size analyzers is available on the PC's hard disk.

The default folder for data storage is "C:\Cilas\Gwin32". The default file extension is ".Db" (database).

A PARADOX-compatible database is incorporated within the application for easy sorting and management of results. The database is easy to understand for a user, but a number of operating settings need to be configured. Access to the database tools is via the "Tools" menu, within the "Database" submenu, and the items described below are available.

9.3.2 Available functions

Labeled tables management

This feature manages the content of the secondary tables and allows the user to change, add or remove data:

- **Deleting an entry:** to delete an entry, it must not be used by any measurement. When you attempt to delete data that are currently in use, the following error message displays: *BDE: Master has detail records: cannot delete or modify*. To remove an entry, delete the measurements using the data items in question, and then delete the data items.
- **Edit:** the *Edit* function can be used even if the data are in use by certain measurements. But they will all display the new text after the modification.

Back-up database

This feature enables the user to save the entire database to a compressed file. Using the displayed dialog box, enter a name for the backup file and choose the destination folder (for instance, name the file 270498.ZIP and save it to the folder C:\Cilas).

Click on *OK* to confirm the back-up. A dialog box will prompt you to enter a comment to be saved in the backup file; this should be a description of the backup. The database is automatically saved when the application is closed.

Restore database

Restores a database previously saved by means of the *Back-up database* function.

Note: the restoration function overwrites the current database. We advise you to save the current database before restoring.

You select the backup file using the same dialog box as described in the preceding section. Once the file has been selected, the comment recorded within the backup is displayed. If you have any doubt about using the restoration function, click on "Cancel".

Select database

Enables you to select a database from among several registered within the application. Several databases for separate activities can be present. For example, there can be a *laboratory* database and a *production checking* database.

The management of several databases is a delicate process and should only be undertaken when necessary. In other cases, we advise you to just use the standard database. By default, the standard database is the only one that can be selected. The default file name for this database is *GRANULOG*; the database is stored in the folder *C:\Cilas\Gwin32\Db*.

- **Create a new database:** consult the *Create database* section in section 0.
- **Select a different database:** click on the filename in the box listing the file names, and then click on the *OK* button.

9.3.3 Create database

Proceed as follows:

1. In *My computer* or in the *Windows® Explorer*, open the folder in which the new folder should be created.
2. In the *File* menu, select *New* and then click on *File*. The new file displays on-screen with a temporary name.
3. Enter the name of the folder being created (such as *dbLabo*), and then press <Enter>.
4. Copy all the files from the folder *C:\cilas\gwin32\db* into the new folder.

The database engine needs a configuration file containing the name and location of each different database (Alias). You should name the new database and the new alias within this file. This operation is done by starting the program *BdeAdmin* within the *Size Expert* program group.

The *Size Expert* group is accessible via the task bar *Start* menu, under the *Programs* submenu.

The *Bde Administrator* program then displays a dialog box containing 2 tables: *Database* and *Configuration*.

To create a new database alias:

1. Select *Object\New\New database alias* and click on *OK*. By default, the name for this new alias is *Standard1*. You are recommended to rename it, as *dblabo* for example.
2. In the right-hand window, *Definition > Path*, configure the path to the new database.
3. Click on "...", select the path to the database (example: *c:\cilas\gwin32\dblabo*), accept and save the new configuration of *Bde Administrator*.

The new database can be selected in *Size Expert* via *Tools > Database > Select database*.

9.3.4 Back-up a database

Important: it is essential to back-up your database regularly. CILAS will not be held liable for data loss subsequent to a database problem. Always back-up your database before any operation. CILAS recommends frequently engraving it onto a CD-ROM.

To back-up the database, go to *Tools > Database > Back-up database*. A zipped archive of the database (db folder) will be created with the extension *.zip.

9.4 Security level management

9.4.1 Security levels

The security levels are defined the first time the *Size Expert* application is run after installation. The application will prompt you for the desired security level, namely:

- security levels compliant with CFR 21 part 11,
- multilevel security,
- unrestricted access without security levels.

Consult the installation manual on the user CD-ROM.

Security levels are very important for ensuring optimized operation of the instrument.

When you choose one of the first two security options (*Security levels compliant with CFR 21 part 11* or *Multilevel security*), you will have to enter an identification, a login name, a level and a password each time the application is started.

In the case of CFR 21 part 11 security levels, the user name will be recorded with all results and will display in all documents and reports. The operator will be known for each measurement.

9.4.2 User levels

There are generally three user levels:

- operator,
- analyst,
- inspector.

9.4.3 Creating a login name

Choose the desired level after having considered the tasks that each user has to perform with the particle size analyzer. To create an identity, select the *Tools > Identification > Create* submenu. The following window will display:

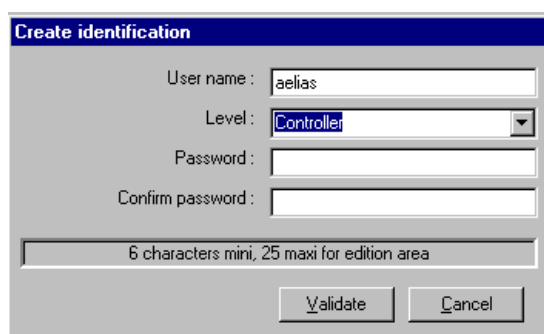


Figure 79: creating an identification

Enter a user name, a level and the password. The password must be at least 6 characters in length but not more than 25 characters.

Don't forget your login name and password. CILAS recommends creating a database of all user names and all passwords

9.4.4 Deleting a login name

The *Tools > Identification* menu option enables you to manage these options via the *Delete* button. It can be used for removing a login name. Be careful when deleting login names. Once you have deleted a login, it can no longer be recovered. You can edit a login name via the *Select* button.

10. Maintenance

Maintenance is an important part of making measurements with any instrument. CILAS particle size analyzers need little maintenance. The short bench concept means that the optronics system is very stable. No optical alignment is necessary if the instrument is used under normal working conditions. This section describes maintenance operations. If you have any problem with your particle size analyzer, a careful perusal of this section will provide the solution.

10.1 Safety requirements

Before undertaking maintenance operations, carefully read the safety rules stated in section 0, on page 1 of this manual. The person in charge of maintenance should be trained during installation by a CILAS-approved technician. No-one else is authorized to do maintenance operations. CILAS will not be liable for any accidents that occur when maintenance is performed by unauthorized persons.

Authorized users must be aware of the laser and electrical hazards existing during a maintenance operation. To perform maintenance, users have to open the particle size analyzer's protective hood. Because of the safety system, the laser is disabled when the hood is open.

WARNING!

Every person using or working on a CILAS particle size analyzer must comply with these safety recommendations. Maintenance technicians should have the skills and information needed to understand the working of an electromechanical appliance. All users should apply the safety rules and policies of their enterprise

Do not forget that laser radiation is very dangerous, even if all the safety systems built into a CILAS particle size analyzer are working properly to ensure the operator's safety.

10.2 Preventive maintenance

10.2.1 Introduction

The preventive maintenance operations on the CILAS particle size analyzer address the maintenance and cleaning of the optical components. Users and technicians can perform these operations. Users must only do preventive maintenance. Maintenance must be done regularly, the optical components should be cleaned regularly to ensure good reliability of results.

10.2.2 Items required for doing preventive maintenance

Before using the appliance, the user must be availed of the following items:

- a set of hexagonal socket wrenches,
- a set of flat wrenches,

- a flat-blade screwdriver,
- a clean work surface,
- a cleaning kit (wipes, ethyl alcohol, lint-free cloth).

10.2.3 Preventive maintenance

These operations must be performed before each time the particle size analyzer is used. If the particle size analyzer is used frequently, do preventive maintenance once every day, before the first measurement.

Drain the particle size analyzer

Proceed as follows

- Close the water inlet (ref. 1 in horizontal position) and start a filling cycle by activating drainage (ref. 2 in vertical position), by clicking on the mimic panel. After around 15 seconds, the chamber will be empty and the icon (ref. 2) will return to its initial horizontal position.

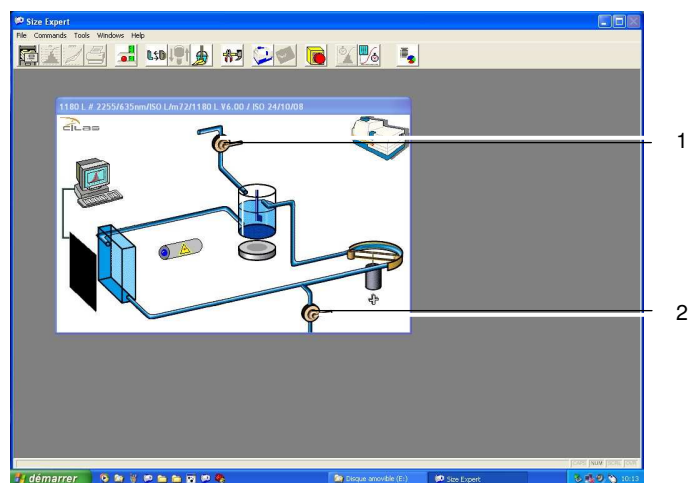


Figure 80: the mimic panel

Check the particle size analyzer

- Disconnect the particle size analyzer from the AC network power supply.
- At the rear of the particle size analyzer, check the condition of the durites and replace any that are holed.



Figure 81: the durites at the rear of the particle size analyzer

- At the rear of the particle size analyzer, check the condition of the video input (if present) and data (RS 232 port) connections.
- Open the hood of the particle size analyzer.
- Inspect the outside appearance of the pump module (ref. 1) and the condition of the durite; replace any durite that is holed, soiled or worn.



Figure 82: location of the pump module to be inspected

- Check the durites and pipework of the liquid filling electrovalves (ref. 1).

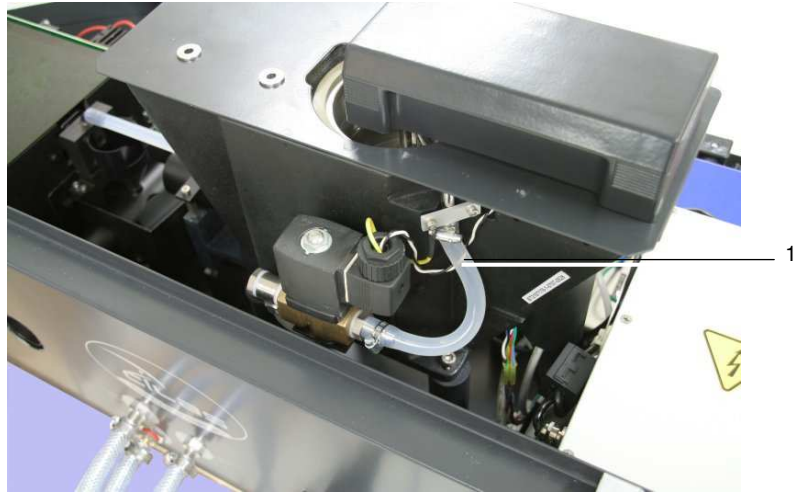


Figure 83: location of the durites and pipework of electrovalves to be inspected

- Raise the agitator upwards out of the ultrasound chamber.
- Inspect the impermeability of the 2 level sensors (ref. 1) and the flanges and collars (ref. 2).

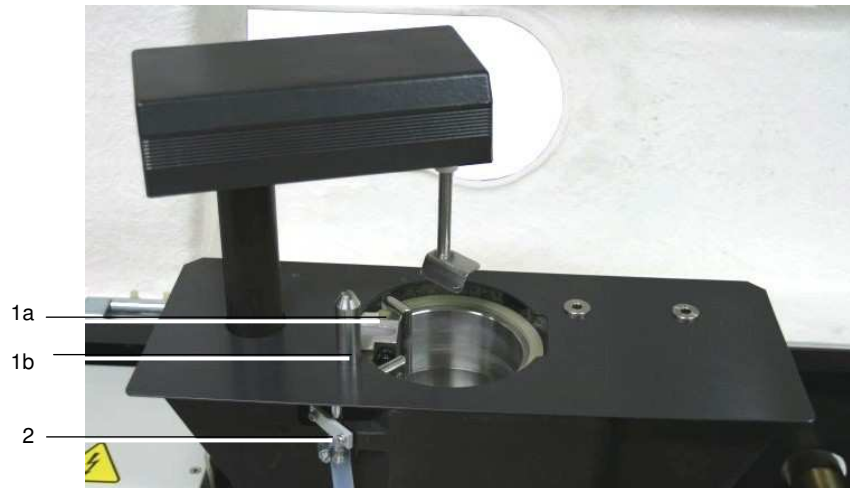


Figure 84: location of level sensors and connection flanges to be inspected

- Clean the level sensors with a cotton bud dipped in alcohol.
- Clean the ultrasound chamber with a lint-free cloth wetted with alcohol.

- Without dismantling or touching them, check that the optical fibers (ref. 1) are in good condition (not pinched) and that they are properly connected to their respective connectors.

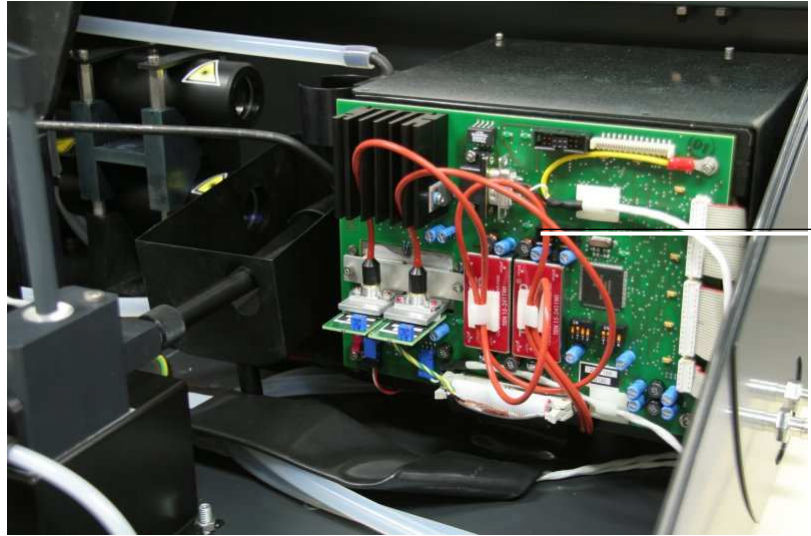


Figure 85: location of optical fibers (orange wires)

- Check the entry diffuser of the analysis unit; using a cotton bud, remove any accumulated matter from inside it.
- Check the cleanliness of the optics, the measurement unit and the focusing lens.

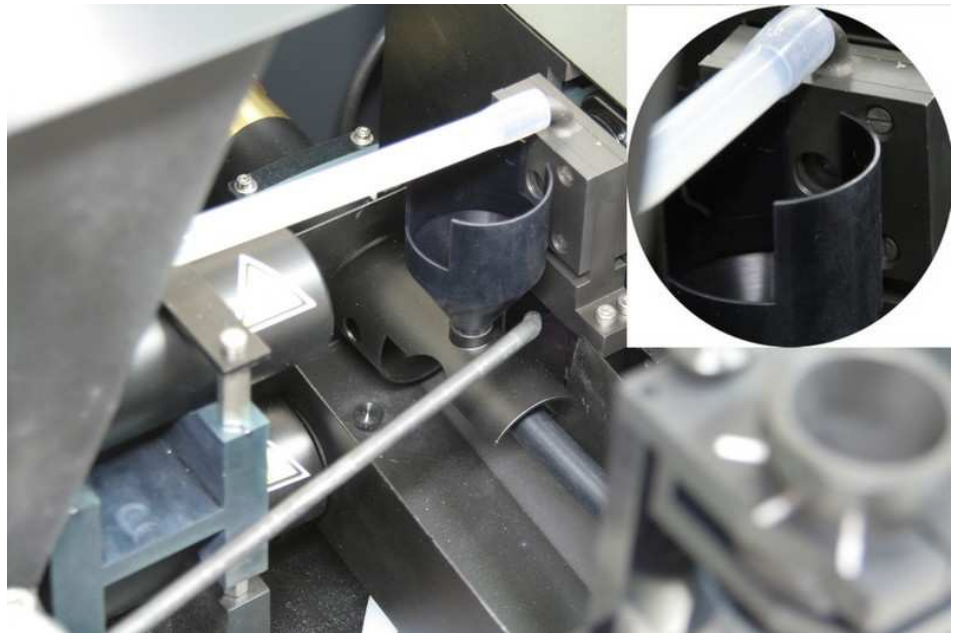


Figure 86: location of optics

- Close the hood of the particle size analyzer.

10.2.4 Cleaning the external vacuum cleaner system

- Regularly drain the chamber of the external vacuum cleaner system. Refer to the documentation specific to this product.
- Follow the safety rules during these operations; the chamber can contain dangerous materials having previously been analyzed.

10.2.5 Cleaning of external parts


The hood and the cover should be cleaned with wipes wetted with alcohol. Do not use abrasive products or harmful solvents (acetone, trichlorethylene, etc.).

IMPORTANT!

If any of the outside labels have been damaged, immediately replace them with an identical label.

10.2.6 Cleaning of optical components

The optical components should be cleaned if there is a rise in the signal during a Background measurement (visible using the *Real-time signals* option in *Commands > Real time > Real-time signals*) in relation to previous measurements. If a product that soils the sampling unit is used, you should regularly clean the sampling unit.

A progressive increase in the Background measurement signal over time (up to 20% of its original value) is considered to be normal. Before cleaning optical parts, rinse the particle size analyzer with detergent ( button) and check the Background measurement signal value again.

If an increase in the Background measurement signal persists:

1. Clean the sampling unit (see section 10.3.6).
2. Rinse the sampling unit with detergent.
3. Then check the value of the Background measurement signal again (via the option *Commands > Real time > Real-time signals*).
4. If the increase in the Background measurement signal persists, blow the outside fronts of the optical components with dry and clean air. If necessary, clean them with alcohol, taking all necessary precautions to avoid leaving scratches on them.

Warning! The sampling unit and the optical components are very fragile. Clean the parts as described in this section. If you don't follow these instruction and take the recommended precautions, these components can be damaged beyond repair. CILAS will not be responsible for problems resulting from mistakes made by a user during system cleaning. The warranty does not cover components that are improperly cleaned by the user. The warranty only covers standard use under normal conditions.

10.3 Proventive maintenance procedures

10.3.1 Cleaning the funnel

- Unscrew the outlet pipe.
- Disconnect the air pipe (ref. 3) coming from the funnel (ref. 1).
- Move the vertical pipe (ref. 1) to aid extraction of the funnel (knob at the top).
- Unscrew the knob (ref. 5) under the funnel and remove the funnel.
- Using a 3 mm hexagonal socket wrench, unscrew the rear part of the funnel (ref. 4).



Figure 87: location of funnel parts

- Blow clean the inside of the funnel.



Figure 88: the funnel dismounted

- Remount by proceeding in the reverse order of the dismounting operations.

10.3.2 Cleaning the mass distributor

- Unscrew the knob (ref. 2) in order to remove the mass distributor (ref. 1). Raise the assembly.
- Remove any deposits from the interior of the mass distributor.

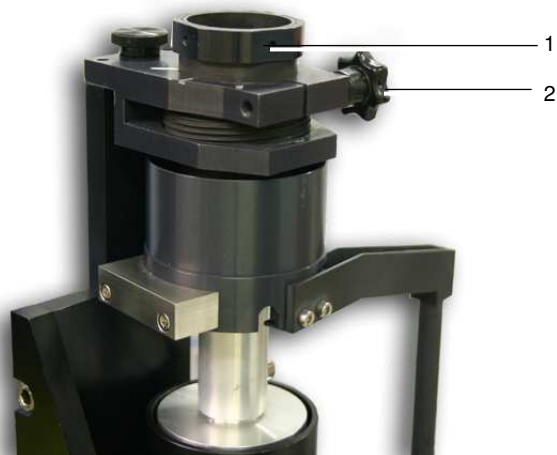


Figure 89: the mass distributor

10.3.3 Cleaning the bowl and the manifold

- With the mass distributor dismounted (section 0), unscrew the knob (ref. 2) in order to extract the bowl (ref. 1) and the manifold (ref. 3). Raise the assembly.
- Using a brush, remove any deposits from the interior of the bowl.



Figure 90: cleaning the bowl

- Using the supplied pin, remove any deposits from the interior of the manifold's pipe.



Figure 91: the pin intended for cleaning the manifold pipe

10.3.4 Cleaning the ultrasound chamber

- Drain the particle size analyzer (see the section entitled *Draining the particle size analyzer* on page 90).
- Raise the agitator motor unit (ref. 1).
- Clean the chamber (ref. 4) using a lint-free cloth wetted with ethyl alcohol. Pay particular attention deposits and soiling at the top. To the edges, to the top rubber seal (ref. 3), to the agitator shaft, and to the agitator blade (ref. 2). Repeat several times if necessary, replacing your cloth each time. Rinse the entire assembly with ethyl alcohol.
- Dry the bottom of the chamber perfectly, to prevent any undesirable presence of water when dismounting the pipe at the bottom during the steps that follow after this one.

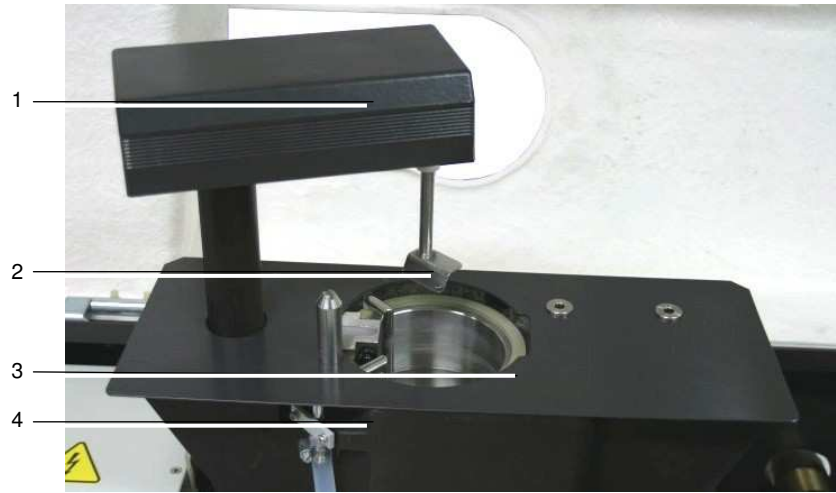


Figure 92: the items to be cleaned near the chamber

10.3.5 Cleaning the chamber's optical sensors

- Drain the particle size analyzer (see the section entitled *Draining the particle size analyzer* on page 90).
- Clean the two level sensors (ref. 1) – black circular components – using a cotton bud wetted with alcohol; do NOT use acetone.



Figure 93: location of the chamber's level sensors

10.3.6 Cleaning of the sampling unit

Proceed as follows:

- Drain the particle size analyzer (see the section entitled *Draining the particle size analyzer* on page 90).

- Remove the white pipe (ref. 1,



Figure 94) connecting the ultrasound chamber to the measurement chamber.

- Remove the screw (ref. 2,



Figure 94) of the unit's cleaning mounting, and remove the pipe (ref. 3).

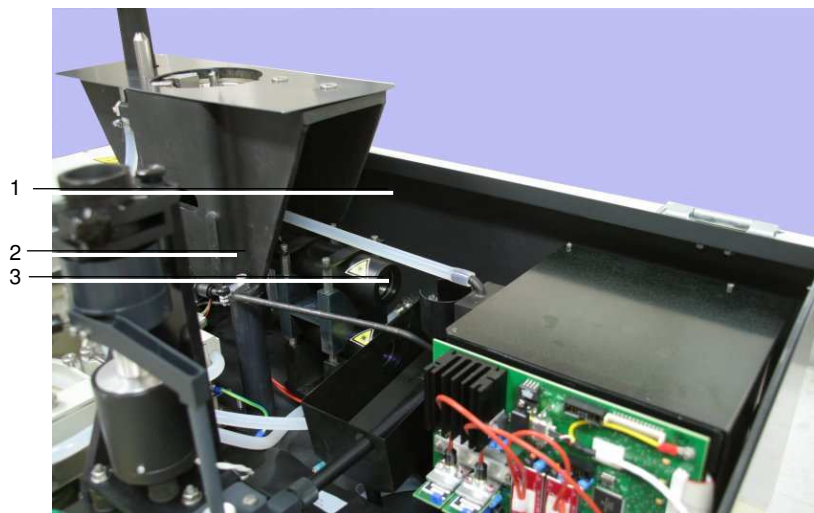


Figure 94: location of the pipe

- Remove the funnel (see section 10.3.1).
- Remove the 2 bolts holding the flange (ref. 1).

1

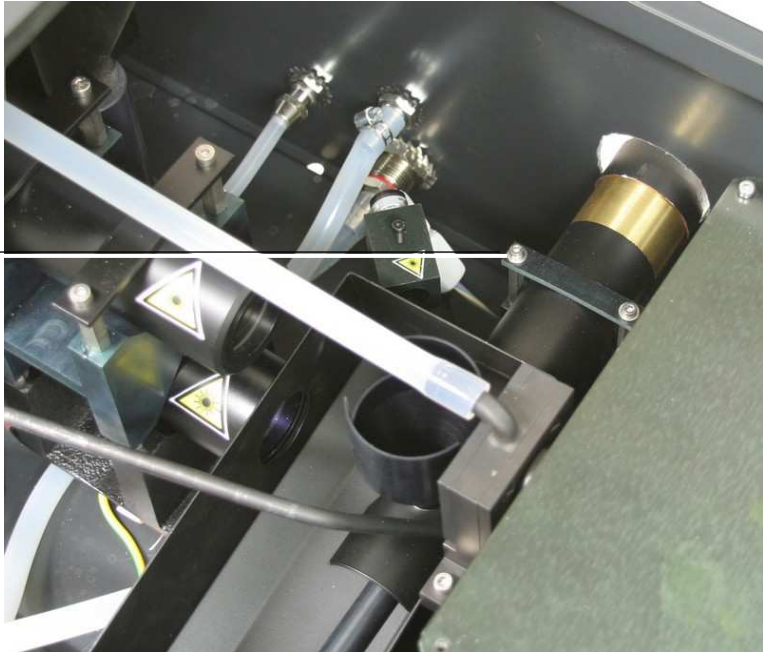


Figure 95: location of the flange securing bolts

- Pull the pipe forwards.



Figure 96: extracting the pipe

- Remove the bolt from the recovery unit (ref. 1) and extract the recovery unit by means of an upward movement (ref. 2).

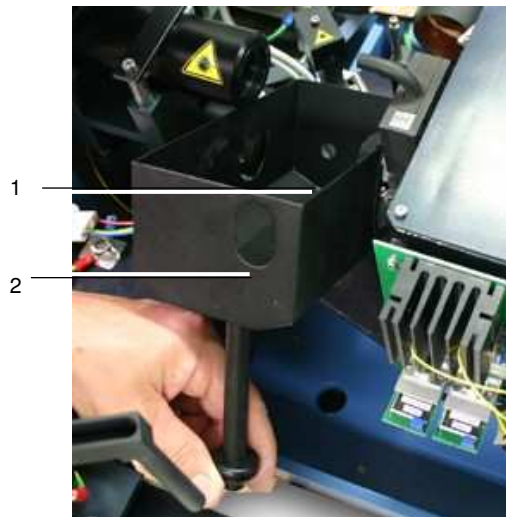


Figure 97: extracting the recovery unit

- Remove the 4 bolts (ref. 1) from the entry to the chamber.

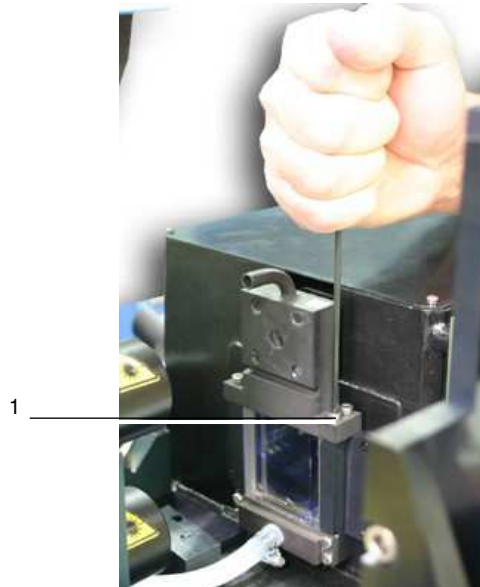


Figure 98: extracting the bolts from the chamber entry point

- Pivot the chamber forwards to unseat it from its seal and remove it. Hold the measuring chamber by its sides, without putting your fingers on the central part.

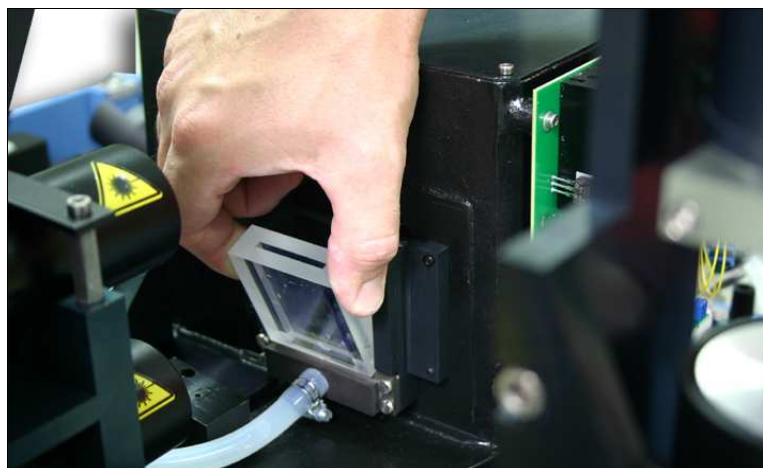


Figure 99: extracting the chamber

- Using a blade wetted with ethyl alcohol, clean the inside of the measurement chamber. Use 5 or 6 blades to as to obtain perfectly clean surfaces.



Figure 100: the blade inserted into the measurement chamber

- Using a compressed air spray and then a cotton bud wetted with ethyl alcohol, clean the lens of lasers 1, 2 and 3. Make sure you do not leave any scratches on the anti-reflective coating.

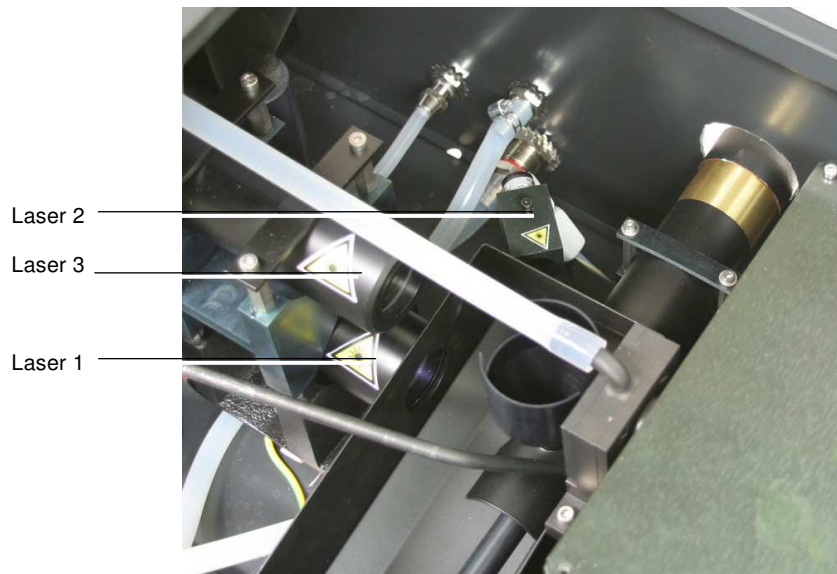


Figure 101: location of the lenses of the 3 lens

- Using a compressed air spray and a cotton bud wetted with ethyl alcohol, clean the lens of the CCD camera (ref. 1), if present. Make sure you do not leave any scratches on the anti-reflective coating.

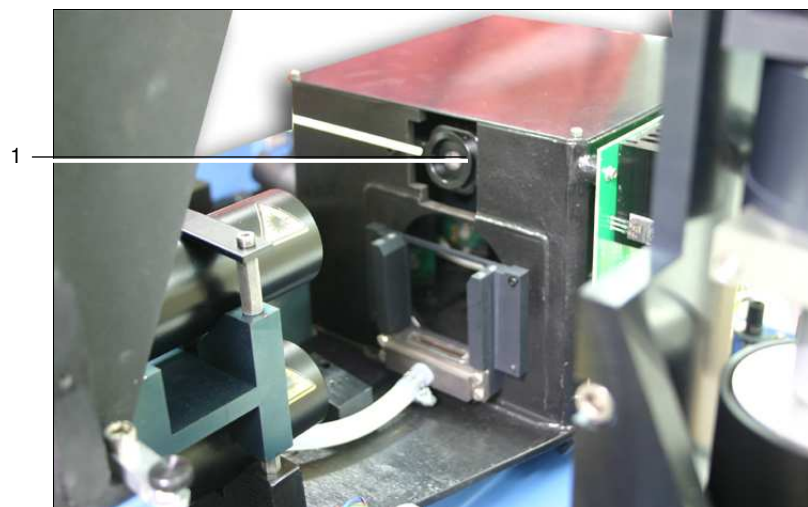


Figure 102: location of the lens of the CCD camera

- Remount the parts by proceeding in the reverse order of the steps followed during dismounting.

Note: during dismounting, check that the opening (ref. 1) of the cone (ref. 2) is indeed opposite the CCD camera opening.

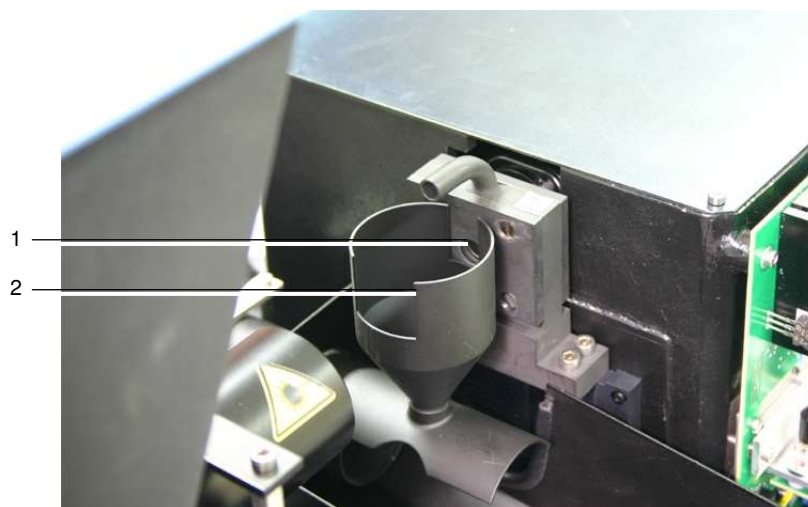


Figure 103: verification of the position of openings of the CCD camera

Note: once the assembly has been remounted, check that the funnel entry point is vertically above the manifold pipe.



Figure 104: the manifold pipe is properly aligned above the funnel entry point

- Fill with water and check that there are not leaks.
- Close the particle size analyzer's hood.

The sections that precede describe all the operations that are authorized to be carried out by users. The next section describes operations to be performed in the event of more-crucial problems. Remember that CILAS particle size analyzers are reliable when used under normal working conditions and provided that preventive maintenance is properly and regularly performed.

10.4 Maintenance for resellers and authorized personnel

This section describes corrective maintenance operations. Only technicians approved by your CILAS reseller may perform these actions. Corrective maintenance operations are necessary in the event of a problem affecting the hardware or software.

CILAS particle size analyzers identify problems when they occur. The system informs you of the problem via the *Size Expert* application software. During a measurement, an error message displays on-screen. If an error message displays, it means that there is a problem and the error message is an alarm. When an error message displays, the user should:

1. Note the error message generated by the software application.
2. Note the model and serial number of the particle size analyzer.
3. Note the version of the "Size Expert" application.
4. Complete the "Bugreport.doc" document (available in the appendix of the user CD-ROM).
5. Contact your local CILAS reseller. Your reseller needs the above information to be able to diagnose the cause of the problem. A technician will perform the maintenance operations.

Users are not authorized to perform corrective maintenance. In they do, it is under their responsibility and the warranty is void. To reduce the time necessary for maintenance, contact your reseller when the "Bug report.doc" file has been completed. The incident report will help in quickly locating and troubleshooting the problem. This document is available on the user CD-ROM in the *Software* section.

10.5 Answers to frequently-asked questions about maintenance

If you have additional questions about maintenance of your particle size analyzer, or if you need advice, consult the file available on our website (downloadable at www.particle-size-analyzer.com) or on the USER CD-ROM ("Frequently-asked questions.pdf"). If necessary, you should also contact your local CILAS reseller.

10.6 Spare parts

10.6.1 References

The parts of a CILAS particle size analyzer that can be replaced by a user can be ordered from CILAS. A list of these articles and their part numbers are to be found on the USER CD-ROM. Please make sure that the part number is indeed right for the part you want to order. Original spare parts supplied by CILAS are manufactured in compliance with our specifications and are checked before shipment to prevent any damage to your instrument and to ensure high-quality measurement results. Only original parts should be used for maintenance, to maintain quality.

Warning!

To ensure precise measurements after a maintenance operation, carefully read the manual in its entirety at least once. The warranty is dependent on your only using CILAS-certified spare parts for maintenance.

10.6.2 Order form

When placing orders, please use the order form available on the user CD-ROM. This order form should be returned to your local CILAS reseller. For the list of CILAS resellers, please visit our website (www.particle-size-analyzer.com). On the order form, please state the model of particle size analyzer, its serial number and the version of the *Size Expert* software you are using (check the *About... box* in the menu).

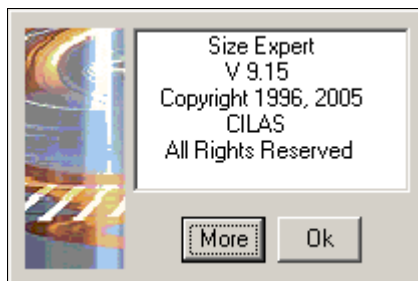


Figure 105: example of an application version number

If you have any additional questions or need advice concerning an order or an order form, please check the file available on our website (downloadable from www.particle-size-analyzer.com) or on the user CD-ROM (*USERCDROM \ Answers to frequently-asked questions \ Frequently-asked questions.pdf*). If necessary, contact your local CILAS reseller.

11. Technical data

	Model		
	990	1090	1190
Measurements			
Range (µm) in <i>dry mode</i>	0.3 - 500	0.1 – 500	0.1 - 2500
Range (µm) in <i>liquid mode</i>	0.2 - 500	0.04 – 500	0.04 - 2500
Repeatability	< 1 %	< 1 %	< 1 %
Precision	< 3 %	< 3 %	< 3 %
Lasers			
Number of lasers	1	2	3
Laser n°1	2 mW – 830 nm	2 mW – 830 nm	2 mW – 830 nm
Laser n°2	-	5 mW – 635 nm	5 mW – 635 nm
Laser n°3	-	-	1.5 mW – 830 nm
Laser safety certification	21 CFR – 1040 NF-EN 60825-1/A2	21 CFR – 1040 NF-EN 60825-1/A2	21 CFR – 1040 NF-EN 60825-1/A2
Dispersal			
Liquid mode	2 peristaltic pumps, ultrasound generator and agitator		
Dry mode	By funnel	By funnel	By funnel and free-fall
Electrical data			
AC network power supply	110 – 240 V. 50 – 60 Hz		
Power consumption (VA)	< 100		
Connections			
Electrical	Analyzer AC network, vacuum cleaner system AC network, vacuum cleaner system supply line, series link (RS232)		
Optional electrics	-	-	Video camera output
Pneumatic	Vacuum cleaner system outlet, air inlet (dry mode), water inlet (liquid mode), water outlet, overflow outlet.		
Mechanical characteristics			
Outside dimensions	See Figure 106.		
Approximate weight (kg)	Model 990L: 55 Model 990D: 48 Model 990LD: 61	Model 1090L: 55 Model 1090D: 48 Model 1090LD: 61	Model 1190L: 57 Model 1190D: 50 Model 1190LD: 63
Standards			
Laser dissemination	ISO 13320		
Digital data security	21 CFR-Part 11		
Mechanical and electrical	CE. USP 429		
Hood open	Category I of NF EN 60825-1/A2		
Hood closed	Category III of NF EN 60825-1/A2		

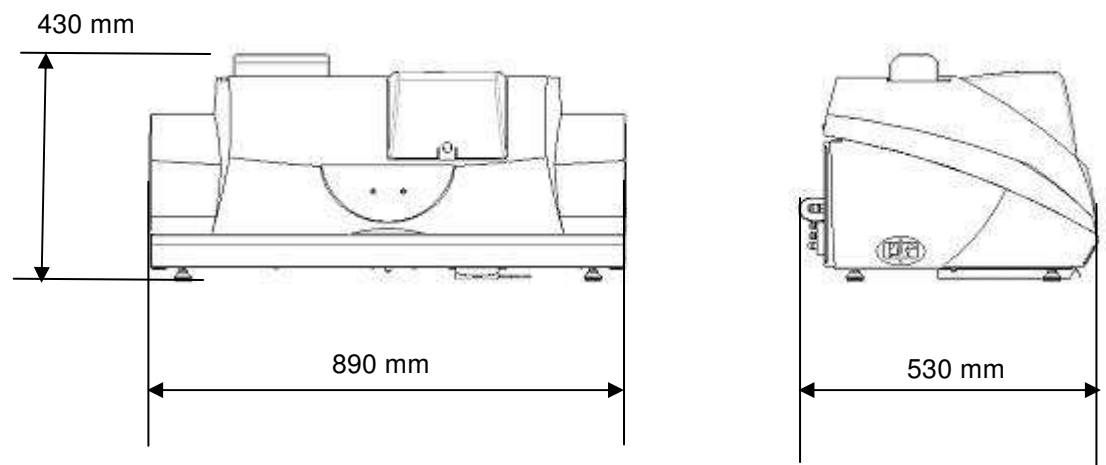


Figure 106: dimensions in mm

12. Appendix 1

12.1 Laser diffraction theory

The operation of your particle size analyzer is based on the principle of light diffraction. For more information about this physical phenomenon, consult the appendix on the user CD-ROM. It contains a folder called *Appendix* that contains a .pdf file called *Theory and applications of laser diffraction*.

This document presents theorems, hypotheses (Fraunhofer, Mie) and equations (Maxwell), etc. It also contains information about laser diffraction applications. The second description is more more comprehensive but also more complex. This document is intended for those who want to further their knowledge of laser diffraction and the measurement of particle size by means of this physical phenomenon.

12.2 Terminology

This section defines the various terms used in the manual, and is very important in that it helps users to properly understand the measurements produced by a CILAS psa. These definitions are used to define and calculate all the measurement settings. If you do not understand certain terms encountered in an analysis report or when you are using the *Size Expert* application, consult this section for a definition. The definitions are listed in alphabetical order. All the equations and all of this section refer to ISO standard 9276-1.

12.2.1 Dispersal agent

A dispersal is only used in liquid mode. Sometimes, to obtain a good dispersal of the sample within the solvent, you need to use a small quantity of another product. This other product – called a *dispersal agent* – is necessary for obtaining an accurate measurement. Just as with solvent, you need to know the refraction index of the dispersal agent in order to use the MIE theory.

12.2.2 Obscuring/optical opacity

Percentage or fraction of incident light attenuated subsequent to the diffusion and absorption of light by particles. This parameter enables you to adjust the quantity of sample necessary for an accurate measurement.

12.2.3 Density

The density is that of the sample, in g/cm^3 . You need to enter the density within the application in order to calculate parameters such as the specific surface. If the density of the sample is unknown, it can be measured using a special instrument (densitometer).

12.2.4 Diameters at 10% 90%

This is the diameter value for which the cumulative result is of 10% or 90%. These two values are approximations of the smallest and largest diameter contained in your sample.

12.2.5 Diameter with log-normal

The log-normal law is a model suitable for accumulations of values for samples such as ceramics. It is designated by the letter L and its mathematical equation is:

$$L(LD_i) = \exp\left[-\frac{LD_i}{2\sigma^2}\right]$$

in which:

C_i : cumulative value for diameter of class "i",

$LD_i = \ln(D_i)$ for class "i",

$$H_i = \frac{C_i - C_{i-1}}{LD_i - LD_{i-1}} \text{ histogram value for class "i",}$$

σ : sigma parameter of the log-normal law

$L(LD_i)$ must correspond with H_i . The integration of L indicates that the cumulative values of the log-normal law similar to C_i .

12.2.6 Diameter with Rosin Rammler

The Rosin–Rammler law is a model suitable for cumulative values from samples such as cement or sand. It is named R and its mathematical equation is:

$$R(D_i) = 1 - \exp\left(-\left(\frac{D_i}{A}\right)^B\right)$$

in which:

C_i : cumulative value of diameter of class "i",

D_i : diameter of class "i" (in μm),

A and B: parameters found, with minimization of quadratic errors, that correspond with the sample.

$R(D_i)$ must correspond with C_i .

12.2.7 Diameter in number

The diameter in number is an arithmetical average of the diameters. Its mathematical formula is:

$$D_N = \frac{\sum n_i \times d_i}{\sum n_i}$$

in which:

n_i : number of particles of class "i",

d_i : diameter of class "i".

In the *Particle Expert* application, the diameter in number is calculated from the value of the diameter in volume.

12.2.8 Diameter on surface

The diameter on surface is also known as diameter D[2,1]. Its mathematical formula is as follows:

$$D_s = \frac{\sum n_i \times d_i^2}{\sum n_i \times d_i}$$

in which:

n_i : number of particles of class "i",

d_i : diameter of class "i".

In the *Particle Expert* application, the diameter on surface is calculated from the value of the diameter in volume.

12.2.9 Diameter in volume

The results provided by laser diffraction are expressed in volume. This results from Maxwell's equation. By default, the *Particle Expert* application states results in volume. The standard results are expressed in the form of a De Brouckere average diameter (also called D[4,3], which is an average of volume or mass moment).

CILAS recommends using this type of result for improving the reliability of your measurements. The mathematical formula used for calculating the diameter in volume is as follows:

$$D_v = \frac{\sum n_i \times d_i^4}{\sum n_i \times d_i^3}$$

in which:

n_i : number of particles of class "i",

d_i : diameter of class "i".

12.2.10 Average diameter

The average diameter (or the average size) is the statistical average value of diameters of particle values contained in the sample

$$\text{Average size} = \sum (p_i \times MD_i)$$

in which:

C_i : cumulative value of the diameter of class "i",

D_i : value of diameter of class "i" (in μm),

$$MD_i = \frac{(D_i + D_{i-1})}{2} : \text{average diameter value of class "i" (in } \mu\text{m)},$$

$p_i = C_i - C_{i-1}$: probability for MD_i

12.2.11 Monodispersed sample

A monodispersed sample is a product with a specific distribution. A monodispersed sample only contains one type of population. The particles will

have a similar size or a distributed size compatible with the normal law. The size of particles is an established value plus or minus a percentage. You can summarize the size of particles by means of the following mathematical equation:

$$X = \bar{X} \pm 2\sigma$$

in which: σ : sigma parameter.

12.2.12 Fraunhofer

The Fraunhofer theory is the most-common for light diffraction. This theory can apply to particles of large size. If your particles have a diameter greater than the laser wavelength ($\lambda_1 = 635 \text{ nm}$, $\lambda_2 = 830 \text{ nm}$), you will obtain precise results using the Fraunhofer theory. For more information about the Fraunhofer theory, consult the documents on laser diffraction on your user CD-ROM.

12.2.13 Histogram

The histogram shows the distribution by size of the various size classes. The histogram H is the derived function of the cumulative values. If you note:

C_i : cumulative value of diameter class i,

D_i : value of diameter of class i (in μm),

MD_i : value of average diameter of class i (in μm) in which $MD_i = \frac{D_i + D_{i-1}}{2}$,

LD_i : for class i $LD_i = \ln(D_i)$,

Namely X_i the ordinate on the X axis and H_i the ordinate on the Y axis.

We have the ordinates of the histogram:

$$X_i = MD_i$$

$$H_i = \frac{C_i - C_{i-1}}{LD_i - LD_{i-1}}$$

12.2.14 Liquid

The liquid is the solvent used for a measurement in liquid mode. Generally, the solvent used is water, but it can also be an organic solvent. The liquid is the solvent carrying the sample in the particle size analyzer.

12.2.15 Mie

The Mie theory is the most-comprehensive theory used for measuring light diffraction. This theory applies to fine particles. If your particles have a diameter that is less than the laser wavelength ($\lambda_1 = 635 \text{ nm}$, $\lambda_2 = 830 \text{ nm}$), you will obtain accurate results by means of the Mie theory. For more information about the Mie theory, consult the documents on laser diffraction on your user CD-ROM.

12.2.16 Q3 (cumulative curve)

The cumulative curve $Q3(x)$ represents the proportion of the sample having a diameter that is equal to or less than x. It is obtained by means of the following equation:

$$Q3(x_i) = \sum_i \frac{n_i}{n_T}$$

in which:

n_i : number of particles of a diameter x_i

n_T : total number of particles

12.2.17 Q3 (population density)

The histogram is called q3 in the application. The histogram is obtained by means of the following equation:

$$q3(x_i) = \frac{(Q3(x_i) - Q3(x_{i-1}))}{\log \left[\frac{x_i}{x_{i-1}} \right]}$$

in which:

$Q3(x)$: value of the cumulative curve,

$q3(x)$: value of the histogram,

x_i : diameter of class "i",

12.2.18 Specific surface

The specific surface is the total surface of particles divided by their weight. To calculate this parameter, you have to know the density of your material. In the Fraunhofer or Mie theories, particles are assumed to be spherical in form. To work on non-spherical particles, you have to insert a parameter called form factor, noted as S. The form factor offers a better approximation for non-spherical particles. The mathematical equation for the specific surface is as follows:

$$\text{Specific surface} = \frac{S \times C}{\rho} \times \left(\sum \left(\frac{Q3(x_i) - Q3(x_{i-1})}{\frac{1}{2} \times (x_i + x_{i-1})} \right) \right)$$

in which:

C: constant,

S: form factor (= 1 for spherical particles),

ρ : sample density (g/cm³)

x_i : diameter value for class i,

$Q3(x_i)$: cumulative value for diameter of class i.

12.2.19 Median size

The median size or median is the diameter value for which the cumulative results attain 50%. This signifies that half the particles in the sample are greater than the median size, and half the particles are smaller than the median size.

13. Appendix 2 – Maintenance mode

Certain features (mainly calibration and modification of processing parameters) are only available in a special mode called *maintenance mode*.

13.1 Access to maintenance

You invoke this mode by the key sequence *<Ins> + <F12>* only when the application's window has the focus (click in ref. 1).

The title bar of the mimic panel will then include the words *Maintenance mode* (ref. 2).

The functions initially disabled in *Tools > Calibration* will be available.

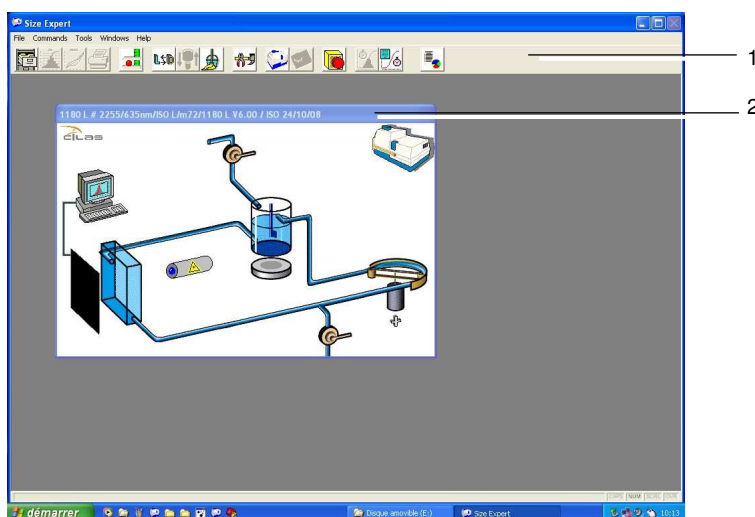


Figure 107: the mimic panel displays maintenance mode

13.2 Exiting maintenance mode

A further *<Ins> + <F12>* key sequence when the application window has the focus (click in ref. 1, Figure 107) exits maintenance mode. The words *Maintenance mode* are removed from the title bar of the mimic panel.

13.3 Calibration in maintenance

13.3.1 Calibration method creation

This feature is reserved for CILAS.

13.3.2 Methods management

This feature is reserved for CILAS.

13.3.3 Performing calibration

Refer to document NT-1061017-41, called the *Calibration manual*.

13.3.4 Management of calibrations

This feature enables you to delete a calibration file. Select the line containing the name of the calibration file you want to delete, and then click *Delete*.

Note: a calibration file contains correction factors for the entire measurement system.

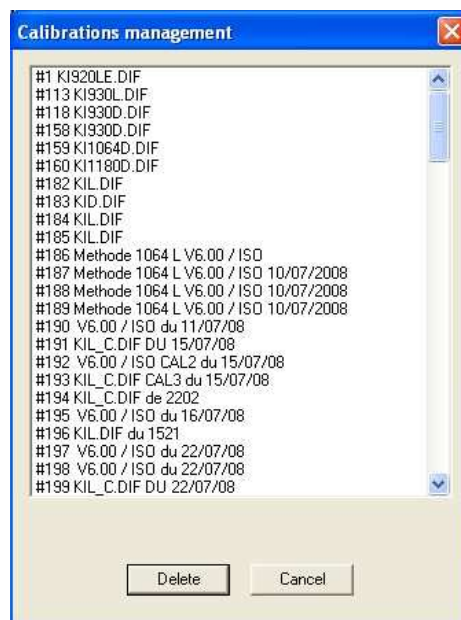


Figure 108: the calibration files window

MA_02

13.4 Edit settings

These features are reserved for CILAS.

14. Index

21 CFR Part11	19	31	Liquid mode	27
AC power indicator	11		Liquid mode	35
Access	85		Liquid mode	38
Access	111		Localization of external parts	11
Access to maintenance	111		Location	11
Accumulated curve	109		Location	13
Accuracy of the results	23		Lock	32
Activator command block.	14		Lock the session	32
Actual measurement	40	46	Logo	78
Actual measurement	51	59	Logout	78
Additional cells	8		Lower limit	83
Additional software	16		Main detector	8 9
After installation	23		Maintenance	89
Agitator	8		Maintenance for resellers	101
Agitator shaft	16		Manage	71
Agitator unit	16		Manage waste	32
Agitator unit	13	16	Management	85
Air	10		Management Data base	85
Air inlet	12		Management of tables	85
Air inlet	9	15	Management of the levels	87
Air intake	10		Management of the security level	87
Air pressure	50		Manifold	13
Alarm	82		Manifold	15
Analyzer	12		Mass	10 104
Analyzer	30		Mass distributor	9 13

Analyzer	12		Mass distributor	95
Application	77		Material	83
At 10 % 90 %	107		Maxi value	83
at end of measurement	47		Measure	39
at end of measurement	59		Measurement	38
			Measurement chamber	8
Attachments	16		Measurement waste	32
Authorized personnel	101		Measures	39
Automatic Background measurement	78		Measures selection	63
Automatic printing	79		Median size	110
Automatic rinsing	40	51	Menus	20
Available functions	85		Message	79
Average diameter	80		Mie	109
Back up	86		Mode choice	26
Background measure	44		Monodispersed	108
Background	44	57	Movement	9
Blower	13		Multi levels	19 31
Blower	14		Object	7
Bowl / manifold	95		Object	77
Calibration	111		Obscuration	39 106
Calibration	112		On/Off switch	11
Cancel	83		On/Off switch	12
Carrier liquid	36		Operating mode	38
Cell of sample	97		Optical cleaning	93
Cells	16		Optical opacity	106
Certification	104		Optical sensors	96
CFR 21 Part 11	1		Optics unit	13
Chamber filling nozzle	16		Order form	102
Chamber inlet	8		Organization	70 78
Change	32		Outlet	12
Change user	32		Output / Out 1	12
Characteristic main clauses	9		Output / OUT 2	12
Check of signals before measure	38		Parameters	67
Choice	27		Password	31
Choice	27		Password	19 31
Choice agent dispersal carrier	37		PC	30
Choice of the carrier liquid	36			

Circulation	13				Periodic validation	23
Circulation peristaltic pump	8				Power	104
					Power connector to vacuum cleaner system	12
Classes	81				Power input	12
Cleaning	93	95			Power input	12
Cleaning	94	95	96	97	Power input	12
Cleaning blower	9				Power input vacuum cleaner	12
Cleaning bowl / banister	95				Power on	30
Cleaning cell of sample	97				Power regulation	14
Cleaning optics sensors chamber	96				Power socket	11
Cleaning to répartiteur massique	95				Power supply indicator	11
Cleaning ultrasound chamber	96				Power supply socket	12
Clear a user name	88				Power supply socket	14
Clear name	88				Preliminary test	51
Colour	81	81			Preparation	25 26
Commands	20				Preparation sample	25 26
Company	78				Pressure air blowing	13
Comparison	7				Preventive	89
Configure	77				Principle	8
Connections	29				Printing	81
Connector	12				Protection window	9
Control	90				Pump	13
Control quality	74				Q3	109
CPU card	13				Quantity	26
Create	86				Quit	32
Create a user name	87				Quit(Leave)	111
Create name	87				Real time	39
Data	68				Real-time measurement	38
DB9	12				References	101
DB9	12				regulation of the flow of particles	52
Declaration of compliance	1				Reload	78

Default values	83		Reproducibility	23
Definition of the parameters	40	52	Resellers	101
Density	106		Restore	85
Dimensions	10	104	Results	67
Dispersal	26		Right inside	13
Dispersal agent	37	106	Rosin Rammler	107
Dispersal sample	26		RS232	12
Display	79		Rules	3
Display	63		Safety	3
Display	83		Safety	4
Disposal	5		Safety	89
			Safety interlock laser	14
Draining	13		Safety regulations	3
Draining	90		Salvage drawer	9
Dry mode	27		Salvage drawer	9
Dry mode	49		Sample quantity	26
Dry mode	50		Save	85
Ejection tube	9		Screen	35
Electric	4		Screen	49
Electric	9		Seal	16
Electric	2	3	Select	86
Electrovalve	14		Serial link connector	12
			Size Expert	17
Errors	25		Software	17
Errors of measures	25		Solid	27
Exactness	23			
Expert	83		Solvent	109
	32		SOP	37 79
Expert	Size		Spare parts	101 102
Expert calculation	73		Spare parts reference	101
ExpertGrab	17		Special diameter	80
			Specific surface	110
ExpertReport	17		Standard deviation	82
ExpertShape	17		Standards	1
External analyser	93		Standards	104
			Standards CE	1
External cleaning	93			
External parts	11			
Extraction	26			
Extraction sample	26			

FAQ	32		Start (application)	19	31
File	20		Storage	9	
Filling	14		Suction tube	9	
Filling nozzle	16		Superimposed mode	69	81 83
Fraunhofer	109		Symbols	1	
Free fall	9	60	Symbols	35	
Frequent questions	32		Symbols	49	
Funnel blown air pressure regulation	14		Synoptic	20	32
Funnel free fall	9		Synoptic dry mode	9	
General description	7		Synoptic liquid mode	8	
General principle	8		Technical characteristics	104	
Graphics	69		Time acquisition	79	
Guarantee	5		Time selection	79	
Help	22		Tools	21	
Histogram	83		Tools	77	
Histogram	109		Type of representation	80	
Icons	20	22	Ultrasound transducer	8	11
In number	107		Ultrasound transducer	96	
In volume	108		Ultrasound transducer	8	
Indicator	11		Ultrasound transducer	14	
Information displayed in individual mode	67		Unitarian	67	81
Information displayed in superimposed mode	69		Unpacking	9	
Inlet	12		Use	35	
Inlet connector	12		Use - liquid mode	35	
inputting the sample	45		Use - overviews	29	
inputting the sample	58		User	68	
Installation	9		User levels	87	
Internal parts	13		User name	19	31
IQ	23		Vacuum cleaner	12	
ISO 13320	1		Vacuum cleaner	30	
ISO 9001	1		Validity test	83	

Language of display	78		Venturi	9	13
Laser	2		Venturi	94	
Laser	3		Venturi cleaning	94	
Laser 1	8	9	Vibrating bowl	9	11
Laser 3	8	9	Vibrating bowl	13	
Laser diffraction theory	106		Vibrator	9	13
Laser diodes	13		Vibrator	15	
Laser N 1	13		Video camera	8	9
Laser N 2	13		Video camera	12	
Laser N 3	13		View last measurement	79	
Laser power	39		View results	79	
Laser safety certificate	1		View results after measurement:	79	
Launching	19	31	Visible / hide	79	
Left inside	14		Vocabulary	106	
Level	19	31	Voltages indicators	14	
Level cells	16		Water	10	
Liquid	27		Wavelength	104	
Liquid	109		window at end of measurement	47	
Liquid circulation pipe	8		Windows	21	
Liquid dispersal	12		With log normal	107	

